

 
Gasket Replacement Instructions

Part# 726704



Please use the following instructions to replace your gasket.

Parts List

1. Header Gasket

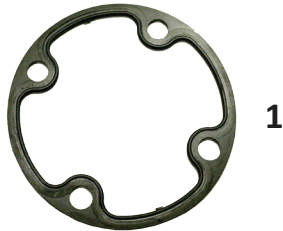

- 1 Loosen the four screws on the Header with a 5mm Allen wrench. Remove Header and remove old gasket from the piston head plate. **Make sure to clean off any residue of older gasket and dirt.**

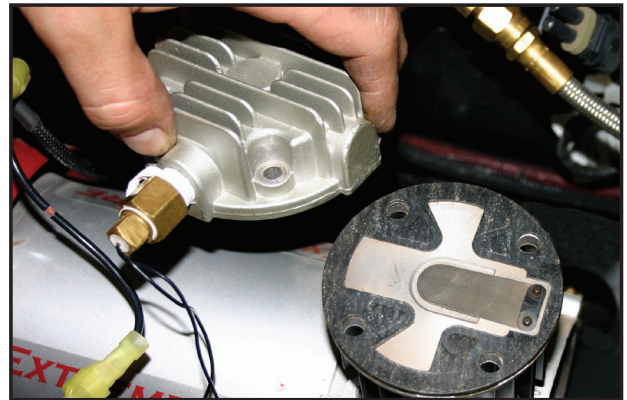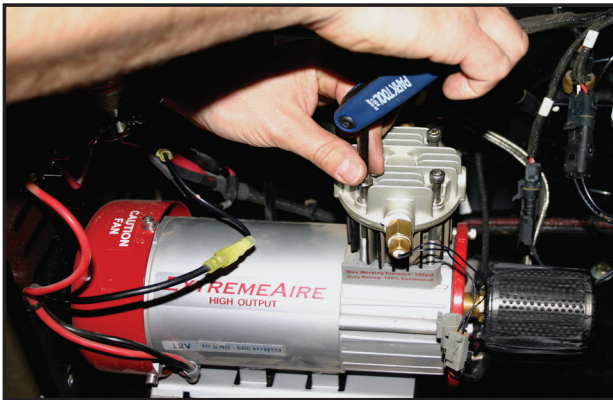

- 2 **BEFORE INSTALLING GASKET, MAKE SURE ALL RESIDUE IS CLEANED FROM HEAD VALVE PLATE.** Place header gasket on header valve plate lining up with the four screw holes. Replace the header top and tighten the four screws in a basic cross pattern. **Do not overtighten.** Reconnect any wires or plugs that you might have undone during this process.

