

Level Sensor Install Instructions

Old Sensor

New Sensor



1. The existing level sensor must be removed. Remove the two screws holding the level sensor in place. From the inside of the seed cover push the level sensor out of the seed cover.



2. Insert level sensor retention rib into corresponding slot in seed cover. Rotate sensor into position and align screw boss holes.



3. Starting with the LEFT screw, tighten screws to seat + $\frac{1}{4}$ turn. DO NOT OVERTIGHTEN. Check inside seed cover to ensure seed flow down the entrance chute. Seed pool floor, in disk rotation direction, should always go from a higher surface to a recessed surface.