



Monosem NG +3 and NG +4 Load Cell Install


 Precision Planting®

Monosem NG +3 and NG +4 Load Cell Install

Step 1: Remove the existing cotter pin and depth handle pin from the row unit. These are indicated by the arrow to the right.



Step 2: Slide, from left, the (712003) Load Cell into the hole where the original pin was removed. Align the bracket so that the hole at the back of the bracket lines up with the hole just above the pivot arms for the gauge wheels. Use the picture to the right for reference.

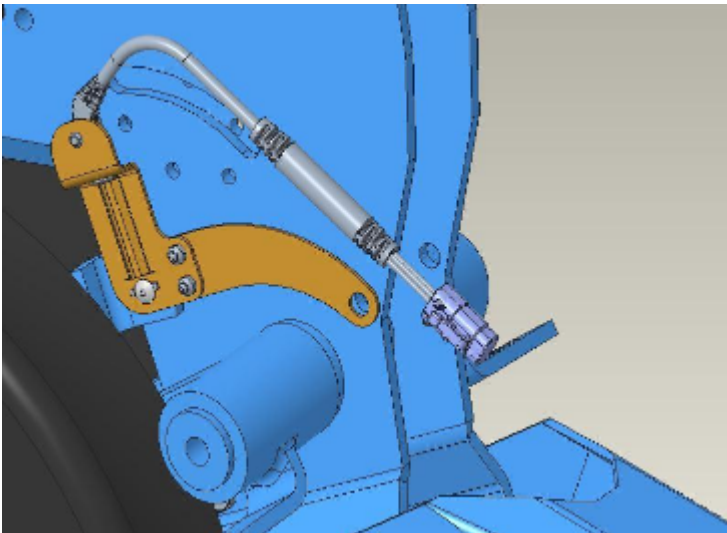

Step 3: Install the provided snap ring on the end of the load cell pin. Then install the nut and bolt through the hole at the back of the load cell bracket. Use a washer between the bolt head and row unit and between the nut and row unit.

Step 4: Route the Load Pin harness behind the meter, under the rubber boot, and then push it down between the seed tube and the right side of the shank, so it comes to the front of the shank with the seed tube harness, as seen below. You can connect the load pin harness to the SRM at this point.

