


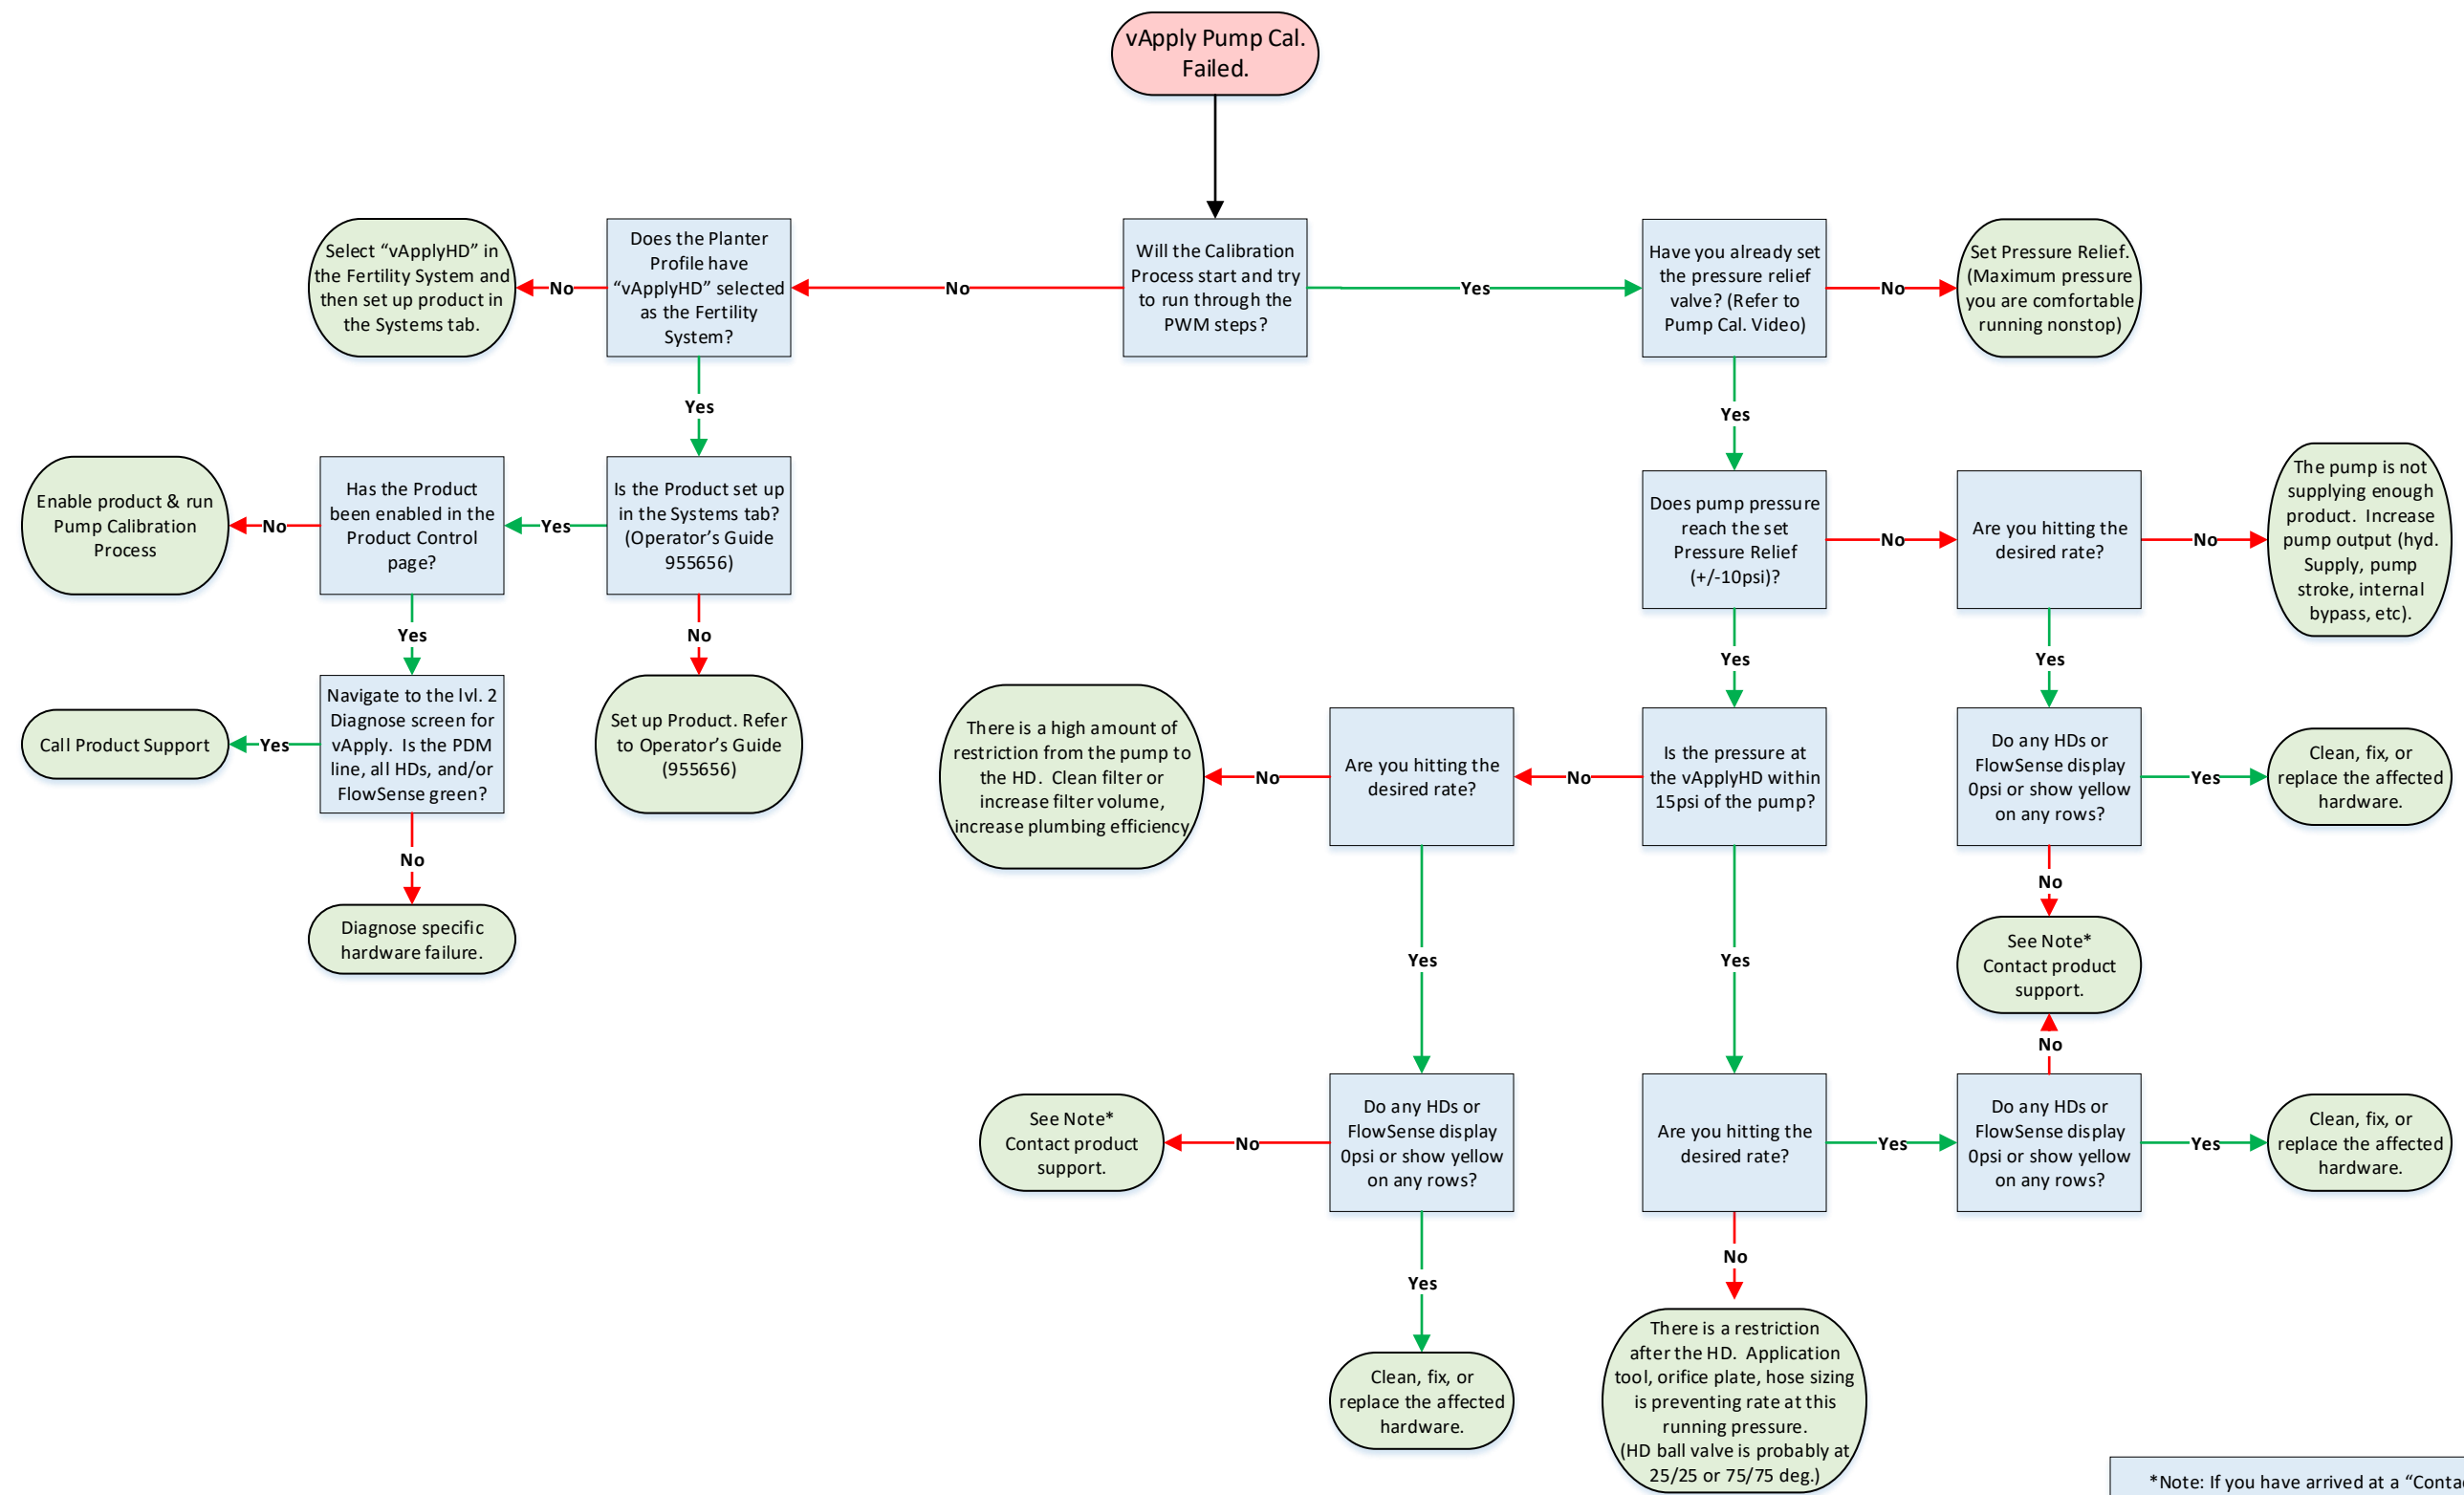

*Note: If you have arrived at a "Contact Product Support" bubble, check the Advanced Settings first.

Setup>Systems>vApplyHD>Product Setup>Adv. Settings. These settings should stay at their default values unless instructed by someone in Product Support.

Sensor Type = Precision Planting

Pressure Max. = Whatever the user entered during setup. Pressure greater than this number will fail a pump cal. And/or create an alarm when planting.

Min/Max Rate (or Gal/min) = No Limit for both

Pump PWM Frequency = 150hz (or as indicated on specific motor/pump)

Manual PWM = set between 0 and 100

Min PWM % = 10% for Electric 30% for Hydraulic

Max PWM % = 95% for both Electric and Hydraulic