

Row Cleaner Control: Manual vs Gen3 Controller

Manual Controller	Gen3 Controller	Possible Scenarios
Leaking air in cab on back of controller	Module venting Non-stop	Cylinder bypassing air between lift & down OR lift/down supply flipped, OR input/output lines flipped
Leaking even when output of controller is plugged, doesn't stop venting when knob is at center	Module venting nonstop even when output of controller is plugged	Failed controller
Compressor always running, or needing to over-adjust controls	Can't build pressure popup, compressor always running	Leaking air line or cylinder
Unable to lift/needling to over-adjust controls, compressor keeps running even when output of compressor is plugged	Can't build pressure popup, compressor keeps running even when output of compressor is plugged	Bad compressor
Occasional air venting in cab, especially after making knob adjustment	Occasional venting- will be more frequent when changes are made often	Normal Operation