

Seed Cover Baffle Installation

Existing baffle to be removed



New replacement baffle




1. Remove retention screw holding the baffle in place.




2. Lower the baffle to the lowest setting. This should be setting 1 on the back side of the seed cover. With the singulator removed, apply pressure up on the singulator spring. This will allow clearance for the top of the baffle.



3. Once the baffle is clear of the singulator spring pull the baffle out of the seed cover.

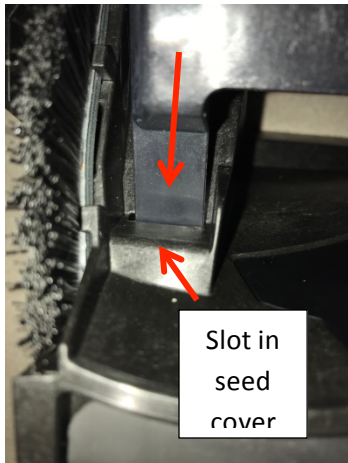

5. Guide bottom of baffle through slot in seed cover.

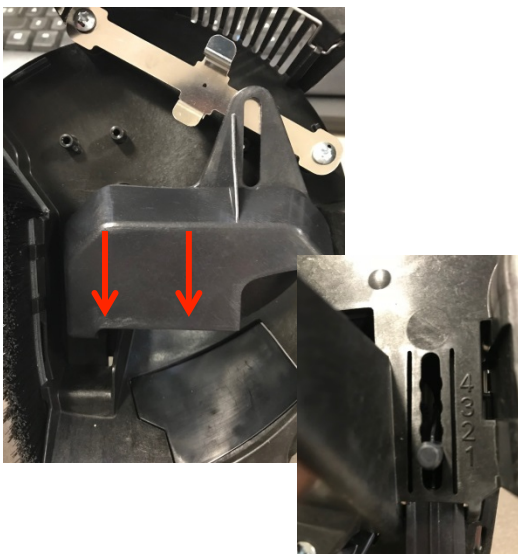

4. Push the baffle in place so it rests on the singulator spring. Once it is against the singulator spring slide the baffle down so it is in the number 1 setting.



7. Apply up pressure to the singulator spring to allow the baffle clearance.



6. Guide upper baffle slot over boss in seed cover. Insert retention screw and tighten until seat +1/8 turn.