


## **Precision Planting Seed Tube Guard Installation**

### **John Deere XP and ME5**

This guide is intended for use when installing the Seed Tube Guard 753065 included in kit 753070 onto conventional—only seed tubes in John Deere XP and ME5 row units.

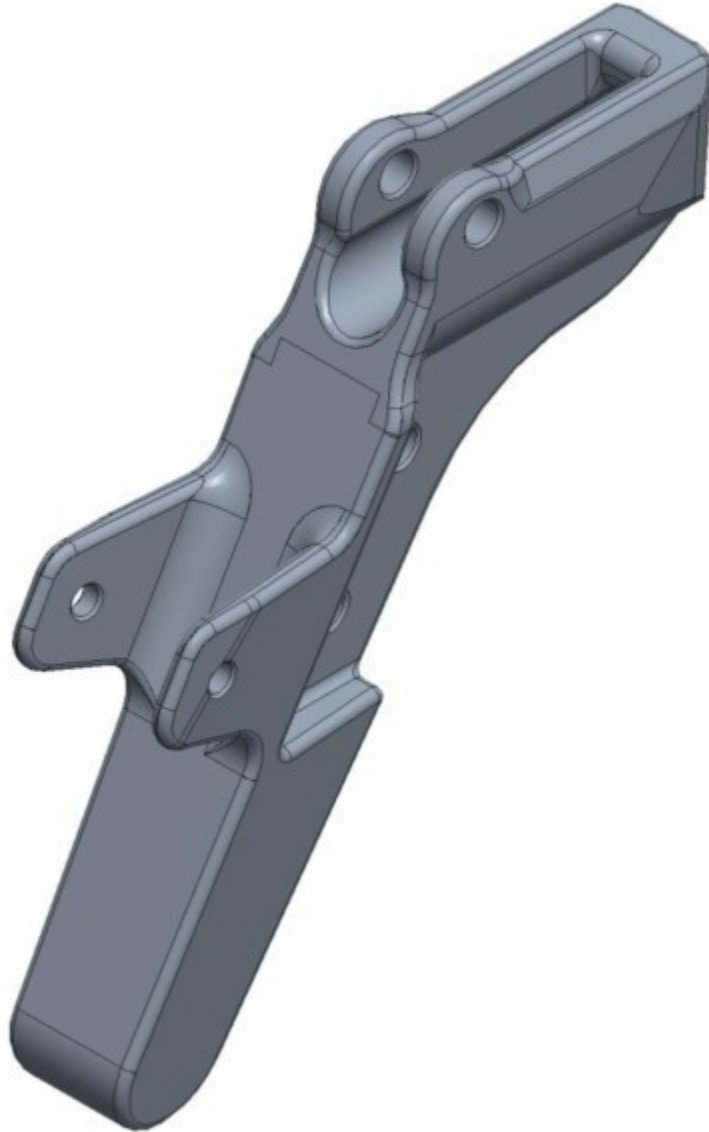

## Installation Procedure

### Step 1:

Remove the gauge wheel arms and opener disks from the row unit.

### Step 2:

Slide the Seed Tube Guard 753065 into place and secure with the supplied screw and nut.

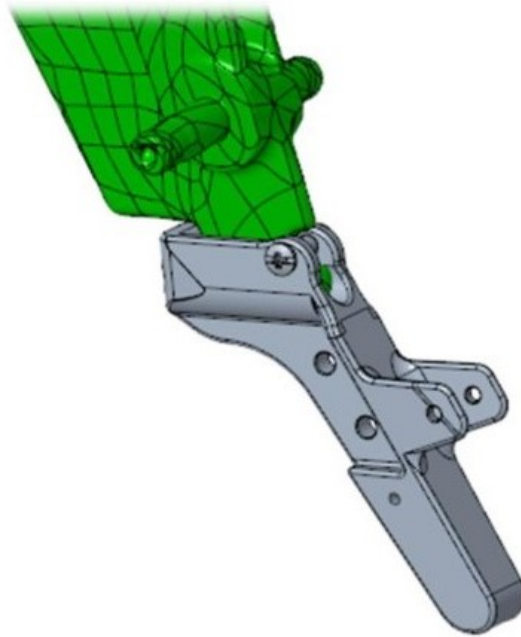


Figure 1.

753065 Seed Tube Guard Installation

**Note: Replace the Precision Planting Seed Tube Guard when it measures less than 3/4" across at the bottom (as indicated below)**

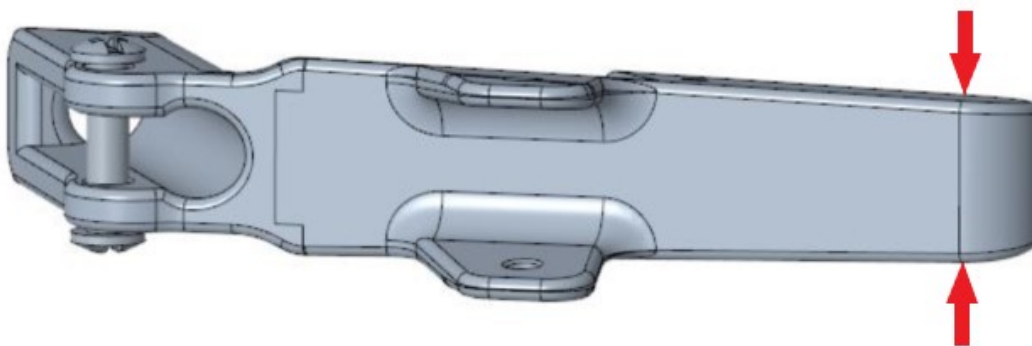


Figure 2.

Used Seed Tube Guard wear point measurement location