


Unlock the singulator before planting corn

The singulator is locked in the lowered position for shipping. Be sure to unlock the singulator from the spring clip before installation. The singulator in this photo is locked. The spring should be behind the rail, not on top of the rail as seen here.

955194

Unlocked for corn

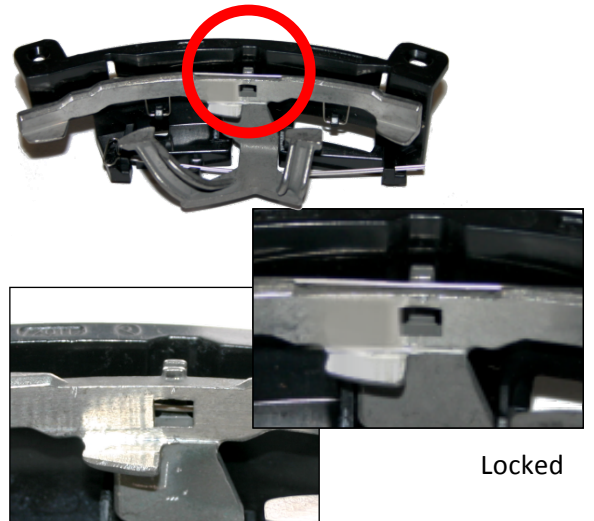


Locked

Unlock the singulator before planting corn

The singulator is locked in the lowered position for shipping. Be sure to unlock the singulator from the spring clip before installation. The singulator in this photo is locked. The spring should be behind the rail, not on top of the rail as seen here.

955194

Unlocked for corn

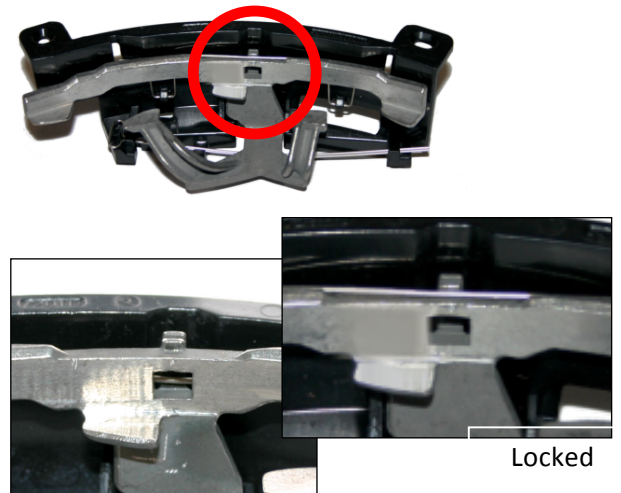


Locked

Unlock the singulator before planting corn

The singulator is locked in the lowered position for shipping. Be sure to unlock the singulator from the spring clip before installation. The singulator in this photo is locked. The spring should be behind the rail, not on top of the rail as seen here.

955194

Unlocked for corn

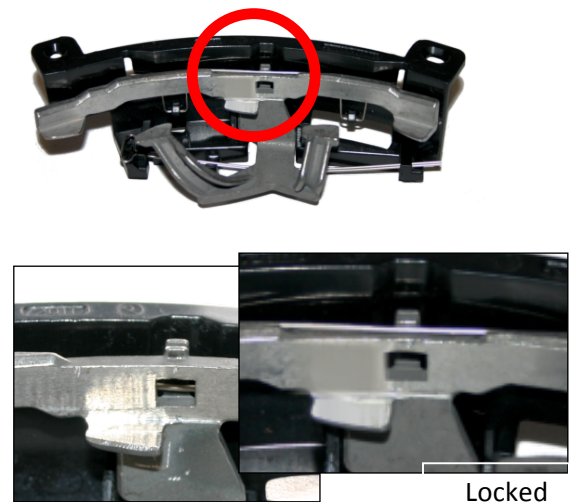

Locked