

mSet™


1.6Bu Overfill Prevention Kit

Precision Planting®

1.6Bu Overfill Prevention Kit


Step 1:

Position the template around the screw as shown. Use the template to mark the two hole locations. Remove the template and drill two holes using a 5/16" drill bit.

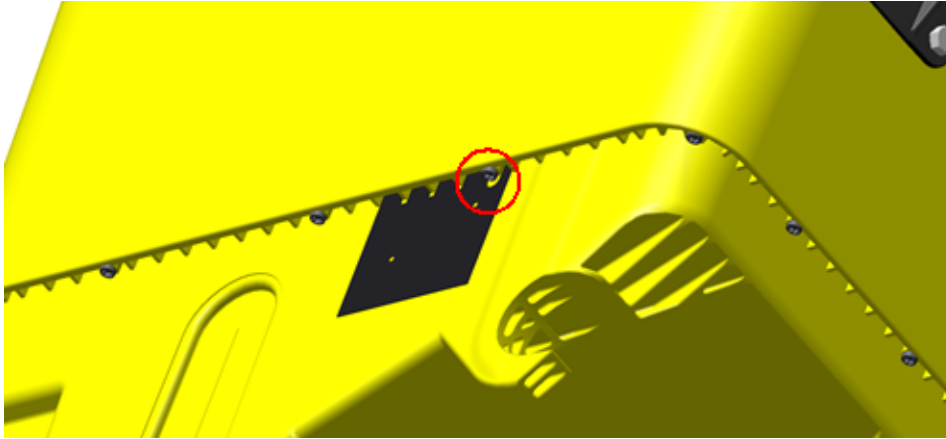


Step 2:

With the holes drilled, position the baffle to align with the drilled holes.

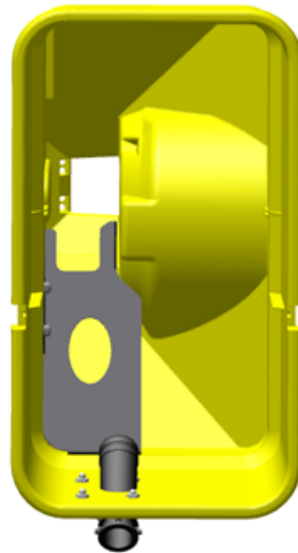

Step 3:

Using the two bolts provided in the hardware kit, secure the baffle in place.

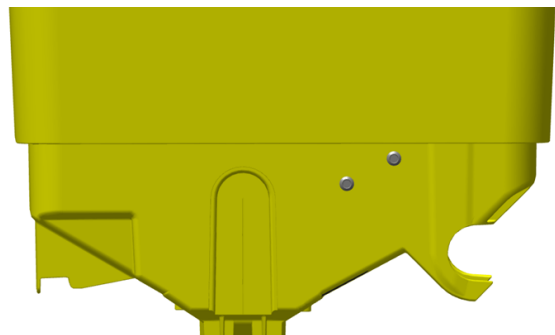

Step 4:

Install the snorkel onto the inlet and ensure the bottom of the snorkel is protruding through to the underside of the baffle. Using the provided hose clamp, secure the snorkel onto the inlet.

