

mSet™


1.9Bu Overfill Prevention Kit

Precision Planting®

1.9Bu Overfill Prevention Kit


Step 1:

Position the template around the screw as shown. Use the template to mark the two hole locations. Remove the template and drill two holes using a 5/16" drill bit.

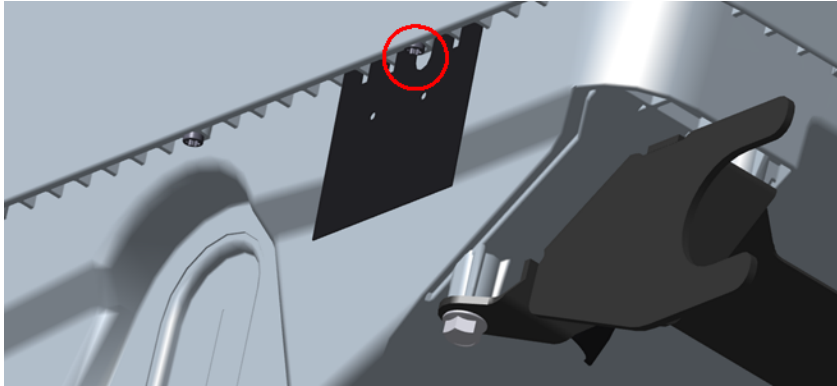


Step 2:

With the holes drilled, position the baffle to align with the drilled holes.

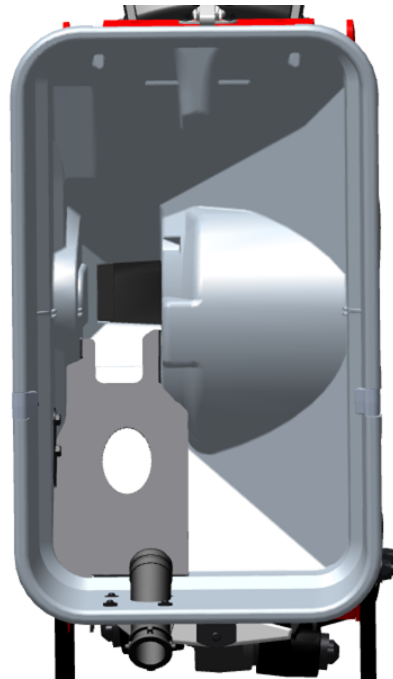

Step 3:

Using the two bolts provided in the hardware kit, secure the baffle in place.

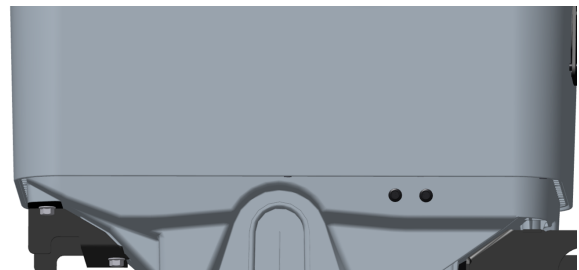

Step 4:

Install the snorkel onto the inlet and ensure the bottom of the snorkel is protruding through to the underside of the baffle.

