


FurrowJet Body Panel Update for SmartFirmer 141173

FurrowJets shipped prior to January 1st, 2020 may need to update the body panel in order to install Mini SmartFirmer. FurrowJets shipped after that date will already have the updated body panel and will not need to be updated


Part Number	Description
141170	Body Panel
141172	Swivel Bracket Assembly

1. Remove FurrowJet Body Assembly from row unit.

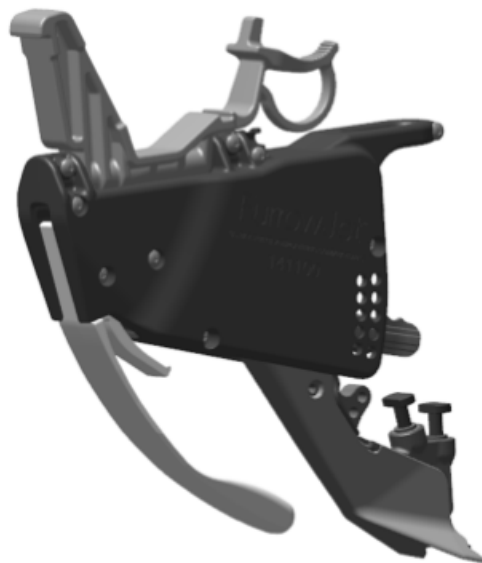

a. It is best practice to find a clean area on a workbench. Small pieces will be removed and installed, this will help ensure parts are not misplaced.


2. Remove screws located in top holes of FurrowJet Assembly.

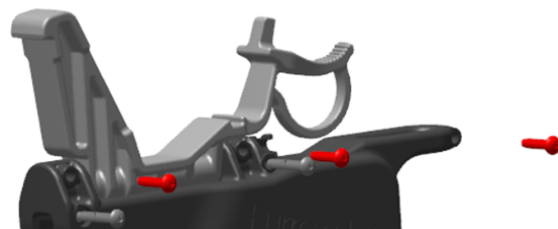


a. Note: There are two lengths of screws.

b. The 3 shorter screws are depicted in red remove these first and keep separate from other screws.

3. Remove other screws (6) (Grey).

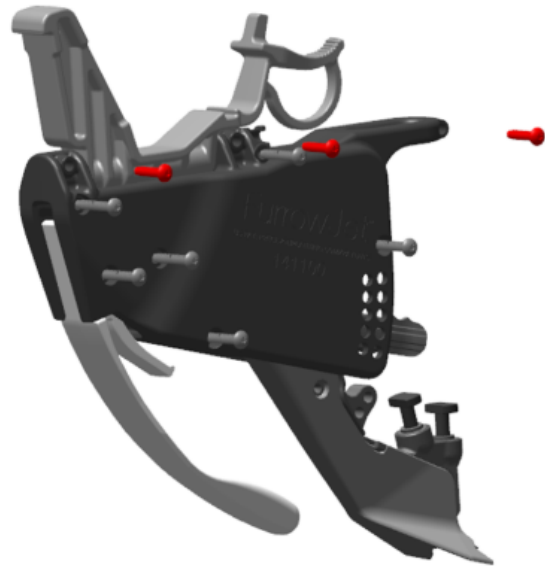


4. Remove Keeton Mini-Firmer Tail.

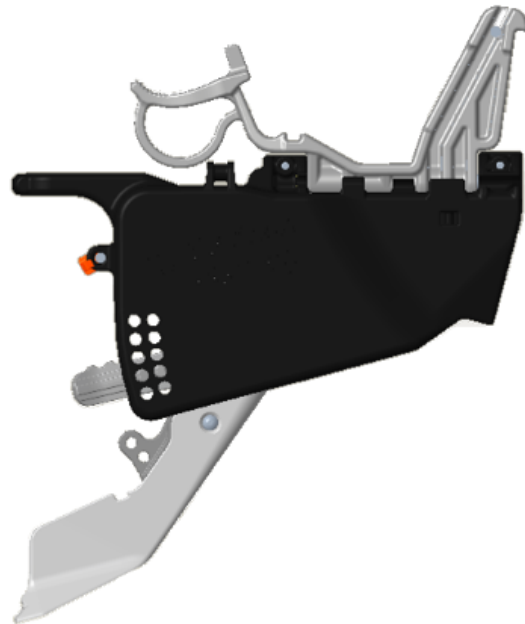


5. Separate two halves of FurrowJet Body Assembly with the Left half of the housing laying flat on table top surface to ensure components located inside of the body do not fall out. The right half of the housing will be replaced by 141170, and the swivel bracket assembly (top) will be replaced by 141172.

6. Remove swivel bracket assembly, and replace with new swivel bracket assembly 141172.

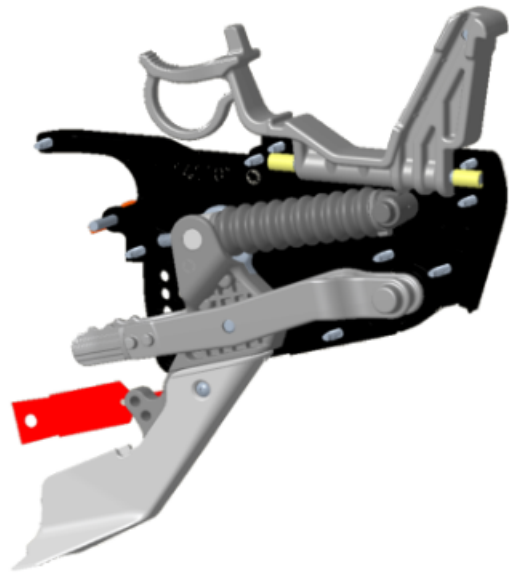

7. Install replacement FurrowJet housing assembly (right hand side) 141170.

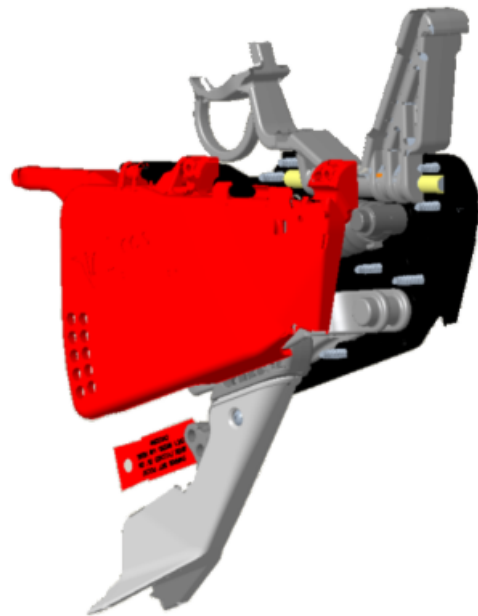

8. Install replacement body assembly 141170.

Important: Do not over tighten screws, the body assembly is plastic and over tightening can strip screw hole.

