

Conduit Tube Installation

General Installation Notes


A rotary tool with a small abrasive cut-off wheel is recommended for cutting the conduit.

A length of about 12" is enough to protect the tubing from the top of the swingarm to where it attaches to the Conceal Bracket.



Step 1:

Cut a notch lengthwise in the conduit at the 12" mark. The cut should be a couple centimeters long, or a minimum of 2 corrugations.

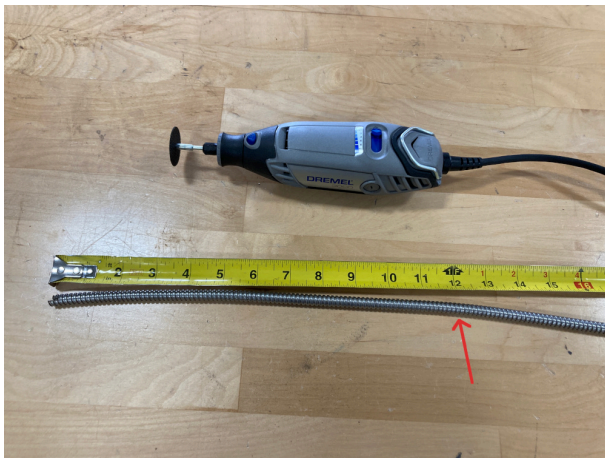

Step 2:

The conduit should now unthread itself and separate at the cut.

**Step 3:**

Use a file or deburring tool to clean up the end of the conduit, so there are no sharp edges.

**Step 4:**

Install the conduit on the liquid line. This must be done after the line is installed and before the Conceal spring is installed. Push the conduit down until you can see a bit of it showing in the liquid tube passage.

**Step 5:**

Use a zip tie to secure the conduit to the Conceal mounting bracket.