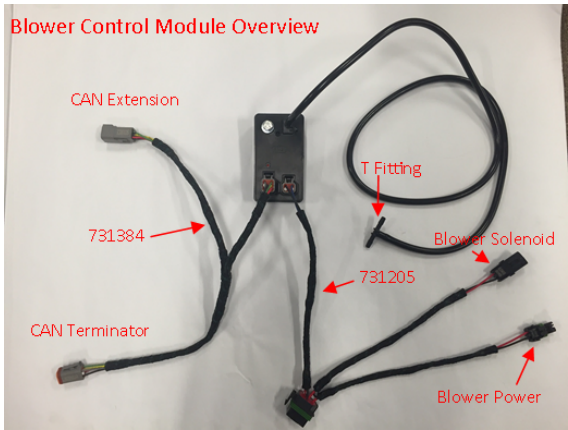


mSet™ vSet® Select

Blower Control Finish Kit 731391

Precision Planting®

Blower Control Finish Kit 731391

Parts List			
QTY	Part Number	Part Description	
1	731121	Module	
1	731205	Control Harness	
1	731384	6 Pin Y Harness	
1	731402	1.6 Template	
1	729081	CAN Terminator	
1	729202	6 Pin CAN Extension	
1	310152	Tee Fitting	
1	63126	Cable Tie	

Step 1:

Locate the CCS blower motor and unplug the blower solenoid.




Step 2:

Y the 731205 Control Harness into the blower solenoid that you disconnected in step 1. The CCS Blower Solenoid will have either 2-pin weather pack connectors or 2-pin Deutsch connectors. Use the appropriate connectors on the 731205. The unused set of 2-pin connectors should remain capped with the included caps to protect them from debris and moisture. Do not plug the unused connections into each other. Always cap them.



Step 3:

Plug the 4 pin plug on the 731205 control harness into the Blower Control Module. Next, plug the 6 pin Y harness (731384) into the Blower Control Module. Plug the 6 pin CAN extension (729202) into the 6 pin receptacle on the Y harness. Route the 6 pin CAN extension to the PDM and plug it into the 6 pin plug coming out of the PDM. This plug will be labeled “Seed Repeater.” Install the 6 Pin CAN Terminator on the remaining plug.

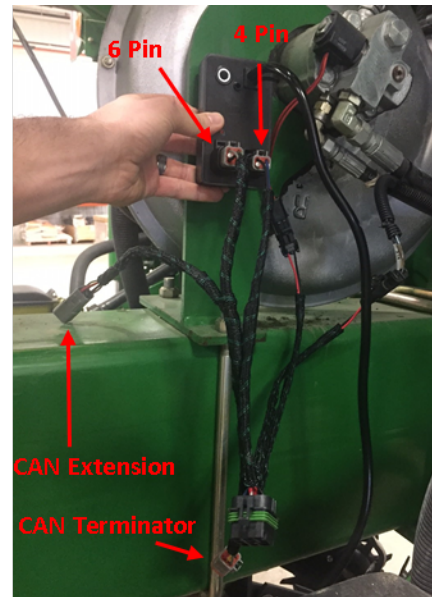**Step 4:**

Mount the Blower Control Module where there will be no interference.

**Step 5:**

Locate the existing 1/4" air line going from the radial CCS pressure dial to the tap in the CCS manifold. At a convenient location, cut the 1/4" air line and insert the 1/4" T-fitting you received in the kit. Route the 1/4" air line from the Blower Control Module to the T-fitting.

