

Canola Wiper Kit—ME5 and Standard eSet

Kit Part # 720381

Parts List

- 720068 6-32 Screws (Qty. 2)
- 720306 Seed Extractor (Qty. 1)
- 720383 ME5 Wiper (Qty. 1)
- 720281 Seed Blocker Tube (Qty. 1)
- 720382 Foam Tape

Use this kit with Precision Planting's ME5 or Standard eSet kit and Canola Disk for planting canola.

Step 1

Insert the wiper so that it is flat and parallel with the brush holder.

Step 2

Use the holes in the wiper to drill two 1/8" holes through the liner and meter housing.

Step 3

Use two supplied 6-32 pan head screws to attach the wiper to the liner and housing.

See Figures A and B for Completed Installation.

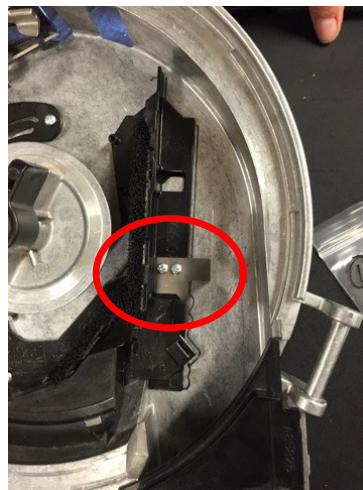


Figure A



Figure B


Precision
Planting®

Step 4

Insert the brush extractor and insert the tube over the seed deflector (paper clip).


Step 5

Insert the disk into the meter and ensure that the wiper is aligned to the disk as shown at right. If the wiper is not oriented correctly, remove the disk and bend the wiper slightly so that it sits on the disk as shown.

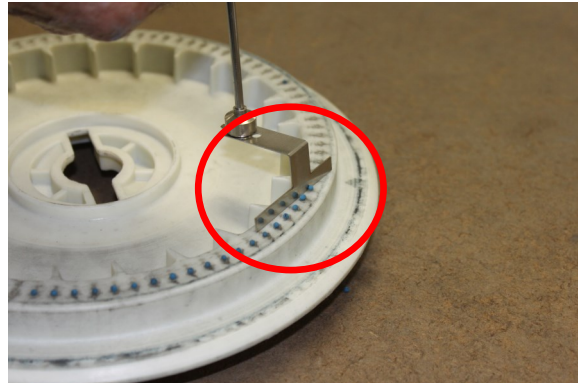

Step 6

Run the meter on a MeterMax Ultra test stand. If the test reveals a leak between the disk and housing, use the provided foam tape on the inside lower radius of the housing. When installing, overlap the edge of the housing by 1/32" so that the disk can rub and fill the void.

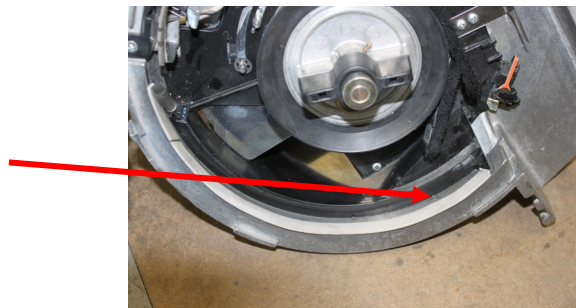

Note on Singulators

A specialty singulators is recommended for use with this product. If you choose to use the existing singulator, it should be tested with a check gage to ensure that the correct portion of the holes in the disk are covered.