



Single Inlet Install

Step 1: Place the template (731402), located in the CIH Template Kit (731435), on the front of the 1.6bu box. Slide the template all the way up into the lip of the box.

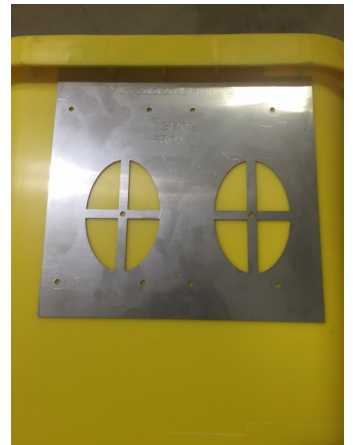

Step 2: Drill out the 5 holes on the right side of the template with a 1/8" drill bit. Shown on the right.

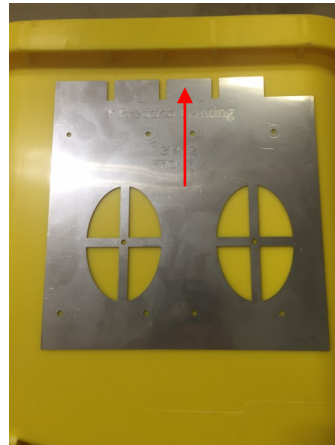

Step 3: Trace around the right oval in the template.



Step 4: Remove the template and use a 3/8" drill bit to drill out the four outer holes you previously drilled with an 1/8" drill bit.



Step 5: Use a 2" hole saw to cut out the center of the oval. Use the center 1/8" hole as a pilot for the hole saw.

Note: If you do not have a 2" hole saw you can use a jig saw to remove the oval.





Step 6: With the 2" hole removed, use a jigsaw to finish cutting the oval out. Once the oval is removed, use a knife or file to clean off any shavings still left on the hole.



Step 7: Insert the inlet into the opening and fasten with the 4 nuts and 4 bolts included. Use a 13mm wrench to tighten the bolts.




Step 8: Once you have the inlet tightened in place, insert the snorkel onto the inlet on the inside of the front hopper. Be sure not to kink the snorkel when installed.

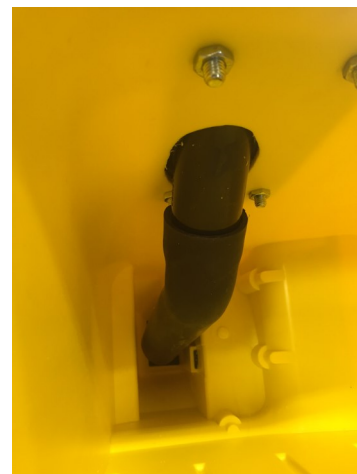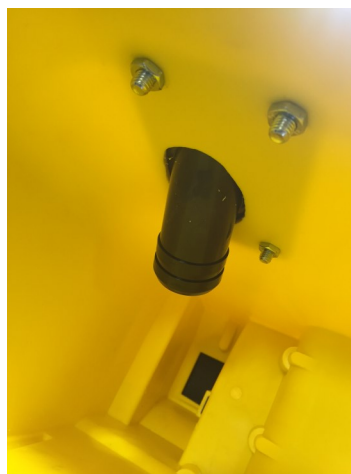

Dual Inlet Install

Step 9: Using the template, repeat the previous steps to cut out the second inlet hole.

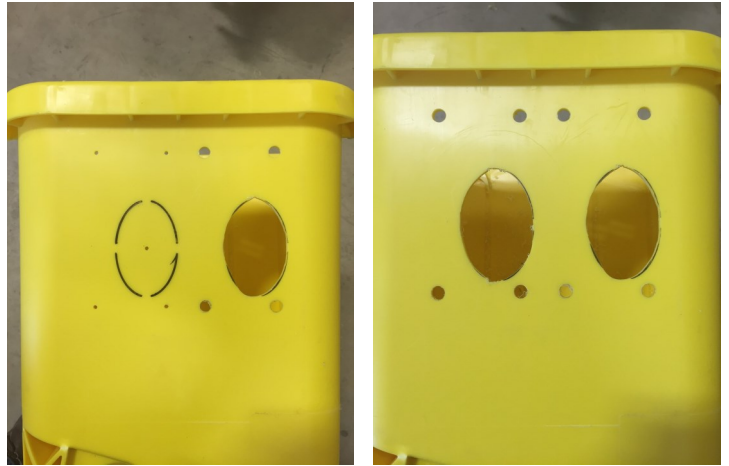

Step 10: With both holes completely cut out, install the two inlets side by side in the openings. Use a 13mm wrench to tighten the 8 bolts that are provided in the hardware kit.



Step 11: Insert the snorkel onto the inlet inside the front hopper of the 1.6bu box.



Step 12: Be sure to push the snorkel on until it is fully seated on the inlet barbs.



Step 13: This is the relative position the snorkel exit should be inside the hopper. Be sure the snorkel has no kinks which could cause restriction of seed flow.

