

Installation Instructions for CASE IH 12XX 1.9 Bu. Hopper SpeedTube Conversion Kit - 768645

Parts List

Part Number	Description	Quantity
768561	CASE IH 1.9 Bu. Hopper Front Bracket - SpeedTube	1
768562	CASE IH 1.9 Bu. Hopper Rear Bracket – SpeedTube	1

This kit allows the conversion of an existing vSet 2 1.9 Bu. Hopper to be compatible with the SpeedTube position in a CASE IH 12XX row unit.

1) Hopper Bracket Installation

- a) Remove the existing front and rear hopper mounts. Refer to figure 1.

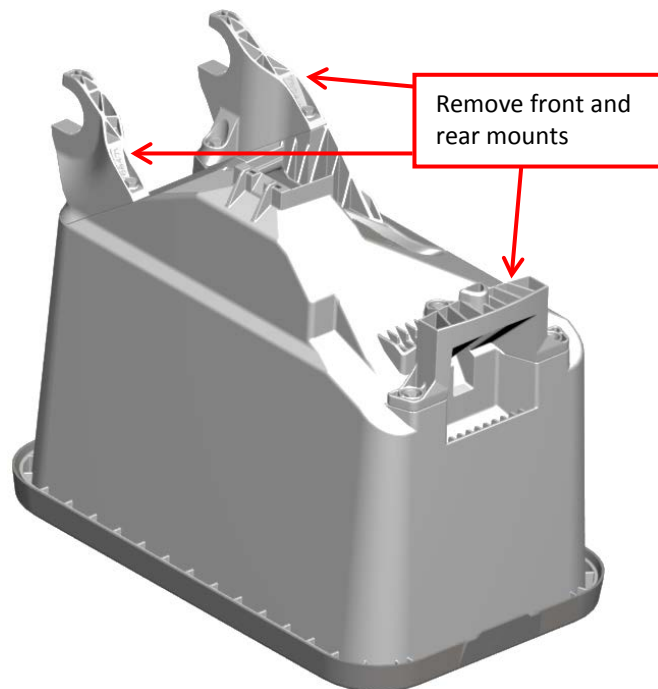


Figure 1 –Existing Hopper Mount Removal

- b) Locate the new front and rear hopper brackets. Refer to figure 2 on the following page.

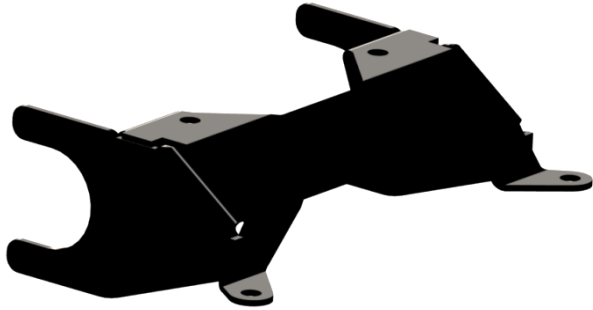


Figure 2a – Front Bracket

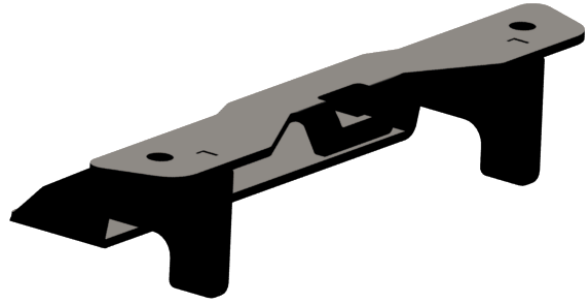


Figure 2b – Rear Bracket

- c) Install the front and rear brackets in their respective locations on the hopper using the existing hardware removed in step 1a. Do not over tighten. Refer to figure 3.

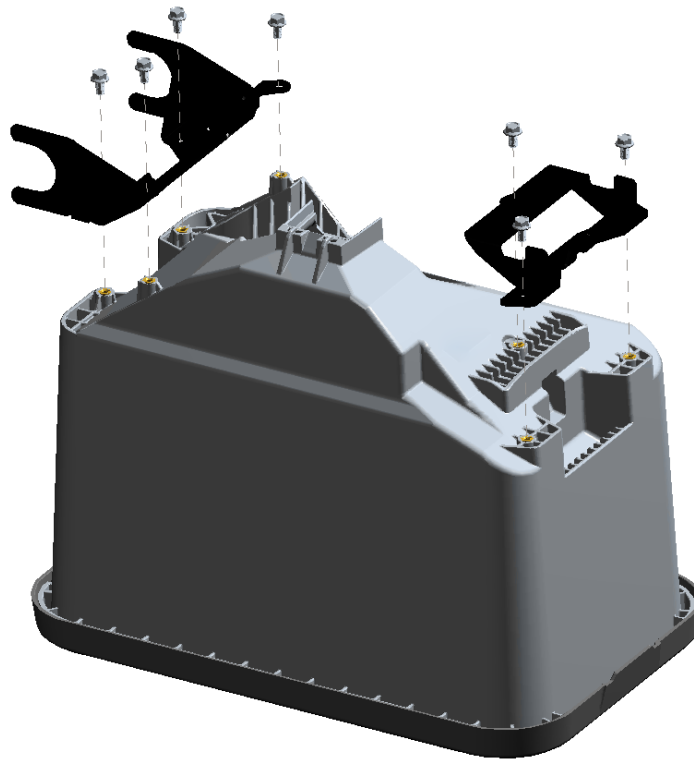


Figure 3 – SpeedTube Hopper Bracket Installation

- d) Mount the hopper on the row unit and secure with the rear hopper latch. Adjust the latch height as needed, but do not overtighten.
- e) Reconnect the vacuum hose to the meter.