


Part#: 726690 - CNH Lift Conversion

Planter Models:CNH 12XX series Planters
 To Convert From Existing Springs:.....CNH Pneumatic Air Springs
 Resulting Forces Controlled:.....Down & Lift
 With Conversion Kit:.....726690

EXISTING SPRINGS

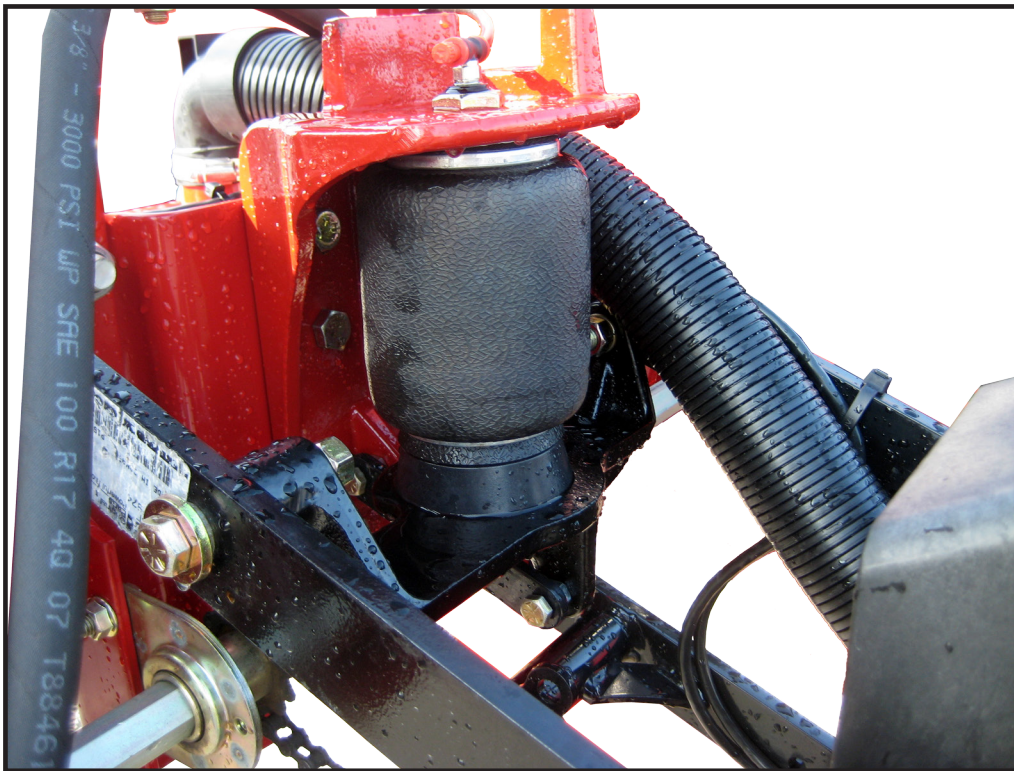

This conversion process applies to the 1200 family of planters with **Regular** (14") parallel arms. The examples shown below are diagrams for a planter with regular parallel arms. Some components shown here may not apply to your particular planter model. Special notes will be made throughout the following instructions to assist with most individual model needs. Images illustrating a completed row unit conversion are located at the end of these instructions.

Row Unit Conversion Instructions (Continued)

Part#: 726690 - CNH Lift Conversion

Conversion Kit Components

Item	QTY	Part Number	Part Name	Description
1	1	726101	Spring	Air Bag (Lift)
2	1	726672	Bracket	Air Spring Head Mount
3	1	726673	Bracket	Air Spring Base Mount
4	1	726699	Hardware Kit	

Quantities are given per row.

Hardware Pack Components

Item	QTY	Part Number	Part Name	Description
5	2	13005	Bolt	1/4" X 1" GRD5 Hex Bolt ZN
6	1	13105	Bolt	3/8" X 1" GRD5 Bolt ZN
7†	3	13206	Bolt	1/2" X 1.125 GRD5 Bolt ZN
8	2	13209	Bolt	1/2" X 1.5" GRD5 Bolt ZN
9	3	33078	Washer	1/4" SAE Flat ZN
10	2	33086	Washer	1/4" SAE Flat ZN
11	1	36214	Hex Jam Nut	5/8" Hex Nut ZN
12	1	36266	Hex Jam Nut	3/4" Hex Nut ZNCL
13†	2	37260	Hex Nut	1/4" Top Lock Hex Nut ZN
14	3	37268	Hex Nut	1/2" Top Lock Hex Nut ZN
15	1	726113	Tee	1/8" NPT X 1/8" PTC Tee
16†	2	726574	Bushing	1/4"ID X 1/2"OD X 0.23"L
17	1	726681	Link	Case 14" Parallel Arm Stabilizer
18	1	726689	Stud	Case Air Spring Base Connector
19	2	726691	Bushing	1/2"ID X 7/8"OD X 0.550"L
20	1	726698	Male Elbow	90 Deg 1/8"NPT X 1/4" PTC
21	1	726115	Tee	¼" PTC
22	1	726374	Adapter	1/8" Male X 1/8" Female

Quantities are given per row.

† Not used in this configuration.

Note: some components of the 726690 Hardware Kit may not be necessary in all cases. This is a universal hardware kit that is common to several assemblies.

Recommended tools (Not Provided):


Open end wrenches: 7/16", 9/16", 3/4", 15/16", 1-1/8" - or suitable crescent wrenches

Sockets (Deep Well recommended): 7/16", 9/16", 3/4", 15/16", 1-1/8"

Torque Wrench

Row Unit Conversion Instructions (Continued)

Part#: 726690 - CNH Lift Conversion

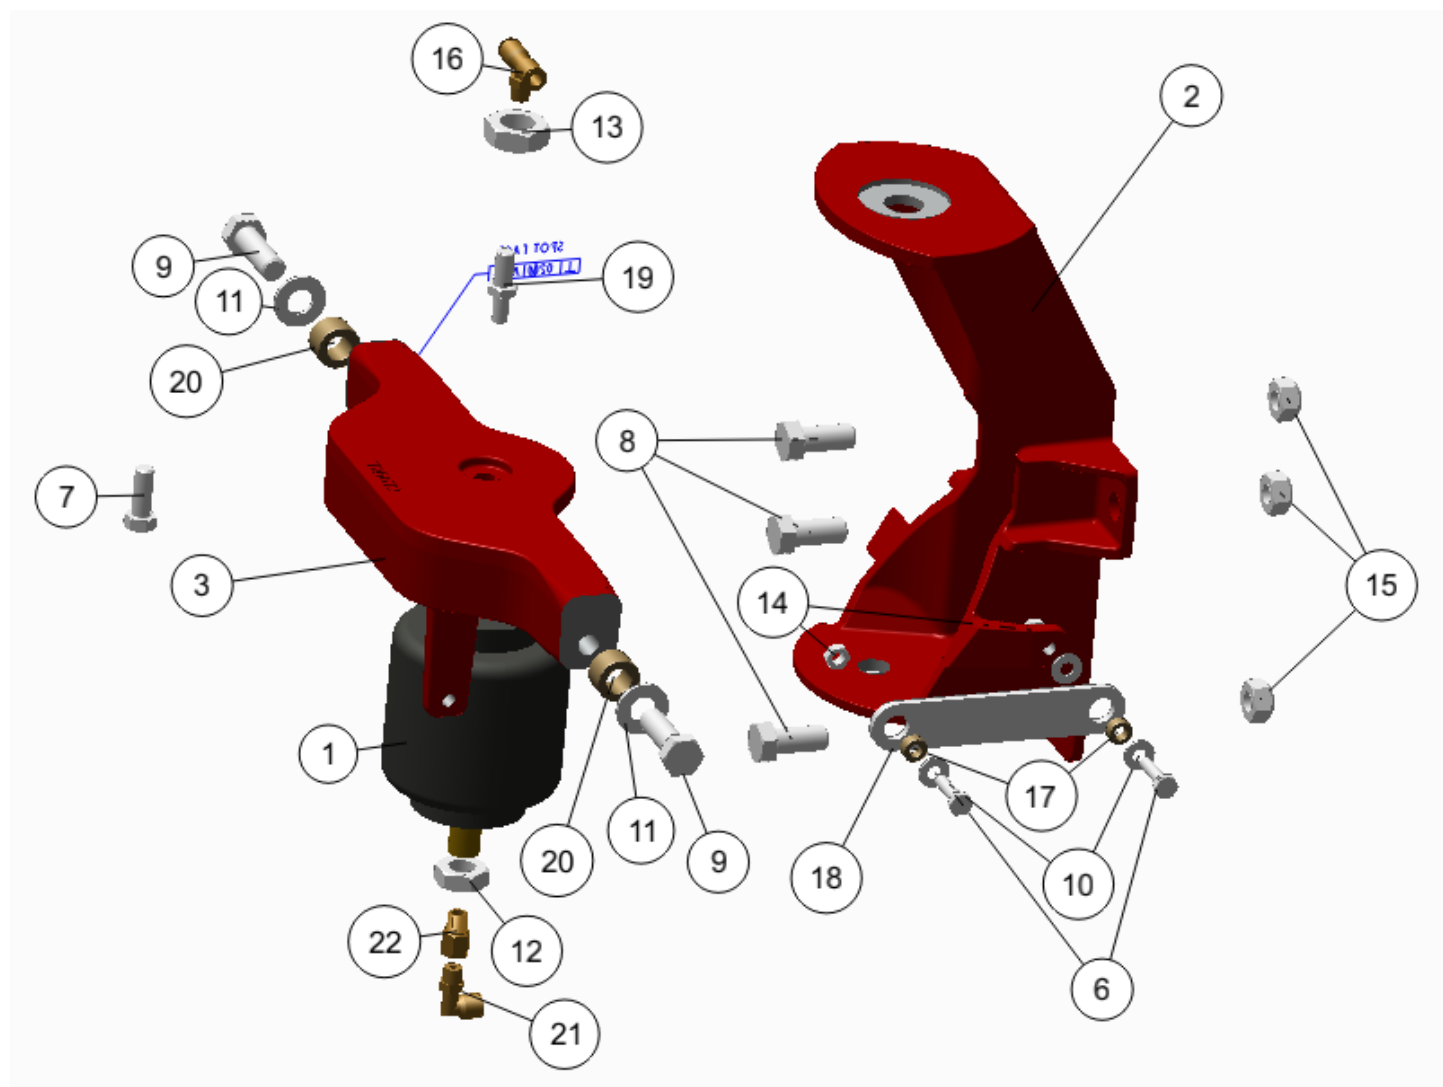

Row Unit Conversion Instructions (Continued)

Part#: 726690 - CNH Lift Conversion


Step 1:

Begin installation by removing tension from the existing spring system. Once the tension is removed, prepare for the conversion process by removing the existing spring system (refer to OEM owner's manual or your local representative for instructions on this process). Set pieces aside, save the CNH Air Spring.


Step 2:

Now that the row unit is ready to accept new components, begin by securing the Case Air Spring Head Mount (726672) to the 'W' plate on the planter frame using the 1/2" x 1.125" GRD 5 Bolts (13206). The wide holes are only used on Precision Planting's extension brackets.

Note: It may be necessary to shift the vacuum tube manifold to the left or right in order to clear the Head Mount bracket with the vacuum hose.

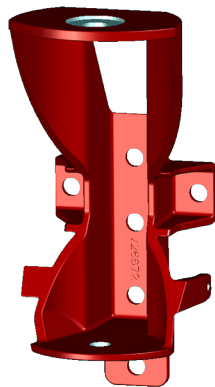


Case Air Spring Head Mount (726672)

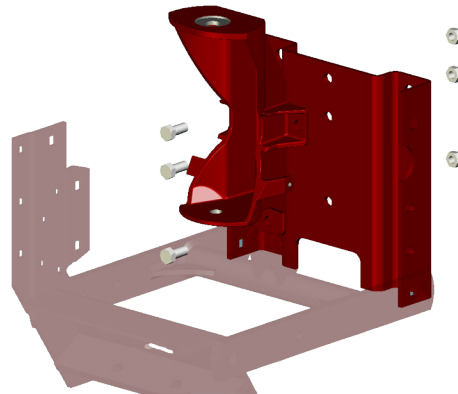

Case Air Spring Head Mount (726672)
and 1/2" X 1.125" GRD5 Bolts (13206)

Step 3:

Continue the conversion process by pre-assembling the Lift Air Spring (726101) and Case Down Air Spring (726679) to the Air Spring Base Mount (726679) using the Case Air Spring Base Connector Stud (726689). Holding the Base Mount bracket and Lift Air Spring thread the Connector Stud in the base of the Lift Air Spring as shown. Tighten to a torque of 4-5 ft-lbs. Next, thread the Case Down Air Spring onto the Connector Stud. Hand tighten as best as possible, but **DO NOT** use wrenches, pliers, or tools to tighten the spring any further. This may damage the spring and is unnecessary.

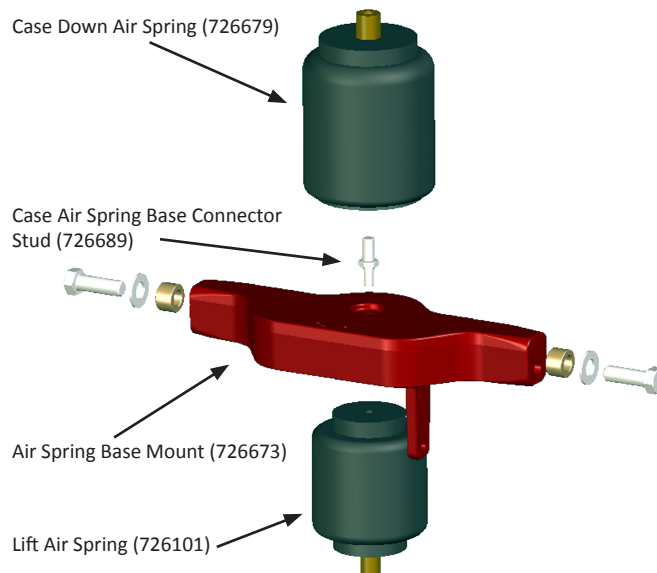


Row Unit Conversion Instructions (Continued)

Part#: 726690 - CNH Lift Conversion


Step 4:

Next, install the Air Spring Assembly into the Head Mount from Step 2. Angle and compress the Lift Air Spring to align the brass stud with the hole in the lower portion of the Head Mount. Once the Lift Air Spring is in place, repeat the process of compressing and angling the Case Down Air Spring to align with the hole in the upper portion of the Head Mount. It may be helpful to thread the 5/8" Hex Jam Nut (36214) onto the brass stud of the Lift Air Spring and finger tighten prior to placing the Down Air Spring. With the Air Spring Assembly installed in the Head Mount, securely fasten the Base Mount to the parallel arms using (2) – 1/2" x 1.5" GRD 5 Bolts ZN, (2) 1/2" SAE Flat Washers ZN, (2) – 1/2" ID x 7/8" OD x 0.550" L bushings. See image at right for placement. Once both Air Springs have been placed correctly, thread and tighten onto their respective studs. The 5/8" Hex Jam Nut (36214) for the Lift Air Spring and the 3/4" Hex Jam Nut (36266) for the Case Down Air Spring.

DO NOT OVERTIGHTEN

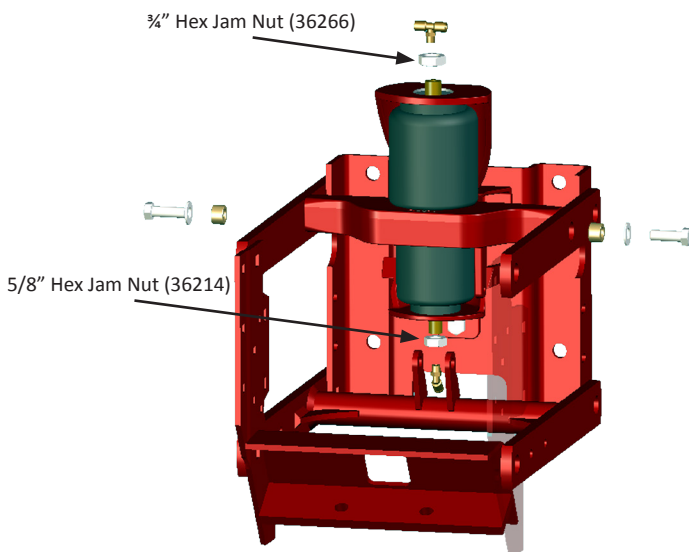

Note: Use image as base for next couple steps with specific insets.

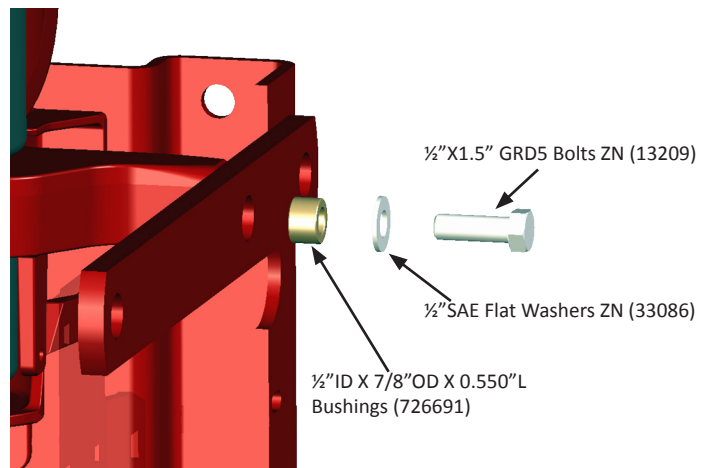

Row Unit Conversion Instructions (Continued)

Part#: 726690 - CNH Lift Conversion


Step 5:

Install the Case 14" Parallel Arm Stabilizer Link between the Air Spring Head Mount (726672) and the Air Spring Base Mount (726673). **See Img. A** Secure the Stabilizer Link using the supplied hardware:


- (2) – ¼" x 1" GRD 5 Bolt ZN (13005)
- (3) – ¼" SAE Flat Washers (33078)
- (2) – ¼" Top Lock Nut ZN (37260)
- (2) – ¼" ID x ½" OD x 0.23"L Bushings (726574)

Note: Only two washers are required for installation. A third washer is included and may be used to shim out the link if it is necessary to improve alignment (installed behind Stabilizer Link on Head Mount casting).


Note Location/Placement of 3rd Washer

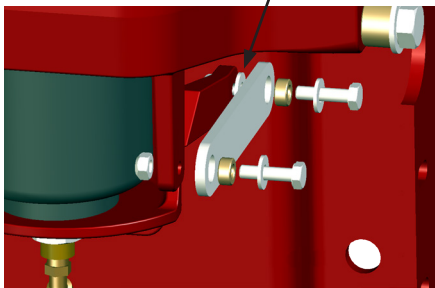

Img. A

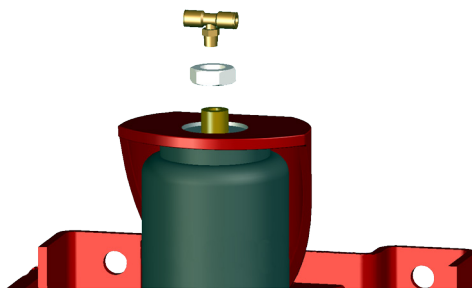

Img. B

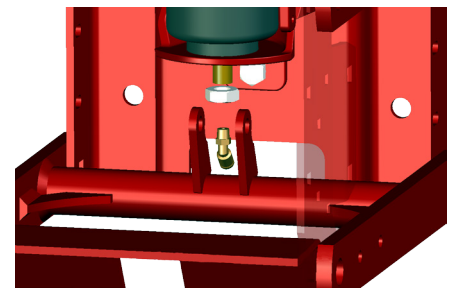

Img. C


Complete the installation by adding the fittings for the air lines for the down and lift circuits. Thread the 1/8" NPT x 1/4" PTC Tee (726113) into the top of the Case Down Air Spring. Tighten to approximately "finger tight + 1 turn". **See Img. B**

Thread the 45 degree 1/8" NPT x 1/4" PTC Male Elbow (726698) fitting into the brass stud on the Lift Air Spring. Tighten to "finger tight + 1 turn". **See Img. C.**


When installing 1/4" tubing, be sure that the 45 degree elbow faces forward to prevent damage to the fitting where it could collide with the parallel arm.

Note: These pneumatic fittings come with a thread sealant already installed. If it needs to be replaced because the fittings have been removed or re-installed multiple times, do so with suitable thread sealant and in the proper application.

Completed Row Unit Conversion

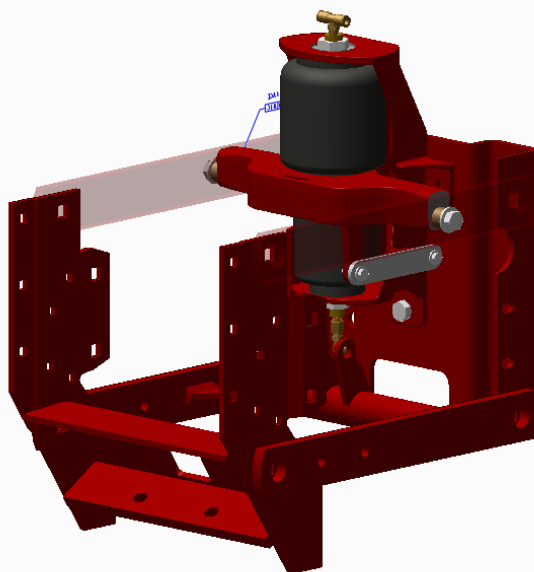

View A

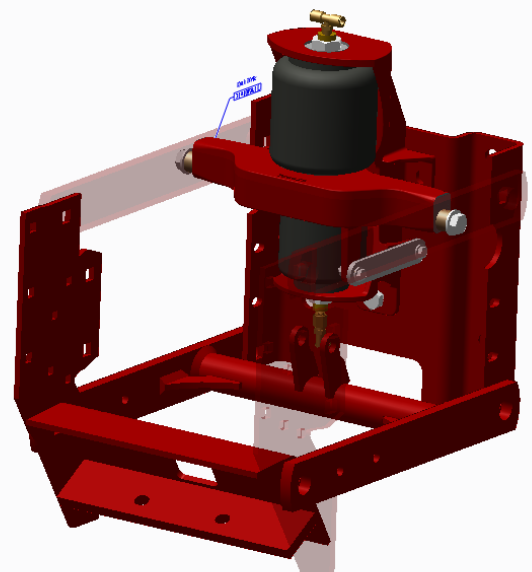

View B