

Lift Manifold Filter Nut Retention Kit


Parts List

Filter Nut Retention Kit — 729633		
Part Number	Description	Quantity
729634	Nut Retention Bracket	1
729635	Support Bracket	1
729636	Hardware Kit	1
Required Tools		
13mm Socket		
13mm Wrench		
7/16" Wrench (2)		

Table 1


Step 1:

Using a 13mm socket and wrench, remove the existing bolt and nut that came with the lift manifold mount bracket. The lift manifold should not need to be removed.

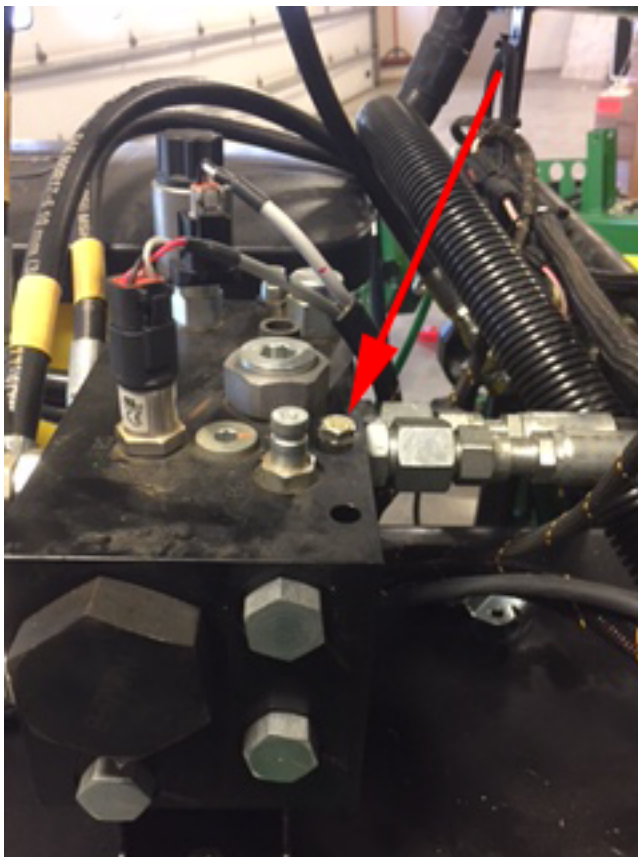


Step 2:

Align the support bracket so that the holes line up with the bolt holes of the lift manifold. The bracket should be above the retention nut and the two tabs on either side of the lift manifold. Reinsert the lift manifold mount bolt to hold the bracket in place. One bolt will be sufficient to hold the bracket.

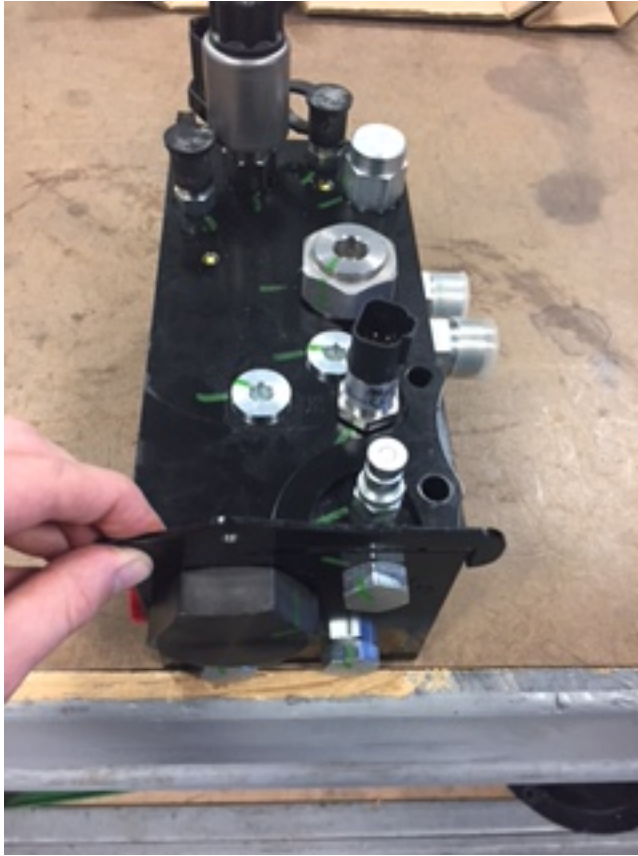**Step 3:**

Place the filter nut bracket over the filter nut and twist the bracket clockwise so it is firmly against the nut. This way the nut cannot back out. Make sure the slotted portion of the bracket aligns with the bolt hole on the support bracket.

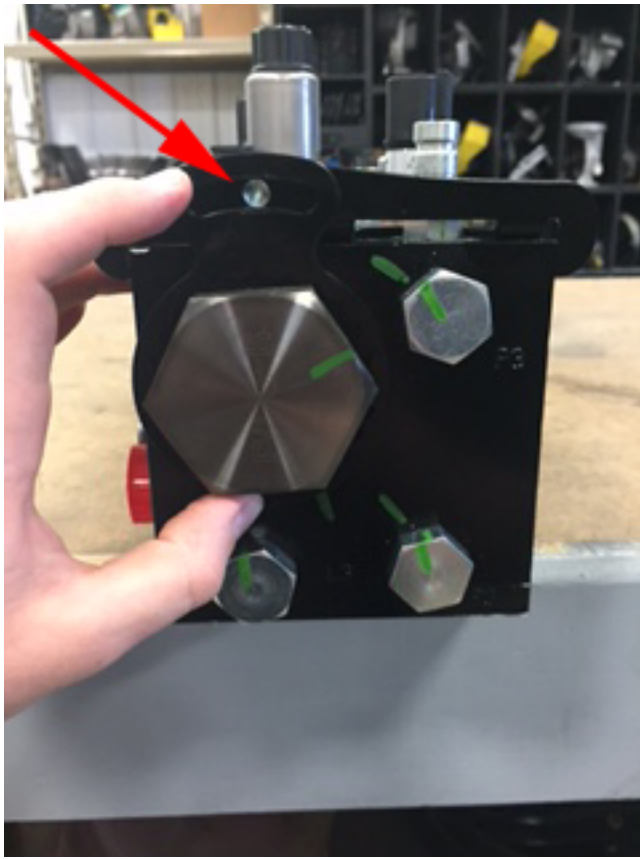

Step 4:

Insert the bolt through the holes in both brackets and tighten with two 7/16" wrenches.

