


DuraWear™

Lift Switch Kit 726800 (Long Parallel Arm) Installation Guide

This guide is intended for use when installing the **726800** lift switch kit for compatibility with Durawear Parallel Arms on Long Parallel Arm John Deere planters.

The larger profile of the 753058 parallel arm requires a different push button bracket than the 726260 kit. The 726800 is also compatible with OEM parallel arms and many other aftermarket designs.

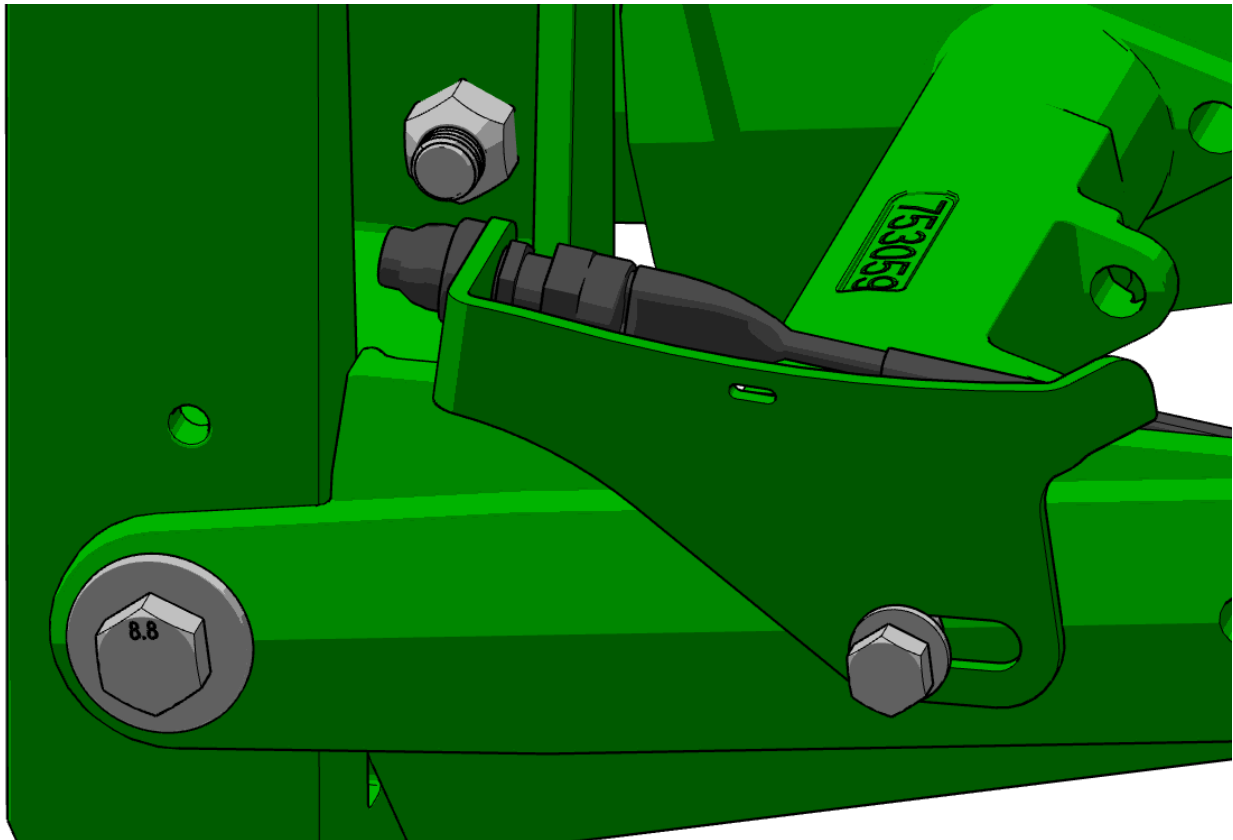

726800 Long Parallel Arm Installation Procedure

Step 1:

Attach the push button lift switch/harness (1) to the 726798 Push Button Bracket (2) as shown below.

Step 2:

Attach the Bracket and Lift Switch Assembly to the parallel arm using the supplied M12 Bolt, washer and top lock nut.

Step 3:

Slide the lift switch bracket forward or backward until the lift switch is *lightly* depressed by contacting the goal post when the row unit is **fully lifted**. The lift switch should “clock” off the top the parallel arm’s depth stop when properly placed (see area 3 below).

Note: Verify that the lift switch is only lightly depressed before continuing. If the button is depressed past the initial amount of pressure needed to acquire a “lifted” reading, there may be issues when planting as the row unit travels through its normal range of motion.

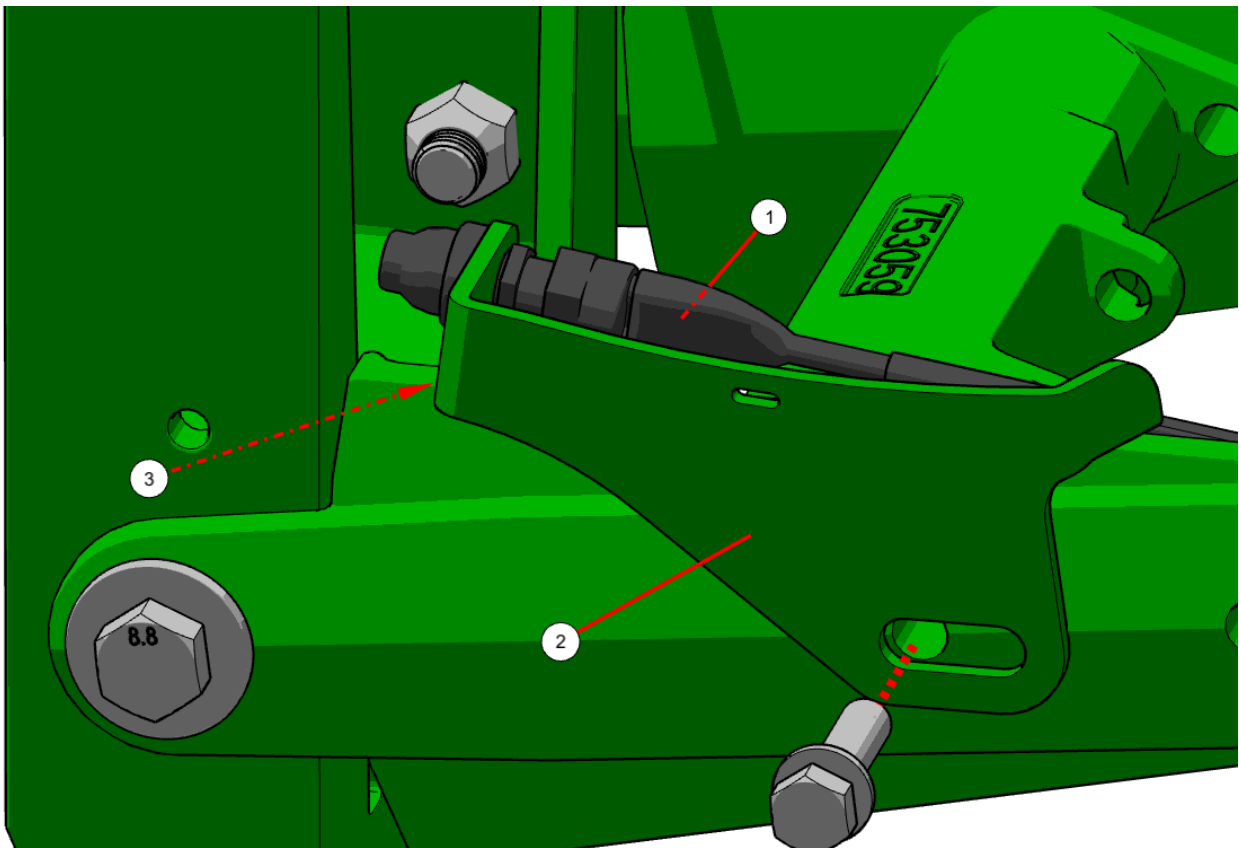


Figure 1.
Lift Switch Installation

Step 4:

Torque the M12 hardware to 50 ft-lb.