


# FurrowForce®



Gaspardo Chrono adapter (756335)  
Installation Manual

 Precision Planting®



- 1- Assemble the 756335 Mounting Bracket onto the Gaspardo shank using the two M12x35 and two M8x30 bolts and washers:

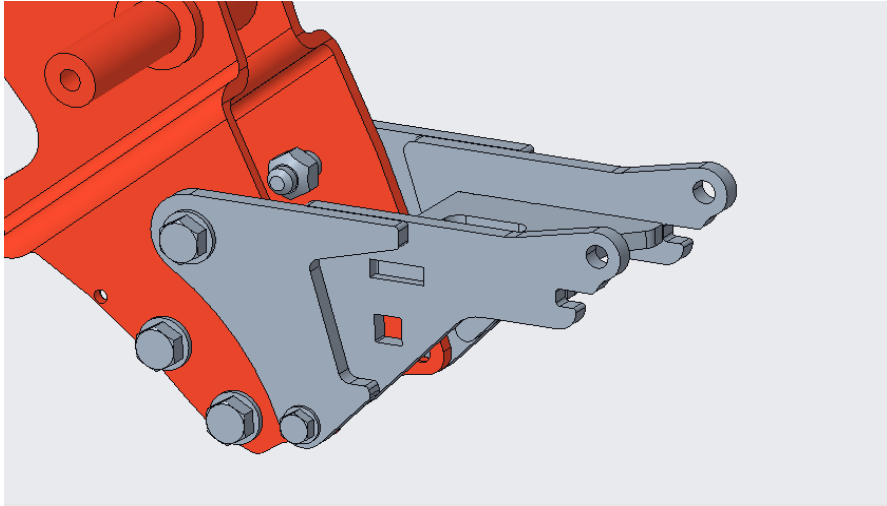

- 2- Assemble the bushing on each side of the bracket, using the M12 carriage bolts:

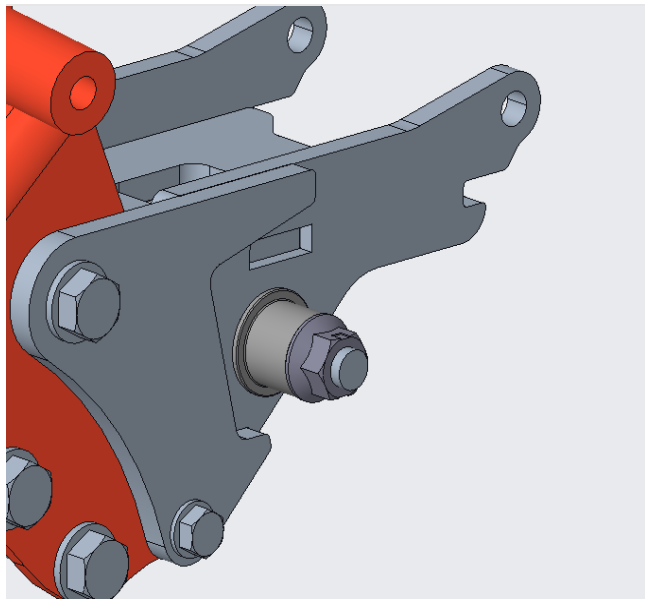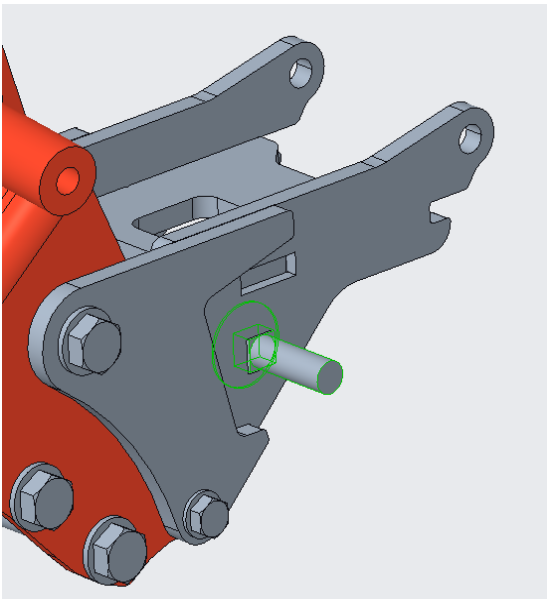

- 3- Install the tension spring (yellow arrow below) between the adapter bracket (into the hook) and the press wheel (reusing the existing OEM's bolt and bushing).

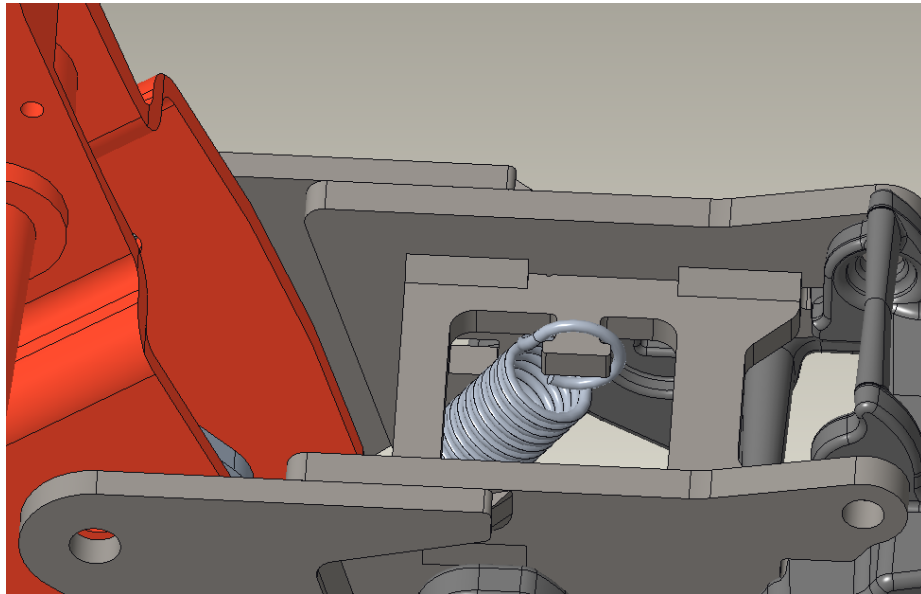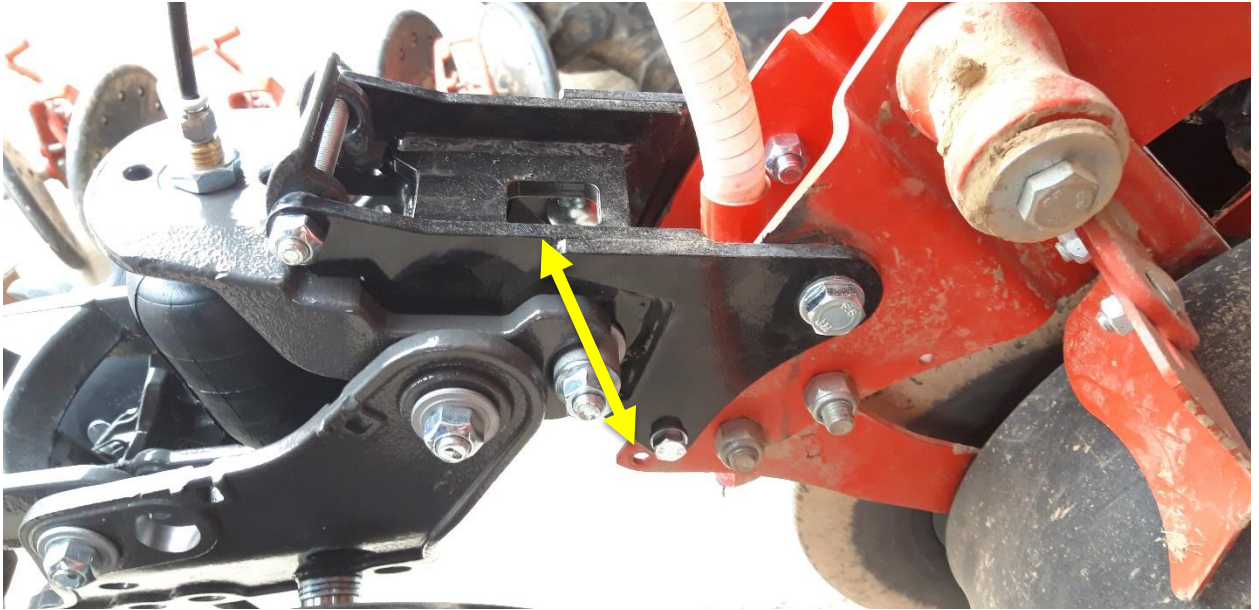



- 4- Install the FurrowForce interface bracket and secure it using the M10 bolt. Place M10 washers between the shank adapter and the Furrow Force interface bracket to remove any play. Tighten strongly:

