

DeltaForce®

Great Plains Installation Manual




DELTA FORCE - GREAT PLAINS

1. Remove parallel arms


- Start removing the shank from parallel arms and hold it secure
- Remove parallel arms from the W-bracket


2. Keep 4 bolts + 4 struts located inside the original parallel arm!

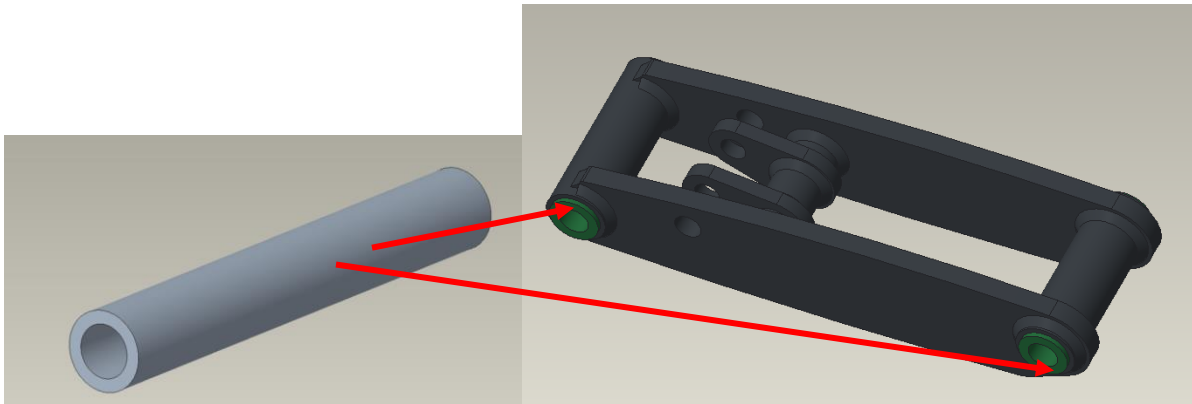

3. Install lower parallel arm


- Reuse round tube strut and bolts
- Cylinder tabs must be towards the top

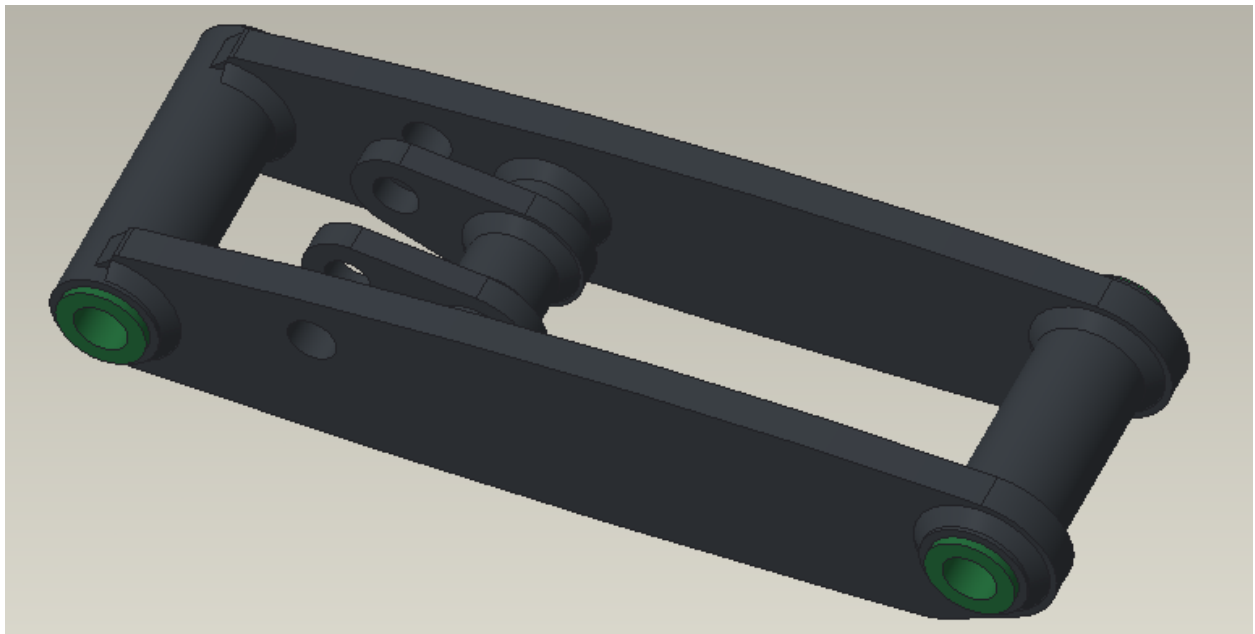

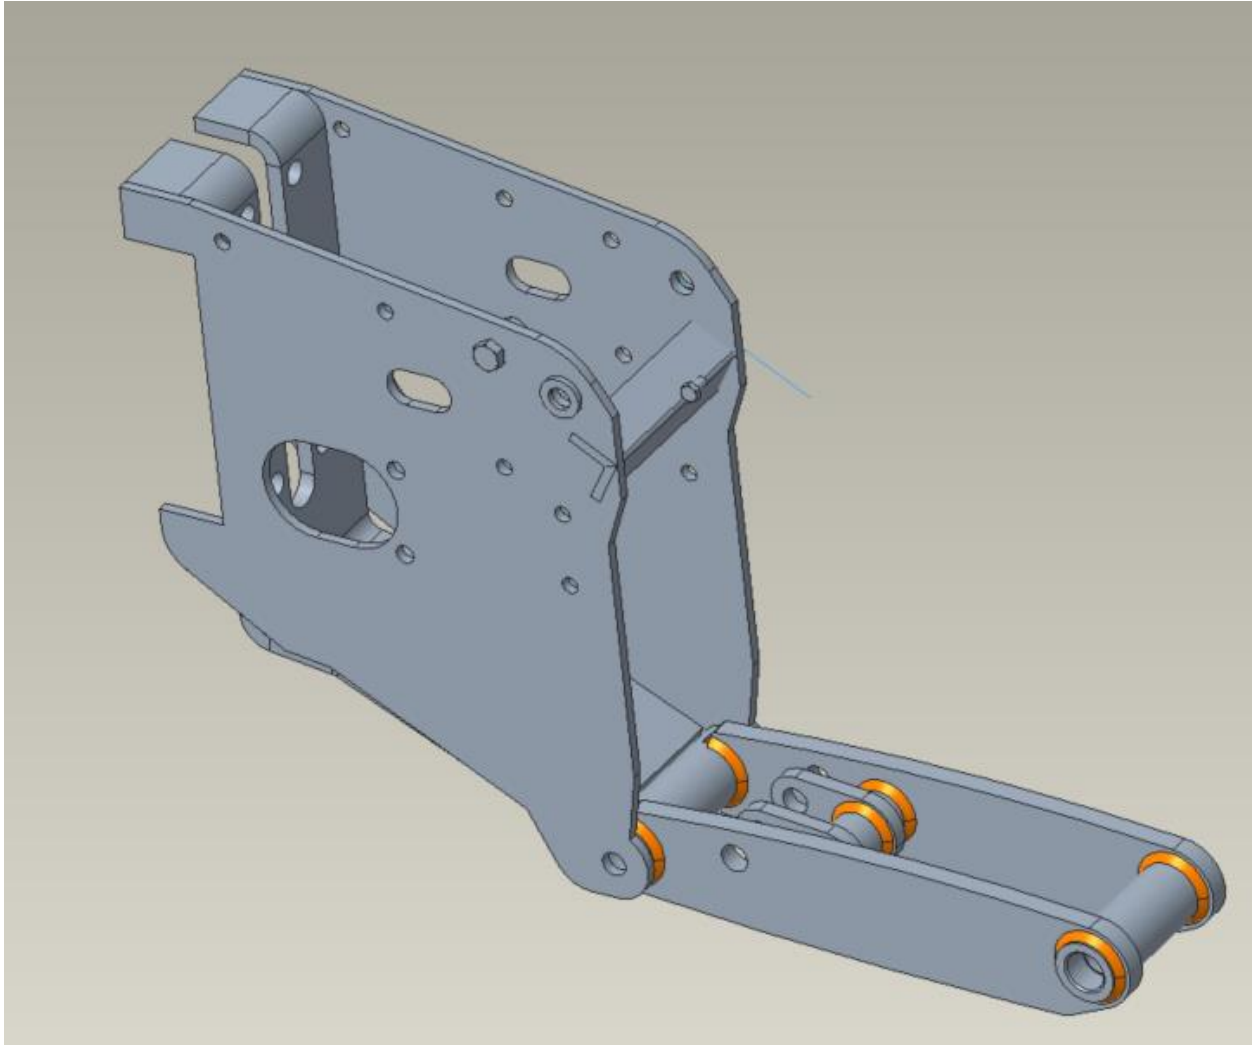


4. Install upper parallel arm



- Reuse round tube strut and bolts
- The curve of the arm must be down and the inside gusset at the back:

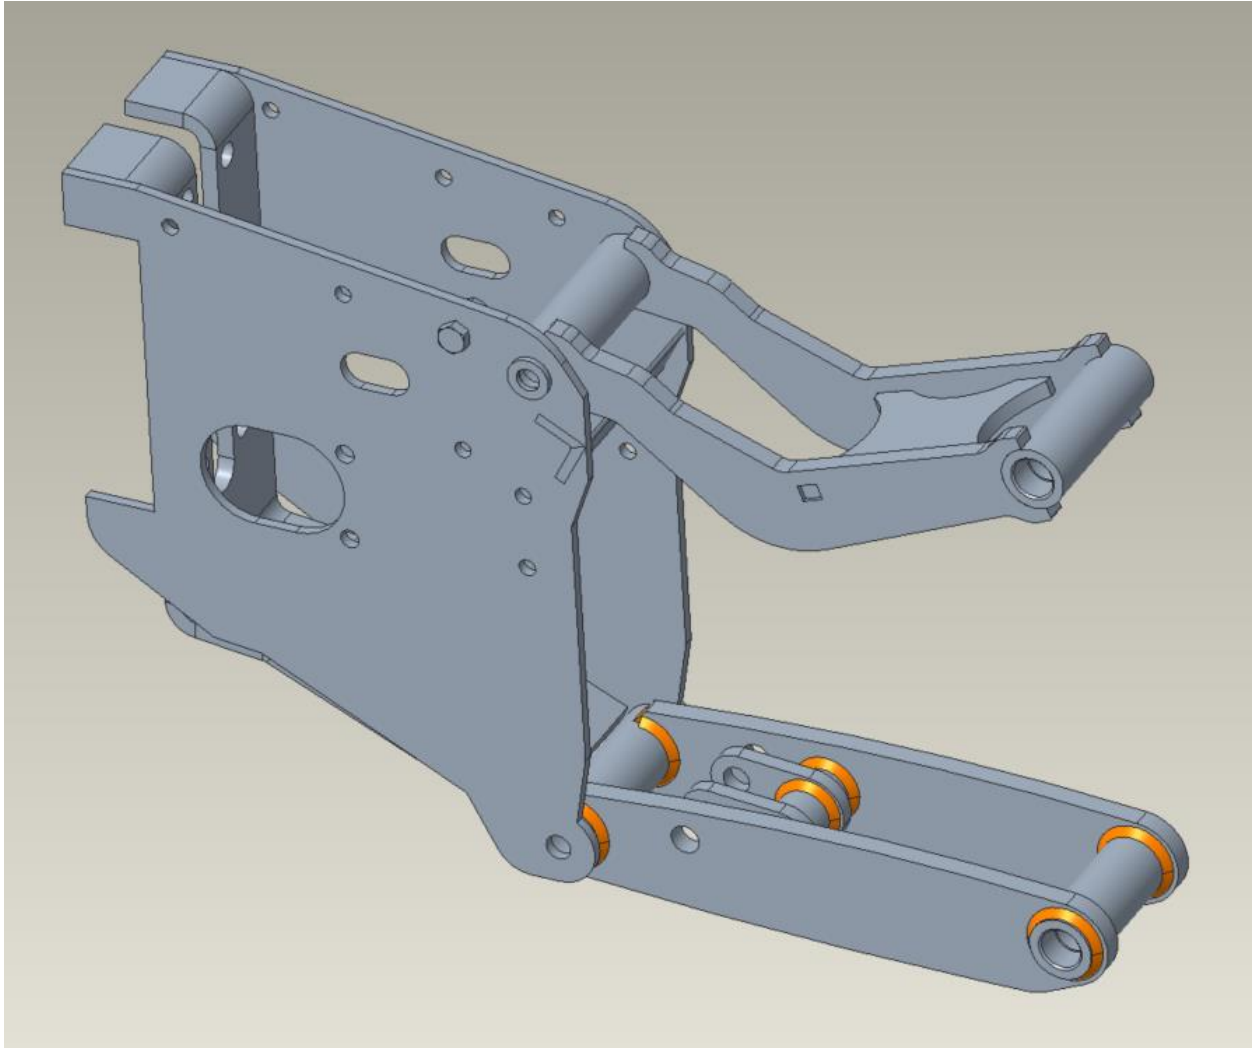

5. Reattach the shank to the parallel arms


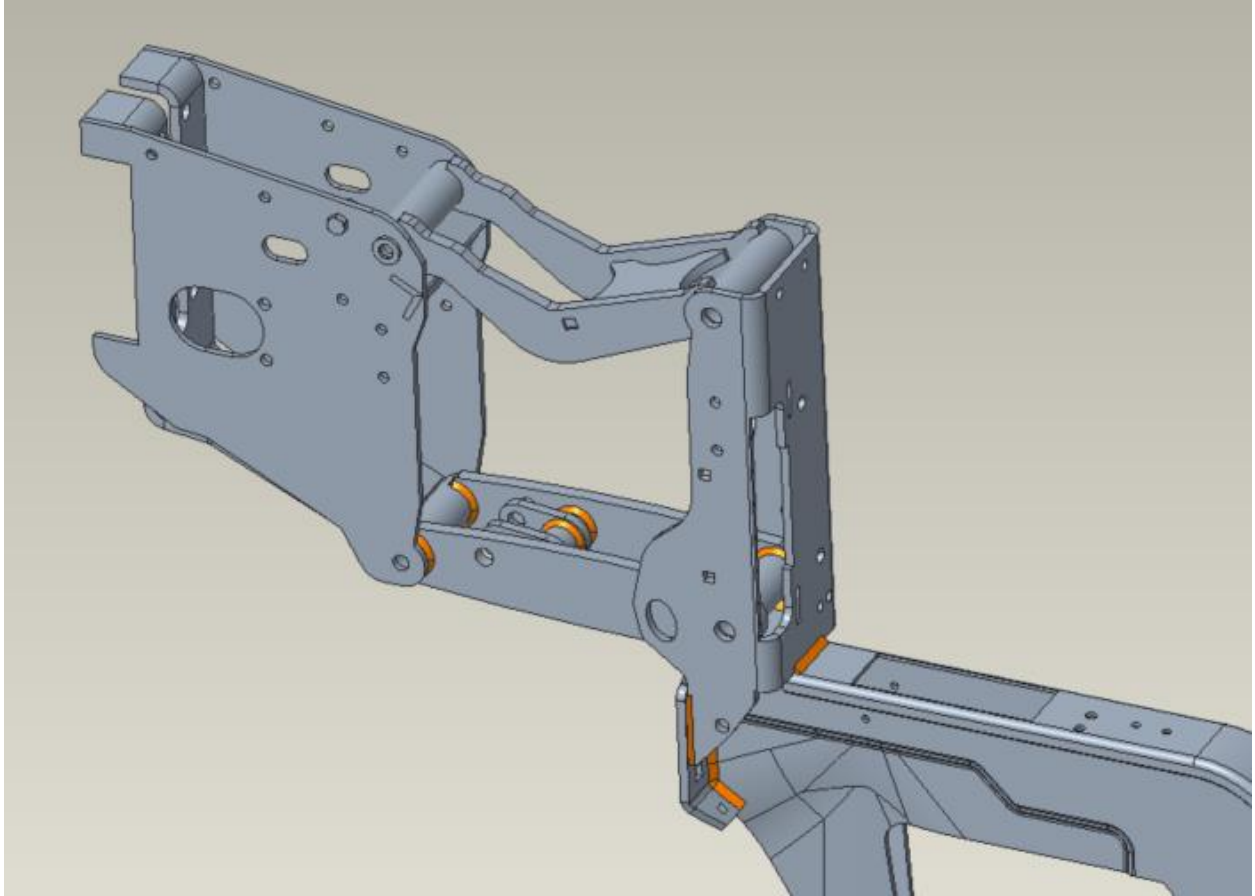


6. Install the cylinder bracket on the W-bracket using the 4 M10x30mm bolts

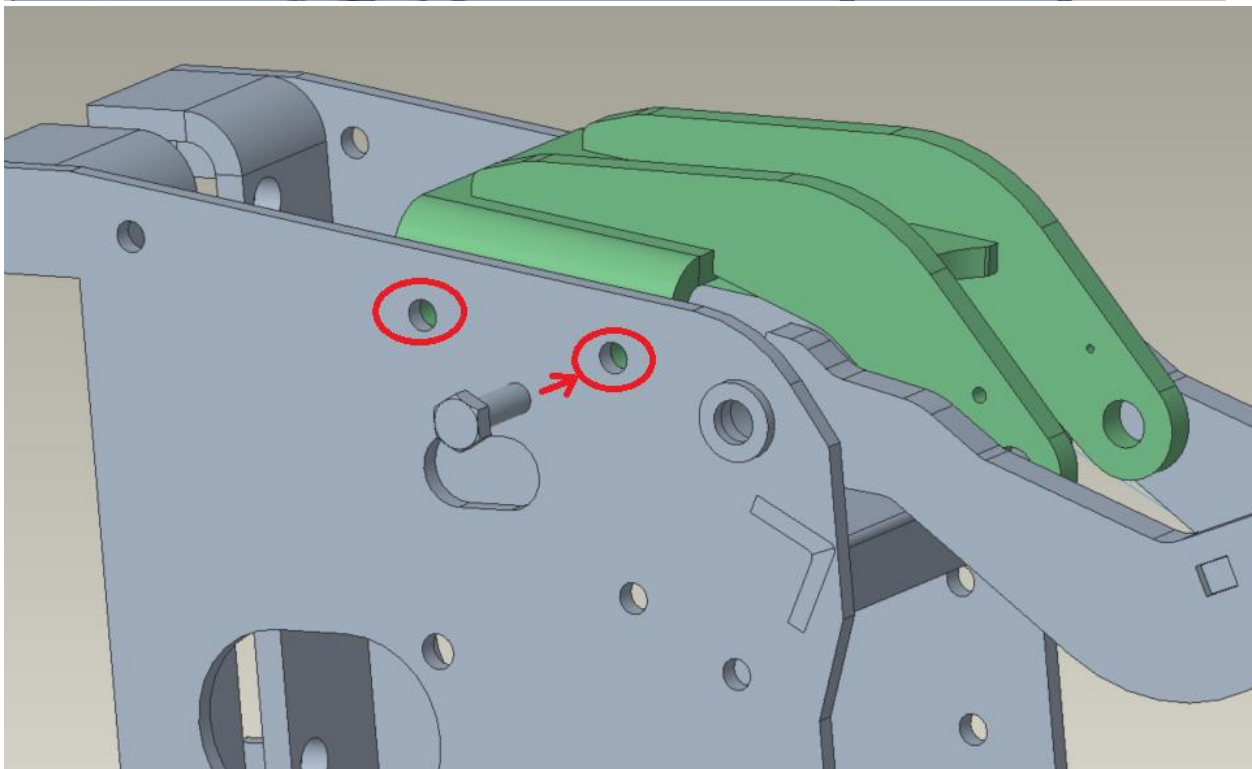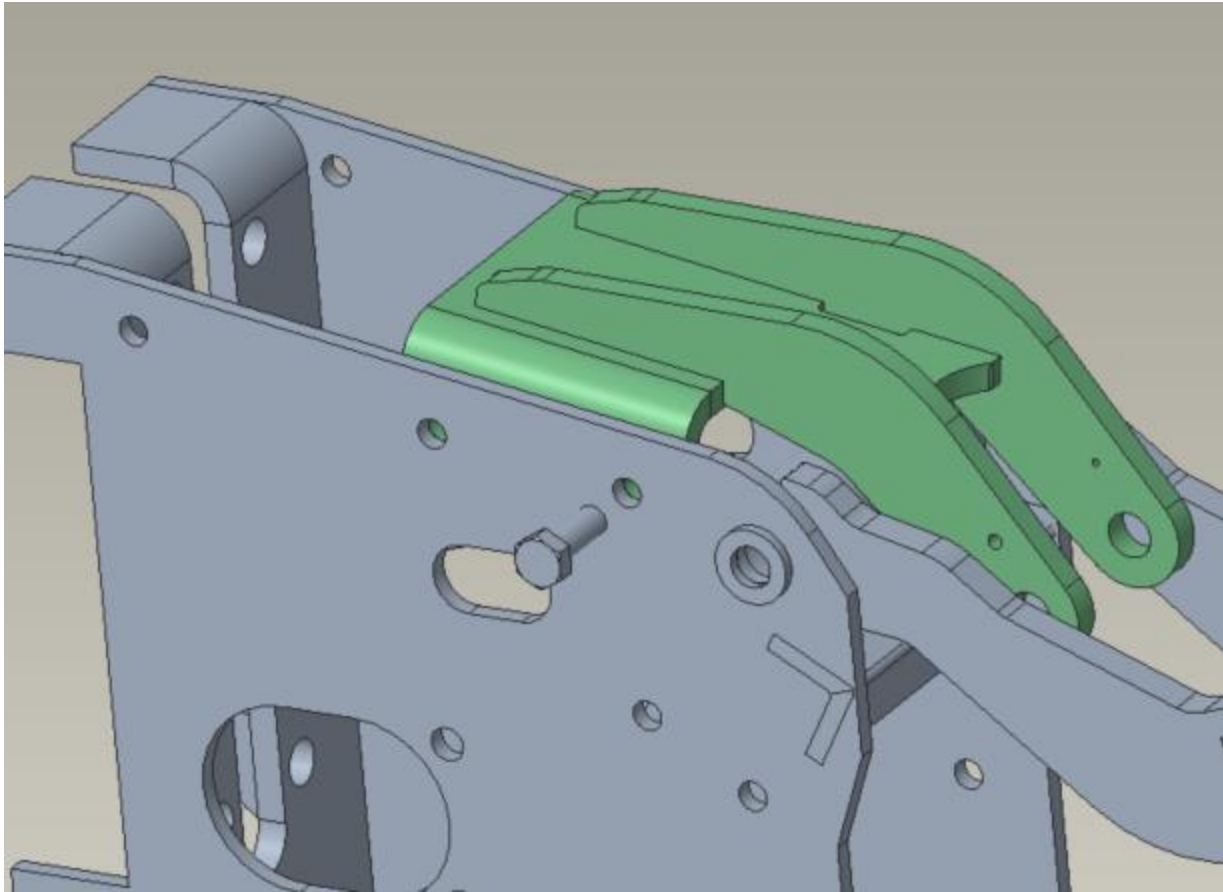

7. Install the DF cylinder

- Start with the top pin. Use the provided pin and lock it with the provided M6 bolt:

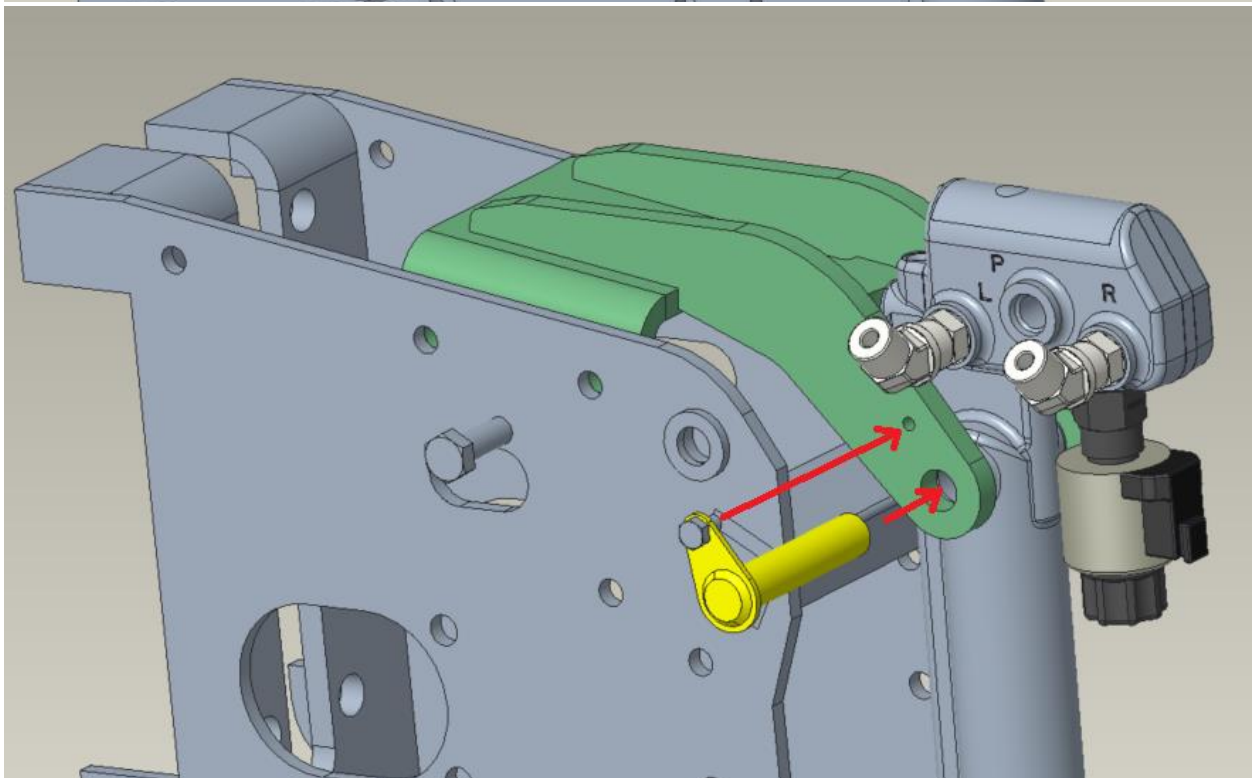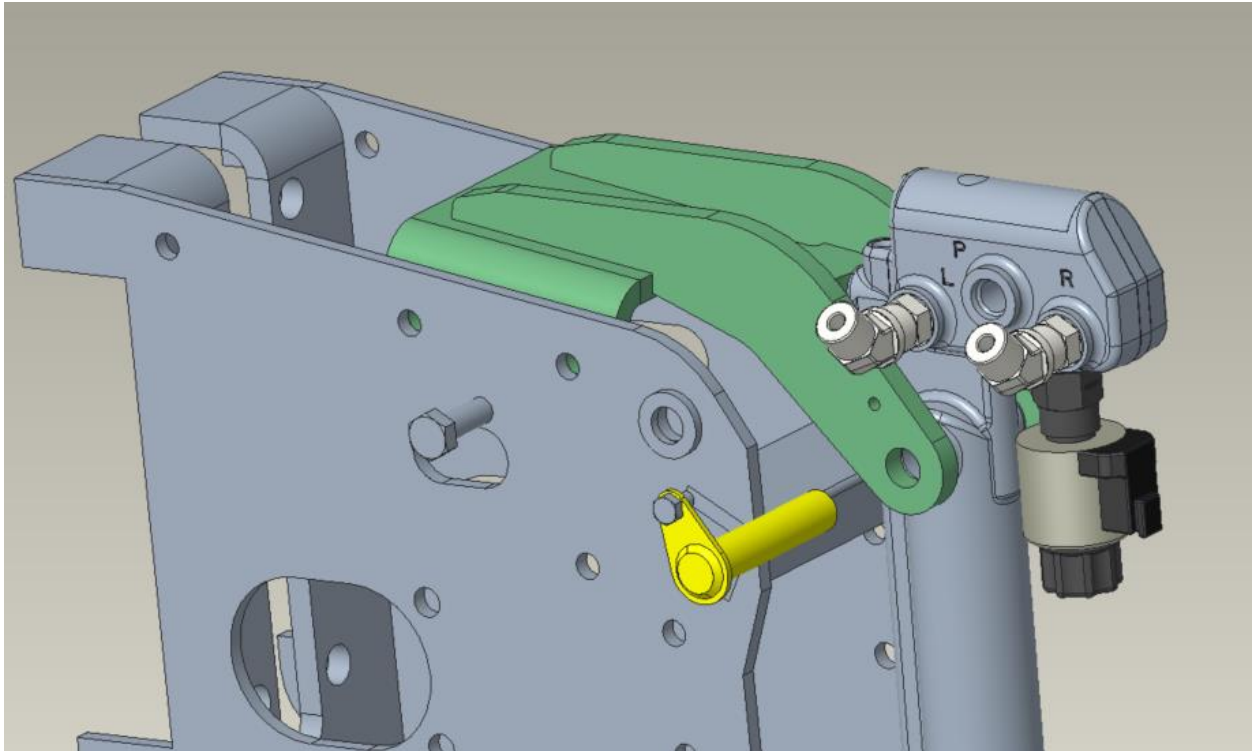

8. Install the lower cylinder pin (after running the DF Air Purge Health Check)
 - Lock the pin with the cotter pins

