

FurrowForce®


Horsch Maestro 2022+ Installation Guide




Horsch Maestro Shank Interface Bracket Installation (2022+)

756690 Horsch FurrowForce Bracket

Remove the existing closing system from the row unit. Retain the carriage bolts, washers, and lock nuts shown below to be re-used. Clean the two threads next to the parallel arm.


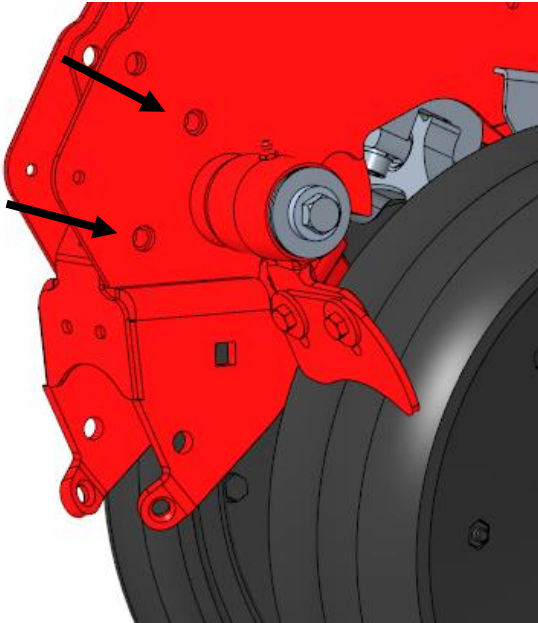


Hold the inner spacer (1) and the outer interface bracket (2) with the FurrowForce side down as shown. Insert the two M12 bolts with washers through the holes to secure.

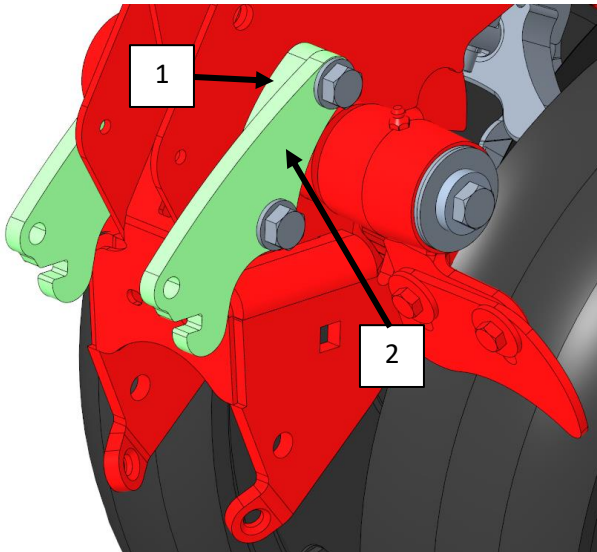

Repeat the previous two steps for the adapter bracket on the opposite side.

Insert the previously removed bolt (1) through the row unit. Install one of the provided pivot bushings (2) so that the flange is not against the row unit. Install the previously removed washer (3) and lock nut (4) to secure.

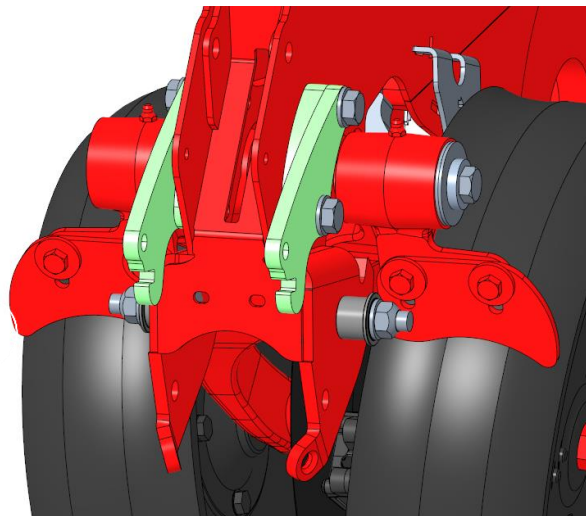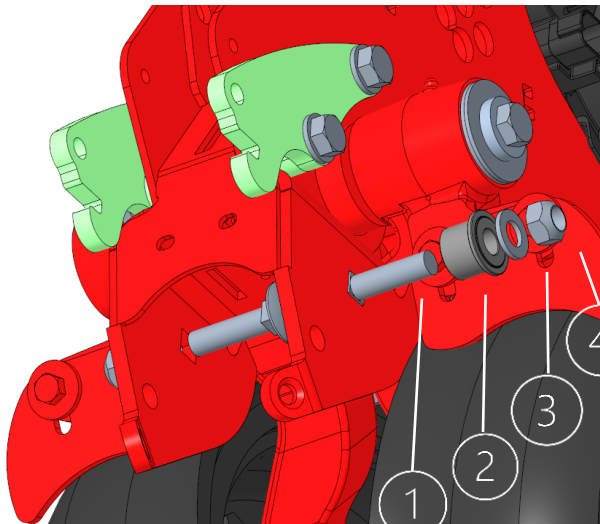

Repeat the previous two steps for the adapter bracket on the opposite side.

Install the FurrowForce assembly on the interface brackets so that the ears on the assembly line up with the mounts on each interface bracket as shown. Install the M10 cross bolt (1) through the interface brackets and FurrowForce assembly, secure with a M10 top-lock nut (2).

