

768830 - Horsch SpeedTube Installtion Kit


Horsch Maestro 2014 —2020

Step 1:


Remove the hopper with vSet/vDrive. Remove the seed tube

Step 2:

Remove gauge wheels and opener discs and install the Quick Attach bracket.

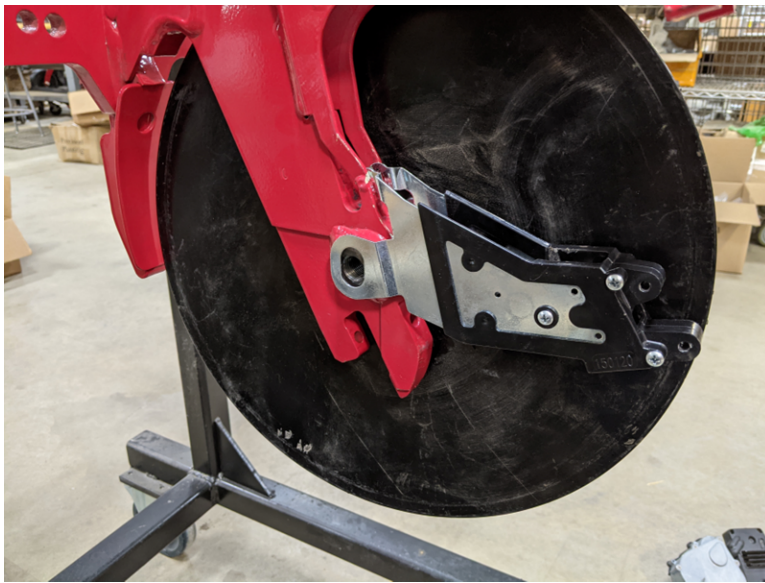

Note: If installing FurrowJet as well, Install the FurrowJet support bracket.

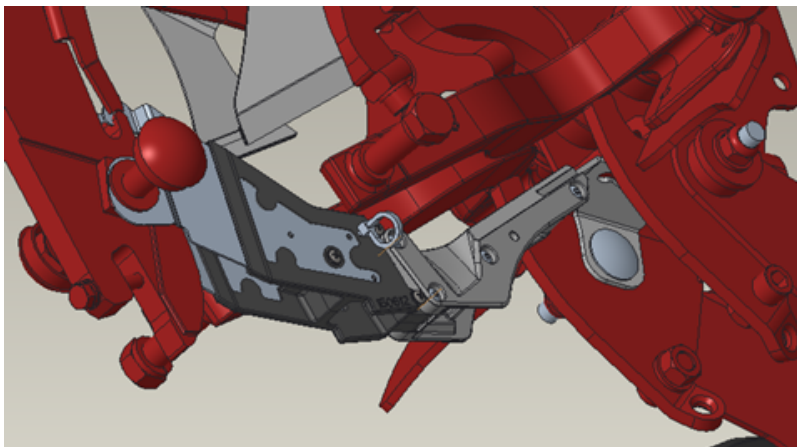

Step 3:

Remove the Horsch seed tube guard (and liquid line if equipped) and install the SpeedTube guard. Re-install opener discs and gauge wheels

**Step 4:**

Install the Retention Spring using the Horsch seed tube pin.



Step 5:

Install the SpeedTube Cover in top of the shank. Use the Horsch M10 Bolt and clip the cover in the rear tube.

**Step 6:**

You can now install the SpeedTube. Connect it to the CAN HUB using a 10" jumper



Step 7:

Position the front of the hopper on the hopper pucks. Lower the rear of the hopper down so it rests on the rear post. Secure the hopper into the row unit using the latch.

