



Lift Switch Installation

JD 7000/Kinze Regular Parallel Arms 726265

The final step of the Air Force installation is the Lift Switch. The Lift Switch will be located on the lower parallel arm of any row unit **WITH** a Row Unit Module (RUM) and **WITHOUT** a Vacuum/Pressure Sensor.

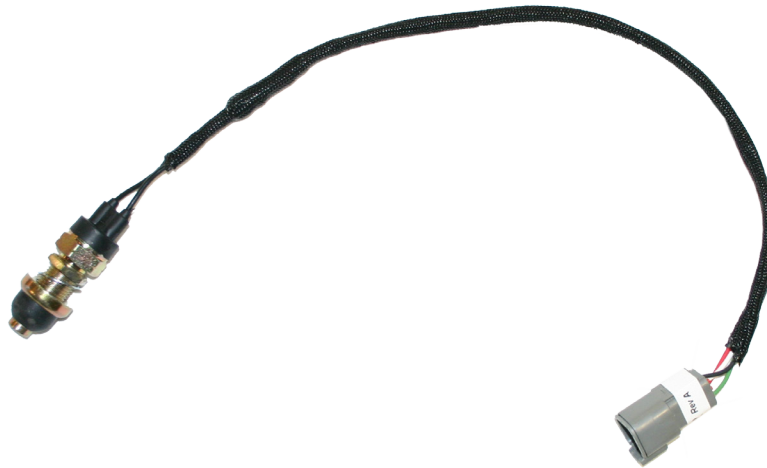

As a reminder, below are pictures of the Row Unit Module alone and shown as installed.

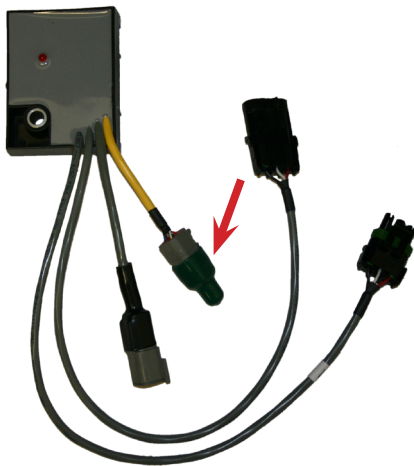

The Lift Switch has a 6-pin female Deutsch receptacle that connects with the corresponding 6-pin Deutsch auxiliary male plug (RUM shown with yellow cable and green dust cap).

Questions? Visit www.precisionplanting.com or call us at 309-925-5050.


Precision
PLANTING



Lift Switch Installation (Continued)



Item	Quantity	Part Number	Part Name	Description
1	2	63126	Cable Tie	8" UV Black
2	1	33086	Washer	½" SAE Flat YLW ZN
3	1	13210	Bolt	½" x 1.75 GRD 5
4	1	726257	Bracket	
5	1	726608	Switch	
6	1	37268	Lock Nut	½" SAE Top GRD C

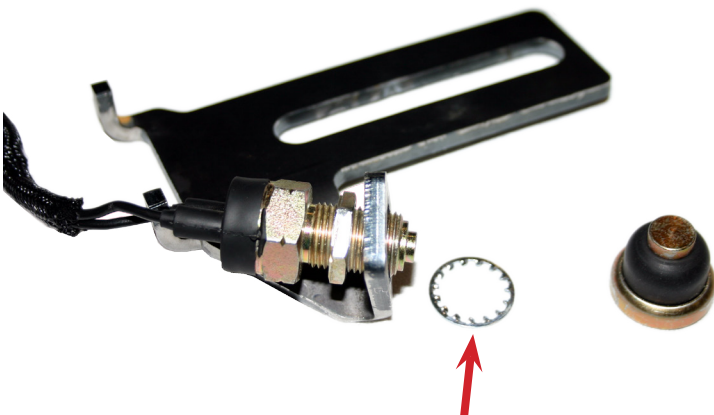

Lock-washer

Install along with nut prior to placement in bracket hole.

Install the nut and lock-washer on the threaded Switch Shaft and thread to the base. Insert the Switch through the hole in the provided bracket as shown to the left.




Lift Switch Installation (Continued)

Once the Switch shaft is in place through the hole, thread the End Cap fully onto shaft until finger tight. Tighten the Nut/Lock-washer against the bracket using a wrench. Completed assembly shown to the right.



On a row unit WITH a RUM and WITHOUT a Vacuum/Pressure sensor, install the assembled Bracket/Switch onto the lower left hand parallel arm. Align the assembly with the rear most hole in the parallel arms and hold in place using the provided 1/2" X 1.75 bolt, flat washer and hex nut. DO NOT fully tighten the assembly until you have properly positioned the Switch.

The correct positioning of the Switch may be found with a raised planter by pushing against the assembly towards the rear of the row unit to depress the End Cap. Once the assembly has been properly positioned, as shown below, tighten down the 1/2" Bolt to fix in place.

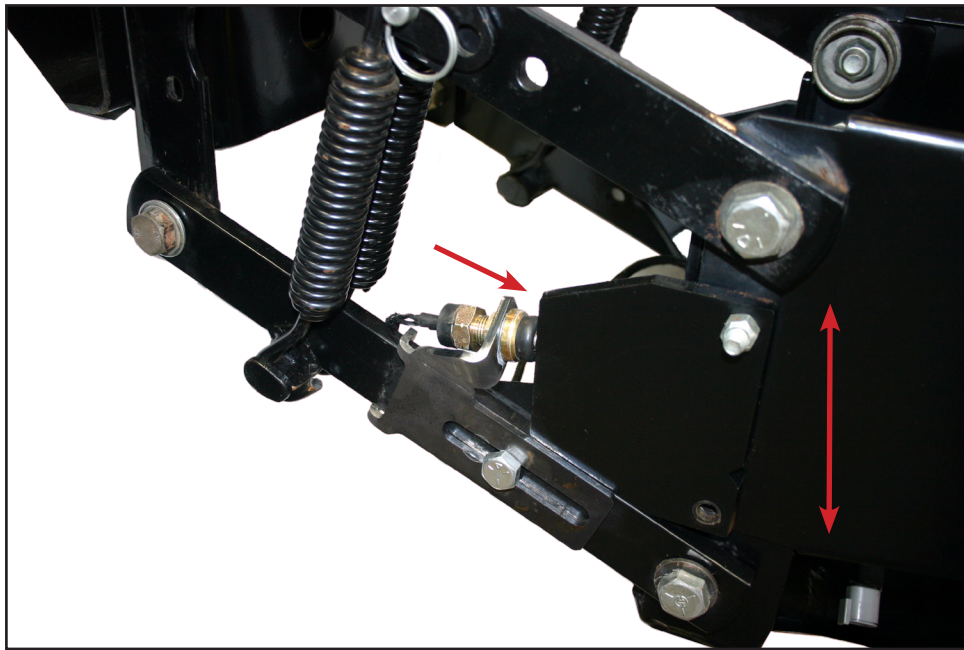

Complete the installation by connecting the 6-Pin deutsch connector into the auxiliary port of RUM.

Note: If this is a 20/20 RowFlow installation you will need to plug this into the 727112 Lift Switch Harness.

