

Kinze Direct Drive Sprocket Kit


Follow these instructions to adapt the transmission for planting with the vSet. Parts necessary to complete this conversion are available in kit 730282

Note: Transmissions may vary slightly from pictures shown.

Remove the chain running between the drive wheel and the hex shaft (A).



Bolt 48 tooth sprocket to the 12 tooth sprocket located on the hex shaft (B), using provide bolts.

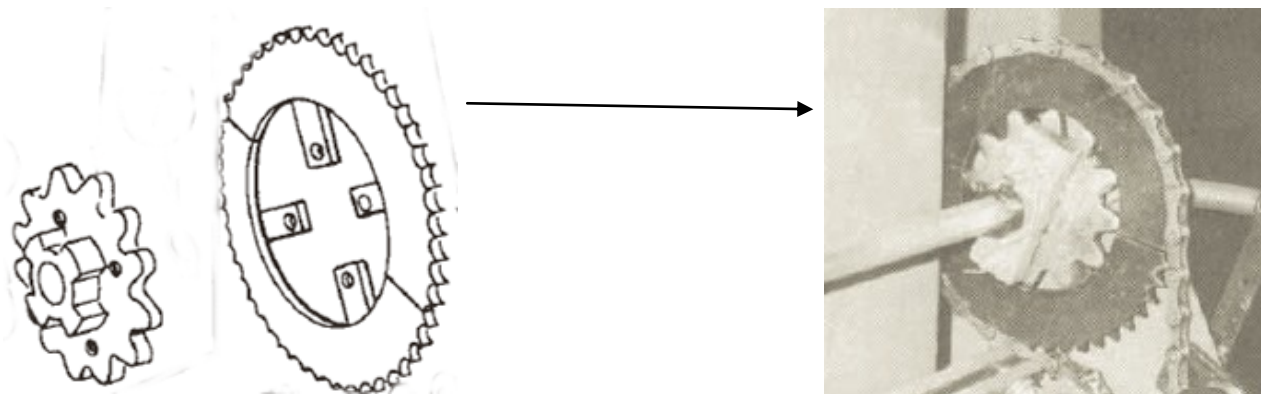

Once 48 tooth sprocket is bolted on, use longer chain provided to reconnect the wheel sprocket with the now larger hex shaft sprocket.

Use Sprocket Combination rate chart available at <http://www.precisionplanting.com/Products/vSet/Tech-Support.aspx> labeled Kinze 2100 Finger to set your populations based on your new sprocket.