

Kit 141265 – Spring, Monosem closing system


Note: This Kit will be used when removing a firming style Pro Wheel to install a Quick Attach bracket on a Monosem NG+4 and NG+4 rom unit. This is only required if the OEM closing system is being reinstalled.

Step 1:

Remove the Monosem's Pro wheel to install Quick Attach and FurrowJet brackets. Keep the factory spring for installation after bracket is installed.

Step 2:

Replace it with the 141266 bracket (shown in red below) using the M10x130 bolt.

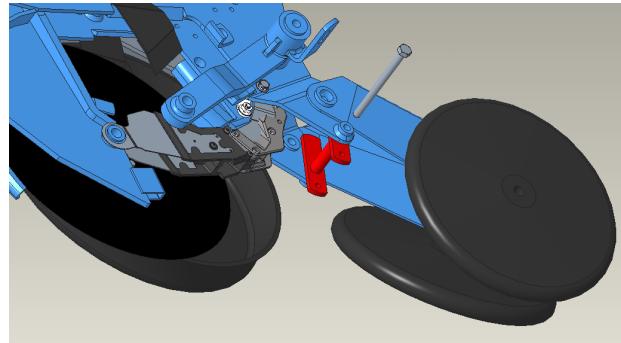

Step 3:

Attach the closing system's spring to the 141266 bracket. (Spring location as shown)

