


Kuhn Maxima 2 Quick Attach Bracket 150611 Installation

Part Number	Description
150713	Maxima Quick Attach Weldment
150716	Hardware Kit Maxima 2 QA
150714	RH Quick Attach Bracket
150715	LH Quick Attach Bracket
750695	10–14x1 Plastite Screw (x3)

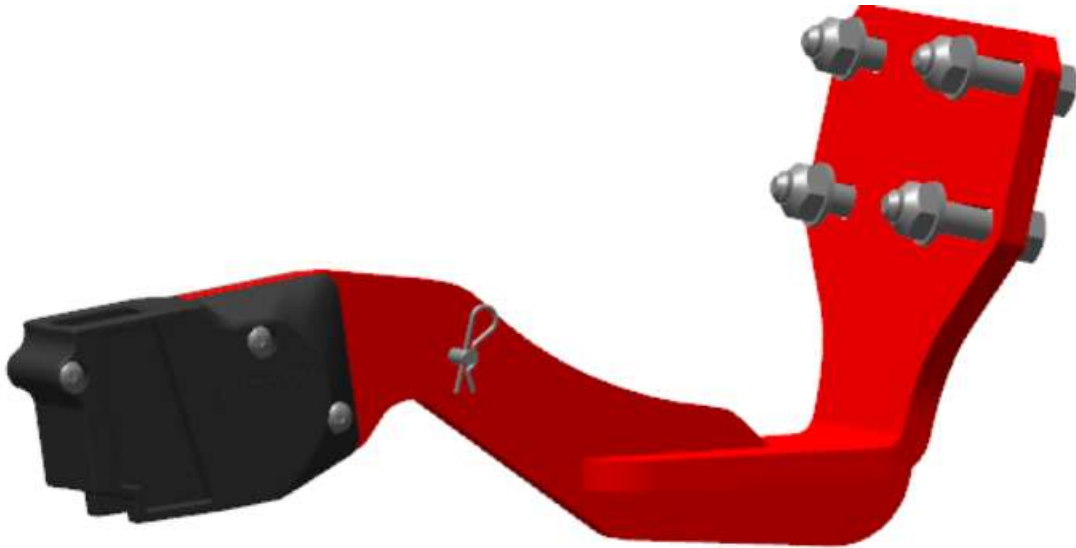


Step 1:

Prepare the Row Unit

- Raise the planter and remove the disk scrapers.
- Remove the gauge wheels and disk openers.
- Check the seed tube guard and seed tube for wear and replace as necessary. Removing the seed tube is not required but will make installation easier.
- Remove the closing system from the planter.

Step 2:**Assemble the Quick Attach Firmer Bracket**

- a: Place the right and left-hand halves of the quick attach bracket onto the weldment

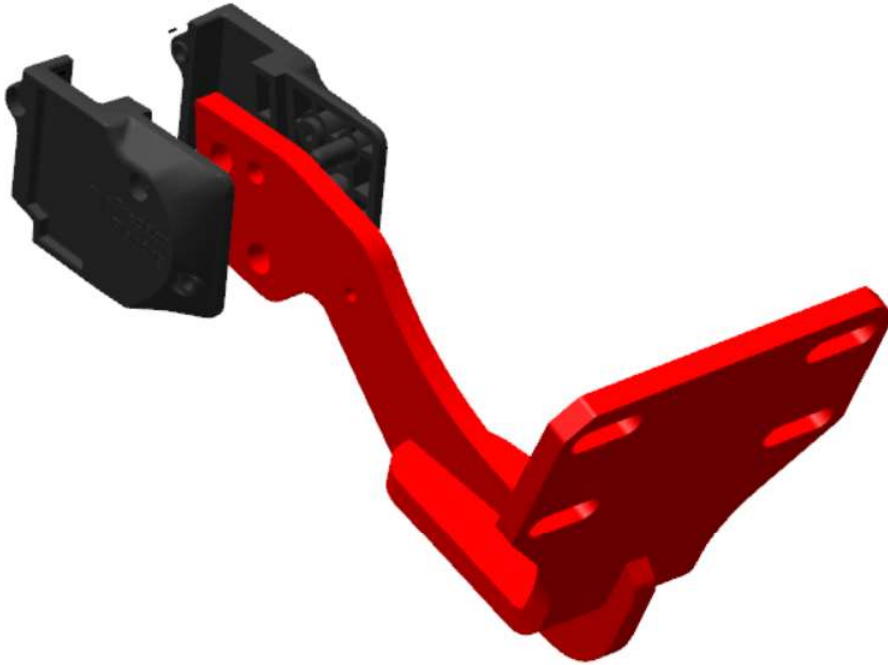


- b: Attach the quick attach bracket to the weldment using the 3 plastite screws



Step 3:

Install the Quick Attach Assembly

- a: Next, install the stiffener bracket. To do this you will need to ***remove the closing assembly***. Install the quick attach assembly pointed upward and centered between the shank and closing system. Reinstall the closing system with the stiffener bracket against the row unit. Use the 4 provided bolts to attach the bracket and closing assembly to the row unit.

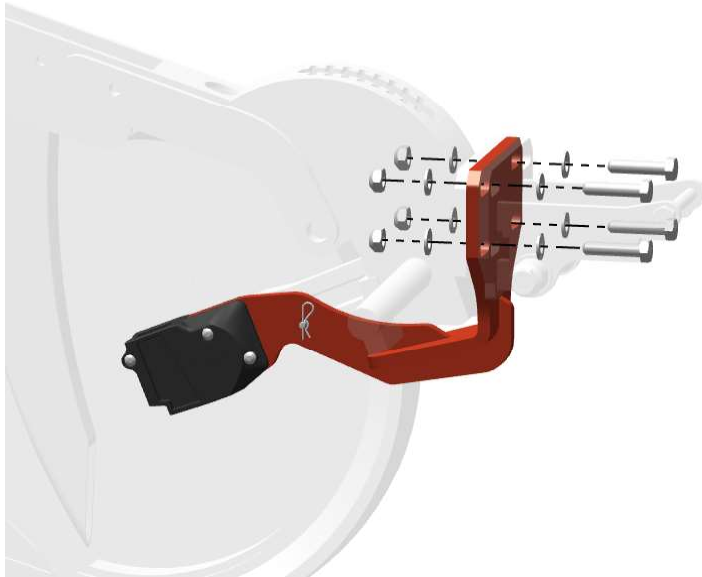

- b: Tighten all 4 nuts and bolts to secure. Confirm none of the brackets twist or bind while tightening.



Step 4:

Complete the installation.

- a: If the seed tube was removed, reinstall it and ensure it is fully seated on the lower seed tube pin.
- b: Reinstall the opening disks and shim as necessary.
- c: Reinstall the gauge wheels according to the Manufacturer's instructions.

