



Kuhn Maxima 2 Shank Interface Bracket Installation

Remove the existing closing system from the row unit and retain the OEM hardware. Locate the shank interface bracket (1) and position it to the row unit as shown.


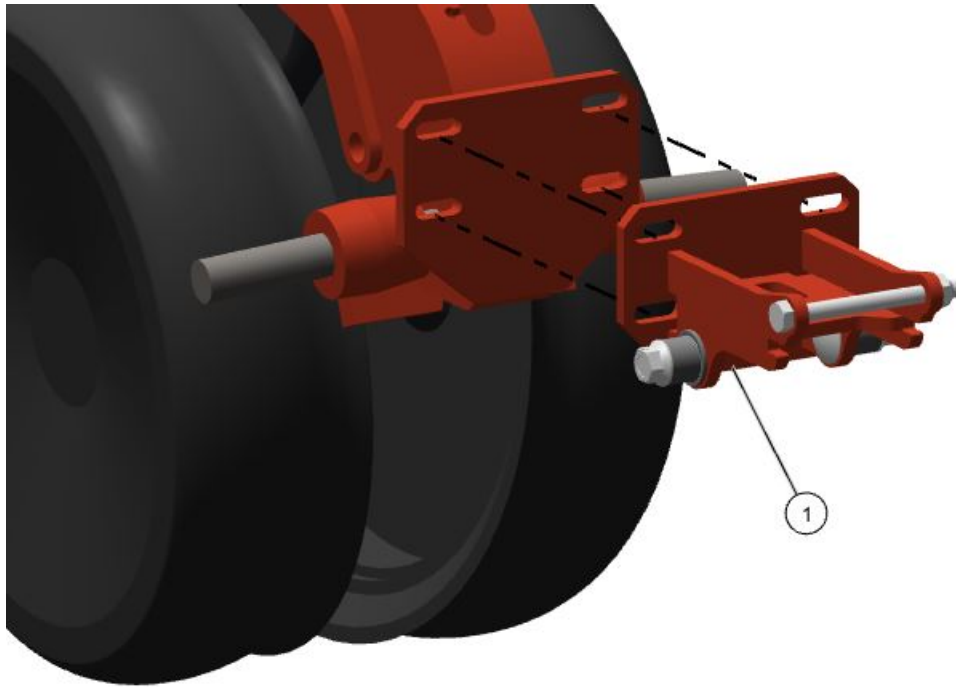


Align the four mounting slots in the interface bracket with the mounting slots in the shank. Reinstall the OEM closing system hardware in the four mounting locations and had tighten the nut.

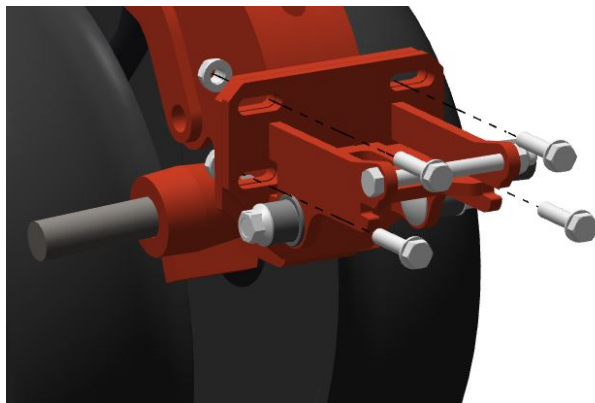

Remove the M10 cross bolt (1) and M10 lock nut (2) from the interface bracket. Place the FurrowForce assembly on the interface bracket so the ears on the assembly rest on the bushing mounts on the bracket. Insert the M10 bolt through the interface bracket and assembly and secure with the M10 top lock nut.

Note: Torque the nut until the interface bracket is tight to the FurrowForce assembly. The interface bracket may bend slightly.

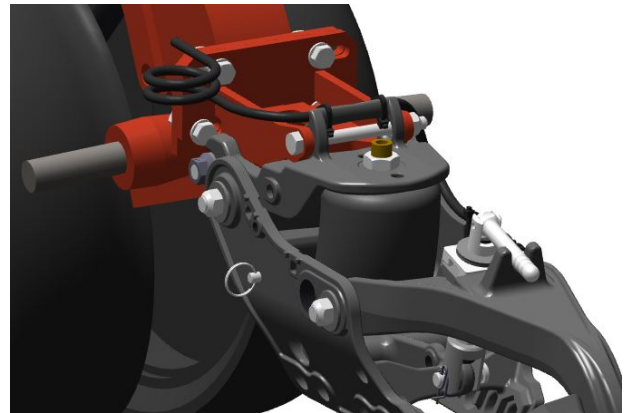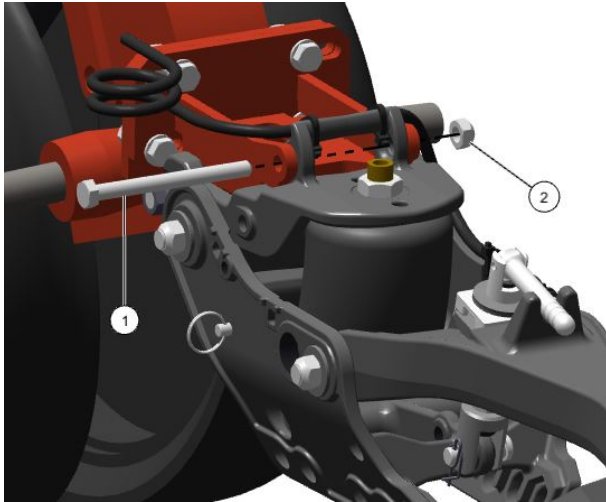

For remaining installation steps, refer to the [FurrowForce Installation Manual](#).