


FurrowForce®

Kverneland Installation Manual (756320)

 Precision Planting®

Prepare each FurrowForce bracket as illustrated below:

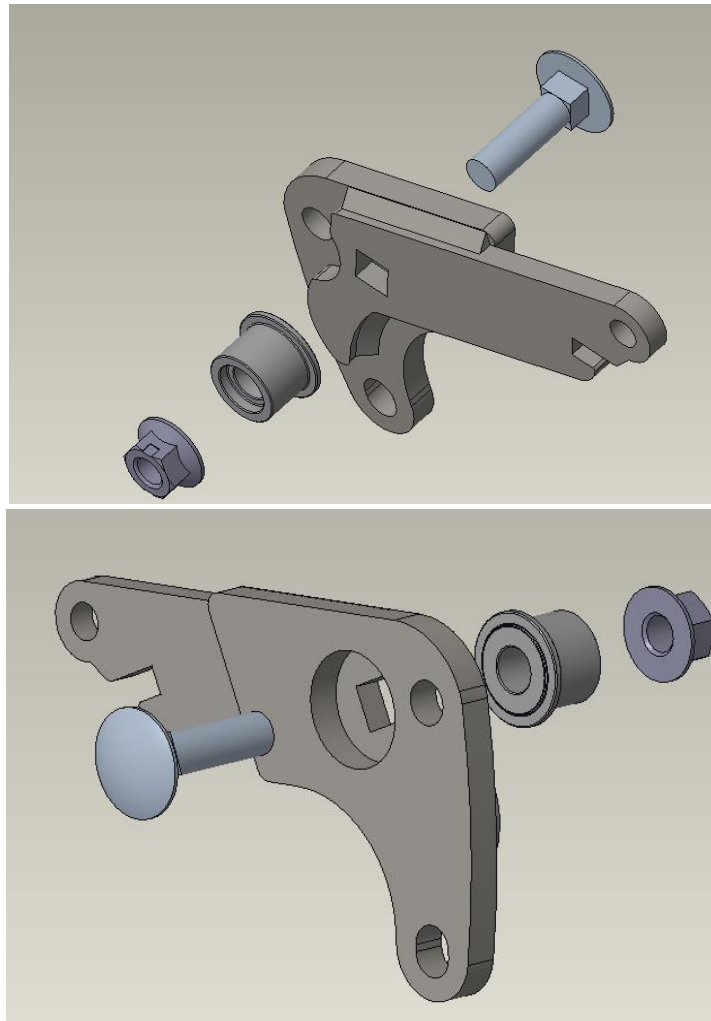


Remove OEM closing system:




Install FurrowForce brackets :


Note: If installing a Quick Attach bracket as well, it should be assembled at the same time, please refer to the Quick Attach installation manual.

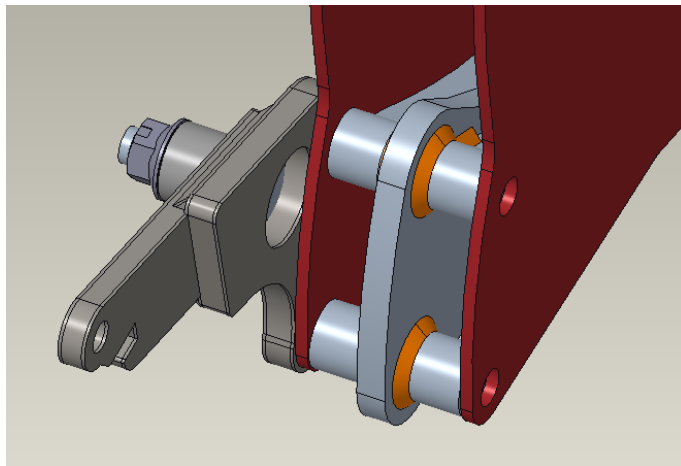

2. If the Quick Attach bracket is not used, install the 2 provided spacers as shown below:

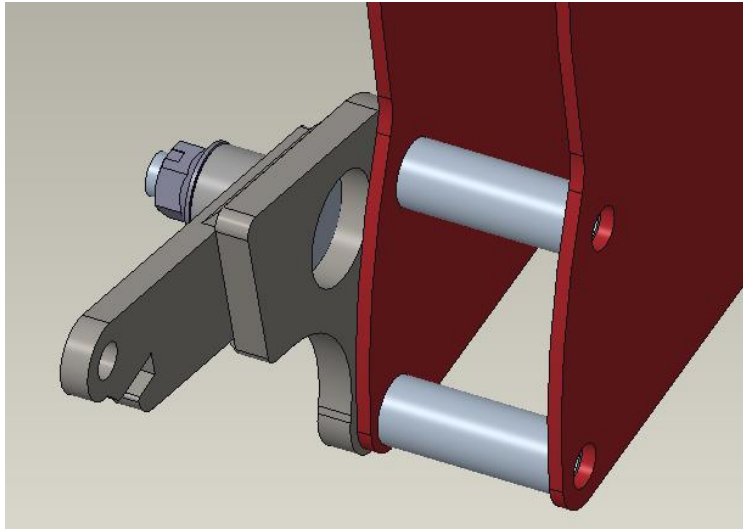

2. Insert the 2 M12x100 provided bolts

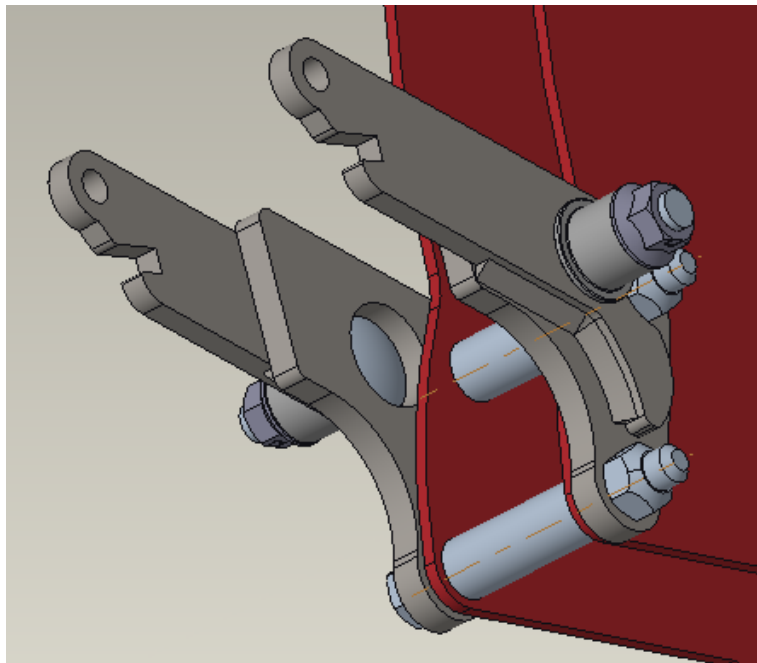

4. Mount the FurrowForce interface bracket and bolt as illustrated below. Please use the washers between the FurrowForce and the adapter, and make sure to tighten the bolt so the FurrowForce is not tilting from left to right.

