


Quick Attach Bracket (150618) and Optional
Setback Bracket (150619)
Kverneland Optima
Installation Manual



1. Assemble 150714 and 150715 plastic parts on the welded bracket, using the 3 screws

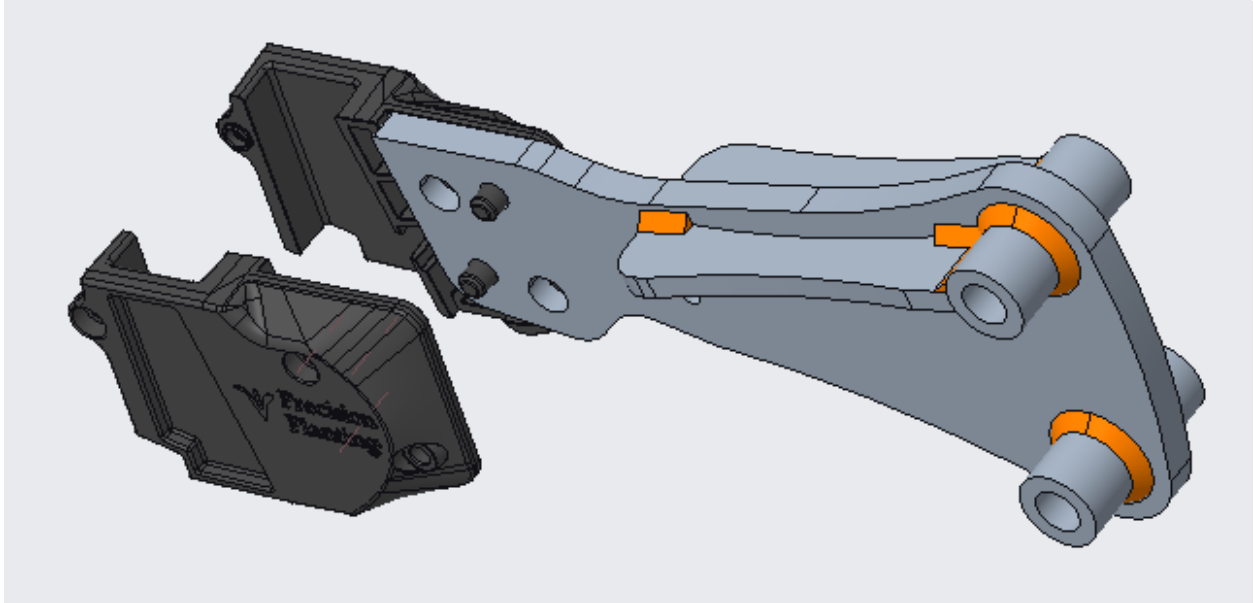


2. Remove the OEM closing system:




3. Remove gauge wheels, and remove the existing press wheel (if applicable) :



4. Align Quick Attach bracket as indicated below:

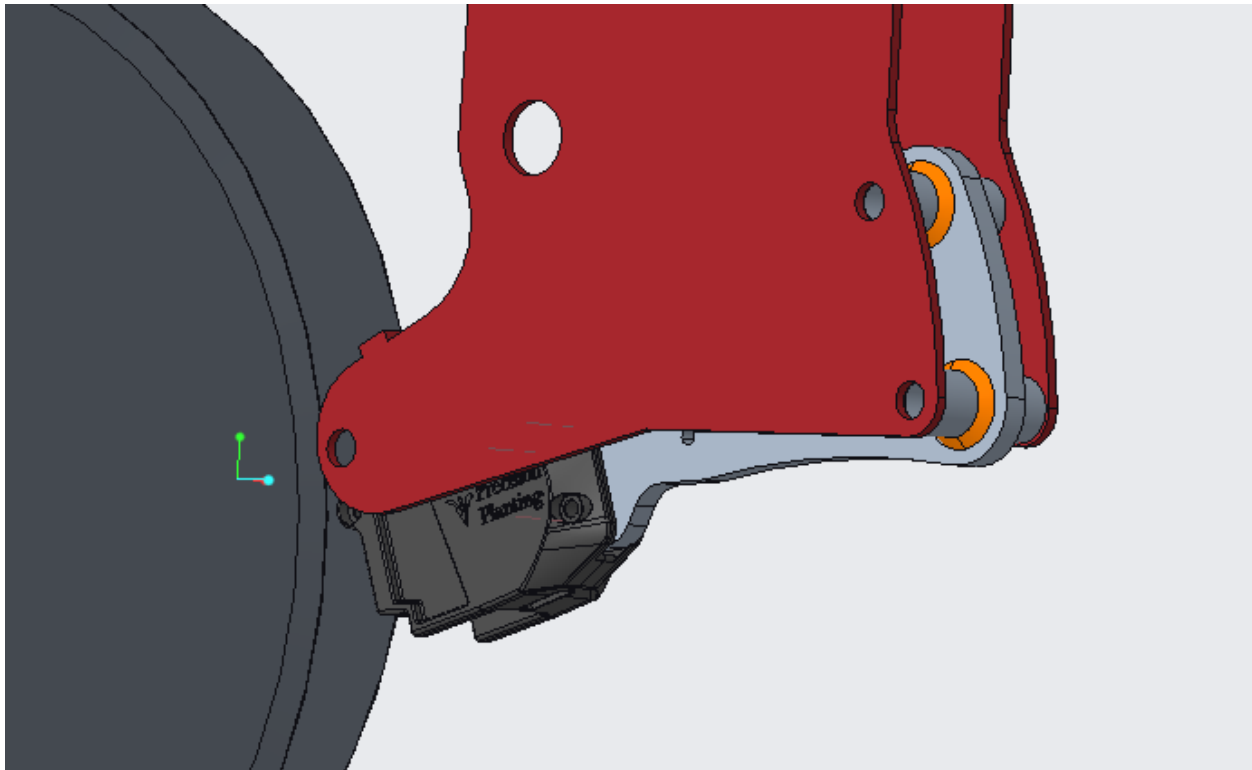

Note: If installing QA bracket with the OEM closing system you also need to install the setback bracket (150619)

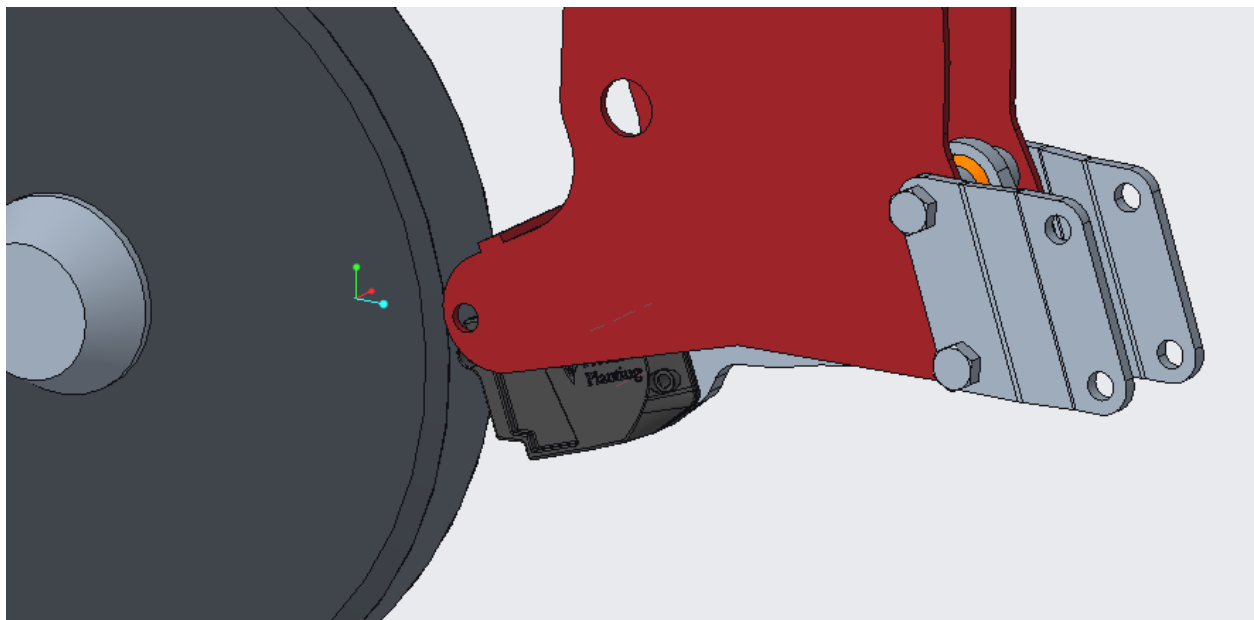

5. Using the 2x M12x90 bolts, mount the Quick Attach bracket
6. Re-install the OEM closing system. If installing FurrowForce, refer to the Furrow Force Installation manual.

