

FurrowForce™


756700 – FurrowForce Adapter kit


- Horsch Maestro 2022 and newer
- Horsch Maestro 2014-2019

Horsch Maestro 2022 and newer

Step 1 – Remove the existing closing system from the row unit

Step 2 – Mount the bracket to the row unit, aligning the 4 upper holes on the bracket with the holes on the row unit.

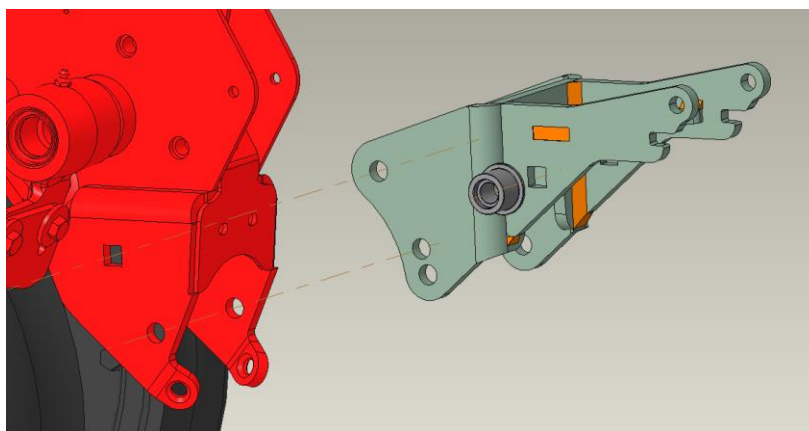

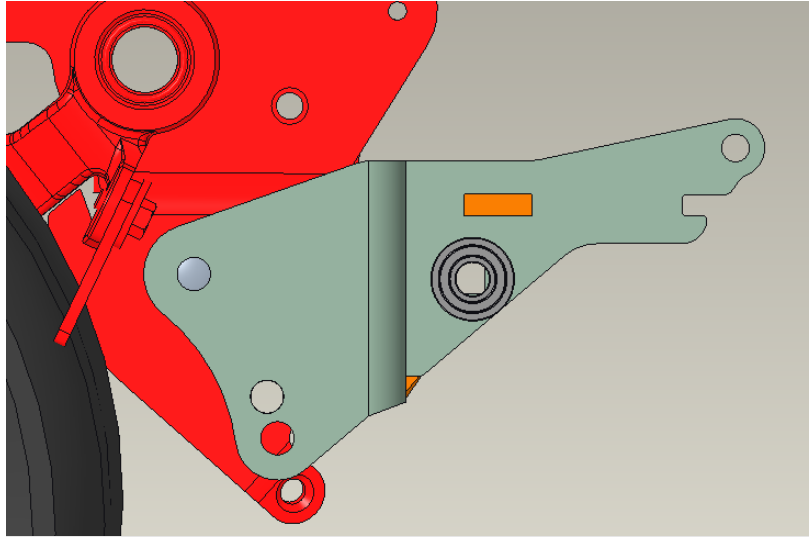



Step 3 – Using the supplied bolts (M12X1.75), attach the bracket to the row unit

Proceed to the section **Installing FurrowForce Assembly to the Row Unit** in the **FurrowForce Installation Manual (955777)** and follow the instructions for completing the installation.

Horsch Maestro 2014-2019


Step 1 – Remove the existing closing system from the row unit

Step 2 – Mount the bracket to the row unit, insert the 4 supplied bushings between the row unit and the bracket (see illustrations below)

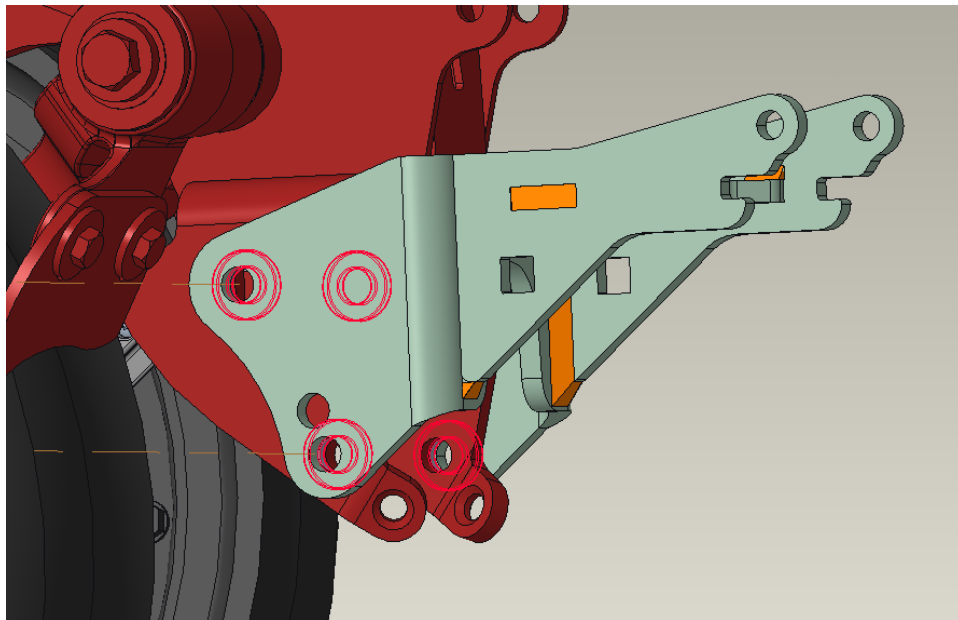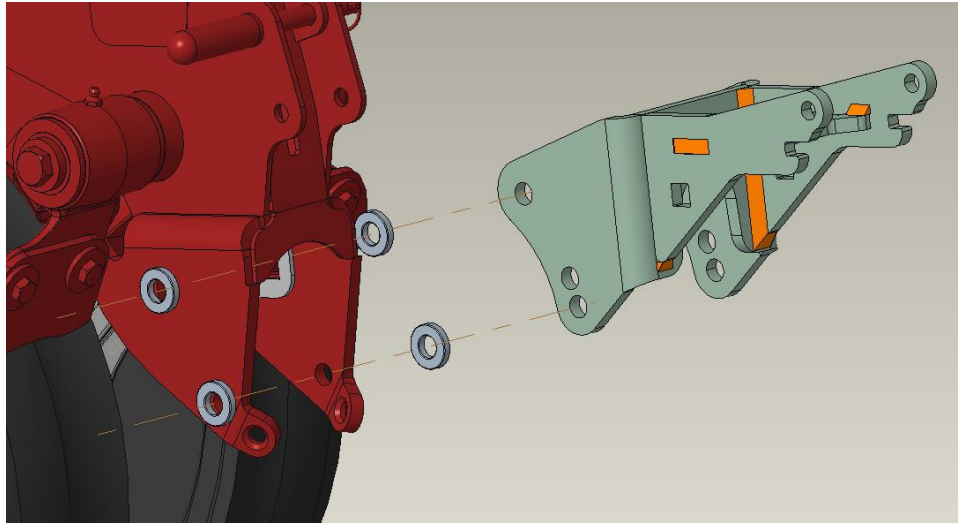

Step 3 - Align the 2 upper holes and the 2 lower holes on the bracket with the holes on the row unit. Secure the bracket using the 4 supplied bolts.

Step 4 – Install the supplied Pivot Bushing to the bracket using the M12X1.75 Carriage bolts and flange nuts (see illustration below)

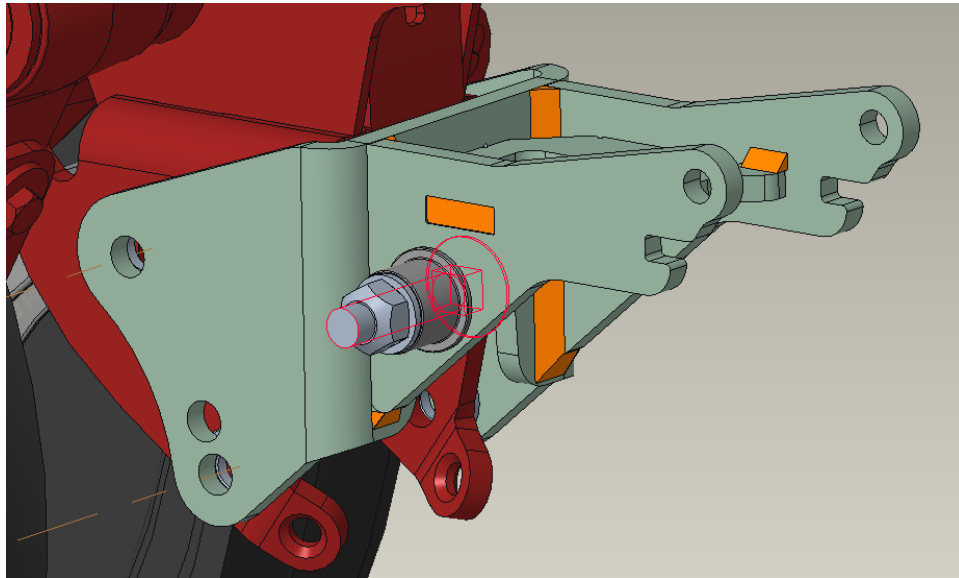

Proceed to the section **Installing FurrowForce Assembly to the Row Unit** in the **FurrowForce Installation Manual (955777)** and follow the instructions for completing the installation.