


Quiet Vac Installation Guide

Mount the vac unit on the left rail panel on the rear of the MeterMax® Test Stand as shown in the photo. Tuck the top of the vac under the lip of the belt rail.

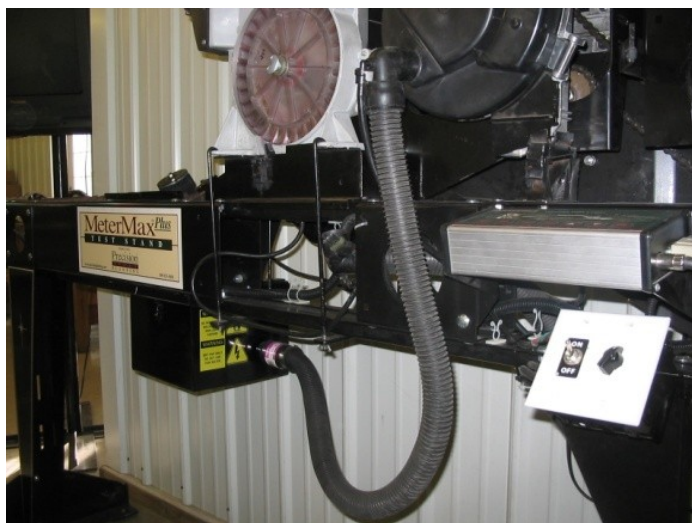

Working from the back side of the stand, line up the right hanger bracket with the right edge of the panel. When properly located, drill two 11/32" holes in the panel to receive the two 5/16" thumb screws. Put the thumb screws through the vac brackets and through the new holes in the test stand plate. Secure the nuts to these bolts by reaching behind the plate. Tighten securely.



The 3.5" x 3.5" plate with one hole in it bolts to the right bolt of the seed chute. Peel the film off the Velcro and attach to the back side of the switch box. This will place the switch and rheostat just below the autopilot.



Run the electric cords as best suited to keep them away from any moving parts. Plug the vac cord into the top left outlet at the end of the stand. This outlet is activated by the stand's on/off switch.



The 48" long vac hose attaches to the vac unit box and runs directly into the individual vac meters. The rheostat knob regulates the vac pressure you will require.



Questions? Check the website: www.precisionplanting.com or call us at 309-925-5050.

Precision
PLANTING