


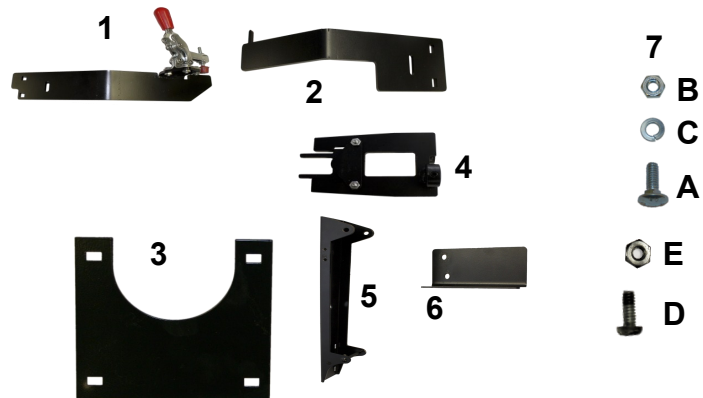


MeterMax® vSet Mount

Parts List

1. Meter Support Arm A
2. Meter Support Arm B
3. Computer Mounting Bracket
4. Butterfly Drive Extension
5. Seed Tube Bracket
6. Offset Seed Tube Mount
7. Hardware
 - A. 1/4 x 3/4 Bolt (2)
 - B. 1/4 Nut (2)
 - C. 1/4 Washer (2)
 - D. 10-24 x 5/8 bolt (2)
 - E. 10-24 Nut (2)



Step 1 Before mounting the offset mount, first remove the computer, arm brackets and sensor from your test stand.

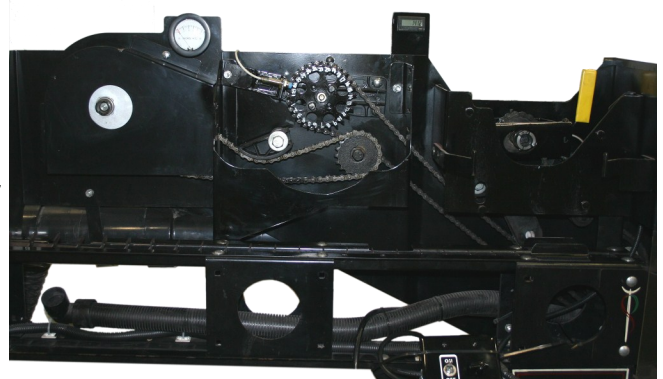

Step 2 Next, prepare the computer to be reinstalled onto the test stand.

Original Position




New Position



Swap the computer brackets to the other side making the mount arms point inward rather than outward. (As shown above)


Step 3 Then attach the computer mounting bracket (Part 4) to the back of the arms. (As shown below)

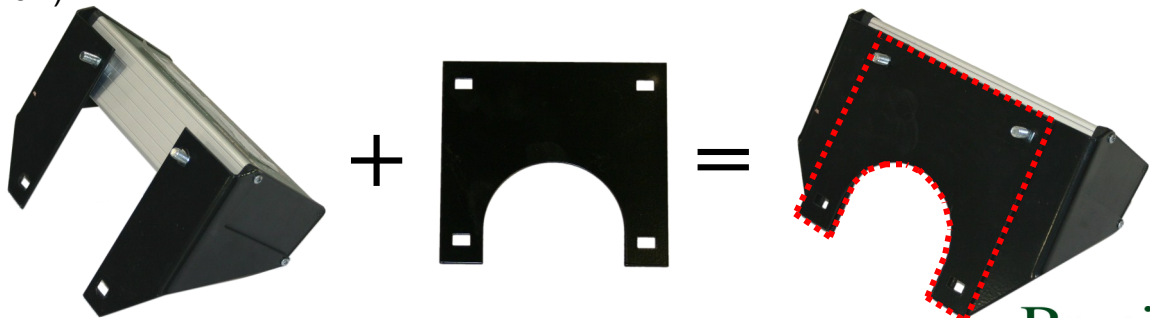


Questions? Check the website: www.precisionplanting.com or call us at 309-925-5050.

Precision
PLANTING

- Step 4** Mount the computer back onto the test stand. (As shown to the right)
Note how the computer has shifted to the right to make room for the sensor mount.

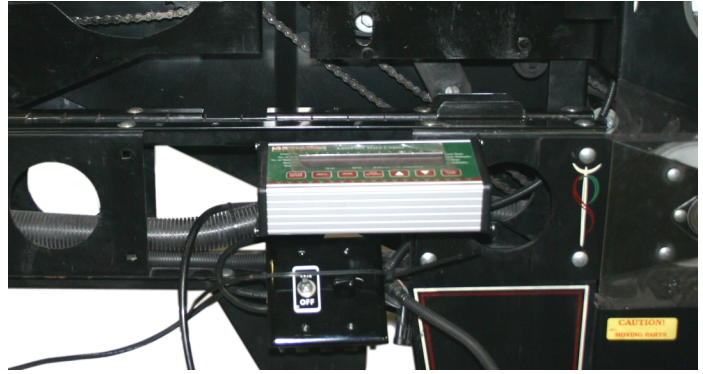


- Step 5** Next mount Meter Support Arm A & B.

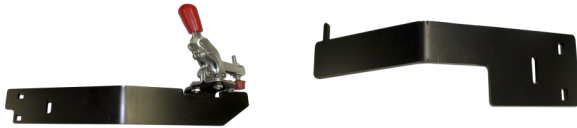


(As shown to the right)
Note: Adjust the arms to line up with the butterfly extension.

- Step 6** Also install the butterfly drive extension. (As shown to the right)
Note: When installing the butterfly drive extension be sure that the ends are flush by pushing it tight against the sprocket, then use an allen wrench to secure in place.

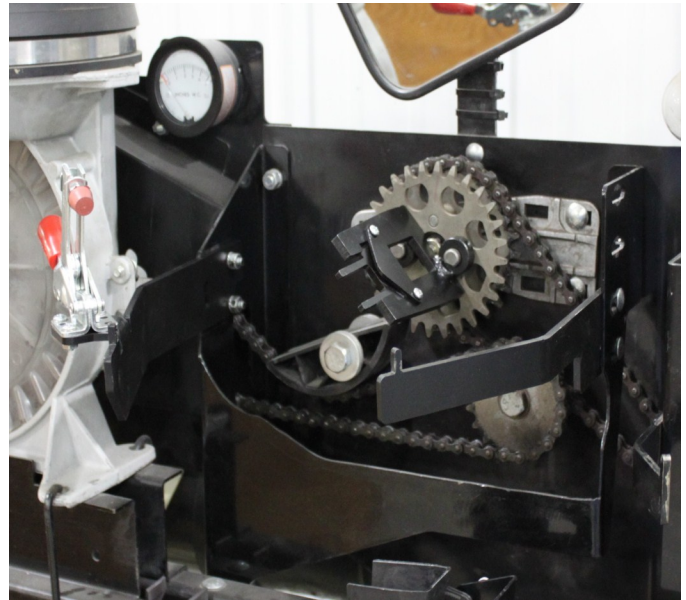


- Step 7** Once you have the arms attached level them up and Set a meter on them and lock the meter down. You want to make sure that the drive of the meter is all in line and not binding because it is off center. The meter should run nice and smooth.

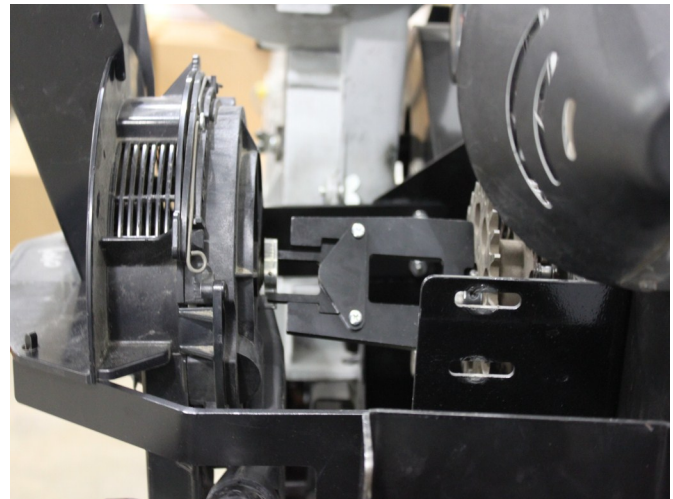

Questions? Check the website: www.precisionplanting.com or call us at 309-925-5050.

Step 8

When mounting the seed tube bracket Bolt the seed tube bracket and the offset see tube mount together first. Then bolt the whole assembly onto the Meter Max Plus. Leave it lose.

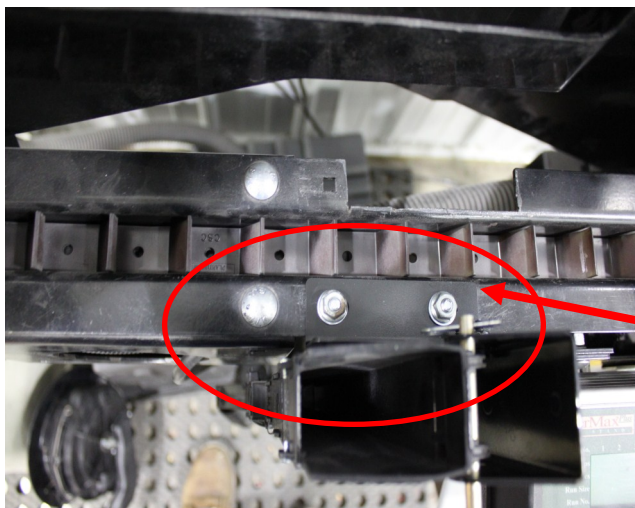**Step 9**

Once you have the meter and the seed tube line up tighten the seed tube.

Step 10

Hook up the vacuum and change the setting in the display to match the vSet. Then make a test run to make sure that everything is lined up and working properly.



Questions? Check the website: www.precisionplanting.com or call us at 309-925-5050.