




Monosem NG Plus M Push Button Lift Switch Installation

Precision Planting®

Monosem NG Plus M Push Button Lift Switch Install


These instructions are for lift switch kit 712500.

Install the lift switch (1) onto the lift switch bracket (2) as shown.

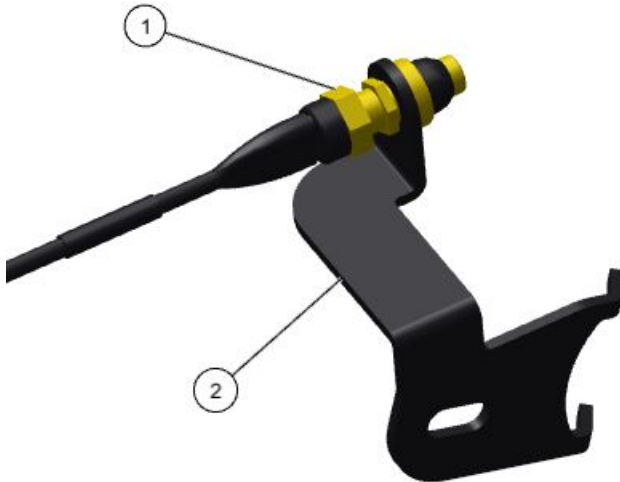


Position the lift switch and bracket on the outside of the upper, left side parallel arm (when standing behind the row unit) as shown.

Note: This is the same location with the OEM parallel arm or DeltaForce parallel arm.

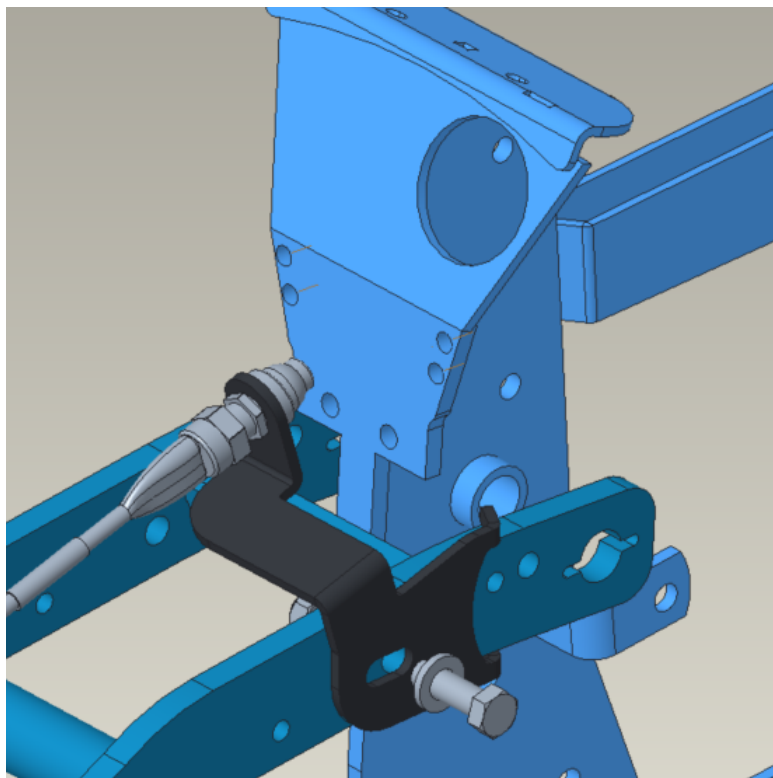

Place the M12 washer (1) onto the M12X1.75 X 40 bolt (2) and insert the bolt through the bracket and parallel arm. Loosely secure with the M12 top lock nut (3).

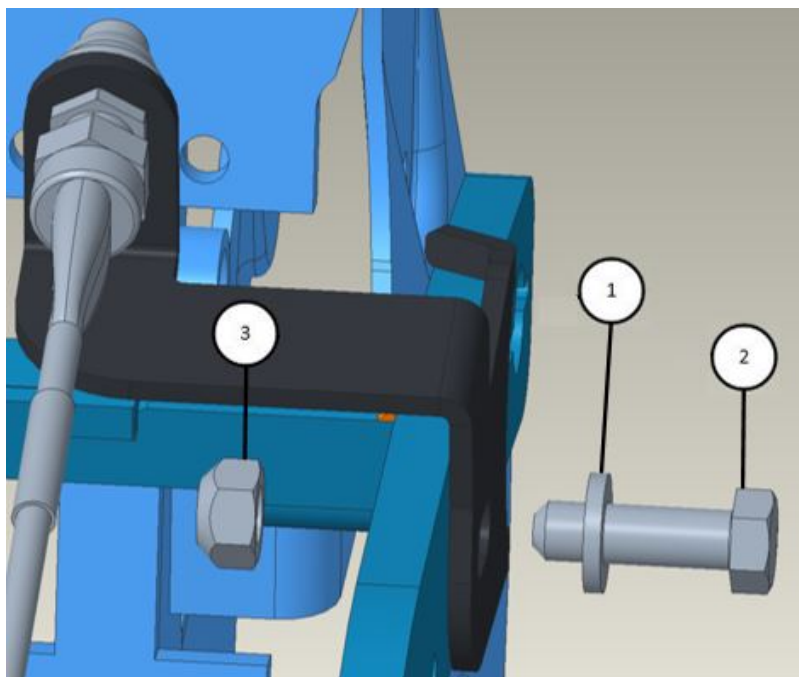

Adjust the bracket position so the switch contacts the row unit and is depressed when the planter is lifted. Tighten the nut. The lift switch position, in the bracket, may also be adjusted as needed.