




Monosem NX M Push Button Lift Switch Installation

Precision Planting®

Monosem NX M Push Button Lift Switch Installation

These instructions are for lift switch kit 712505.


Install the lift switch (1) onto the lift switch bracket (2) as shown.

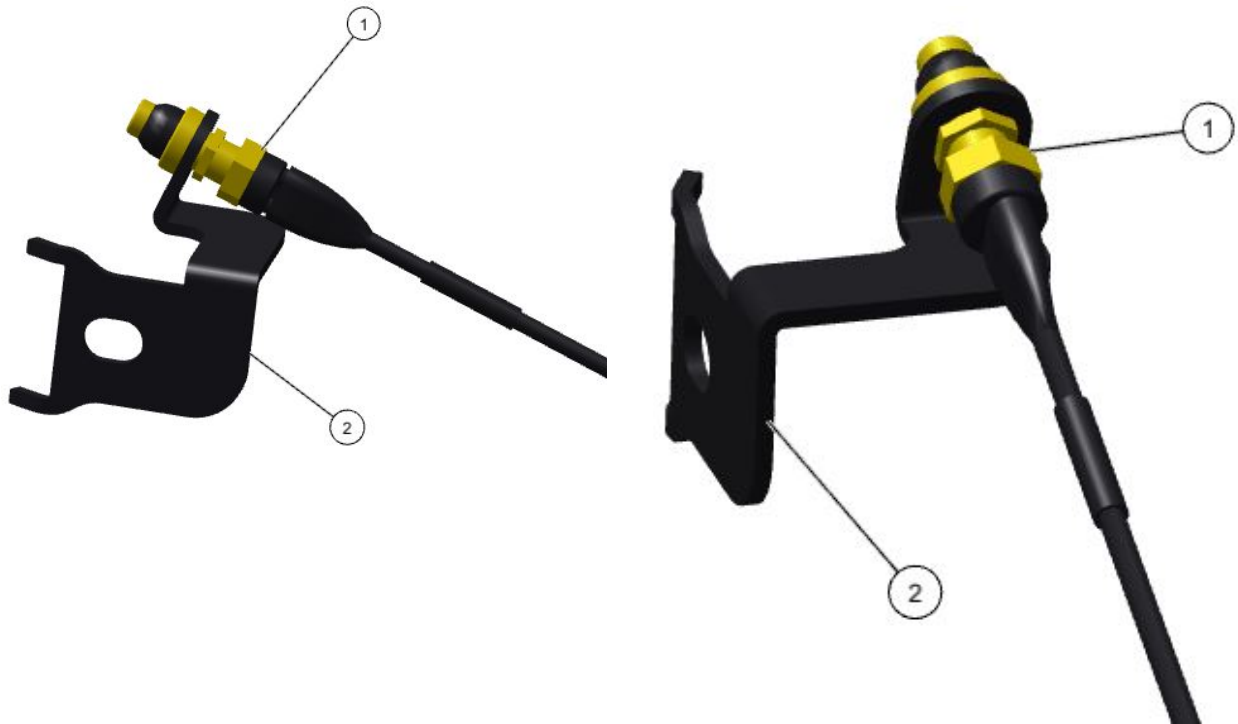

Position the lift switch and bracket on the outside of the lower, right side parallel arm as shown.



Align the bracket with the hole in the parallel arm. Place the M16 washer (1) onto the M16X2 X 45 bolt (2) and insert the bolt through the bracket and parallel arm. Secure with the M16 top lock nut (not shown).

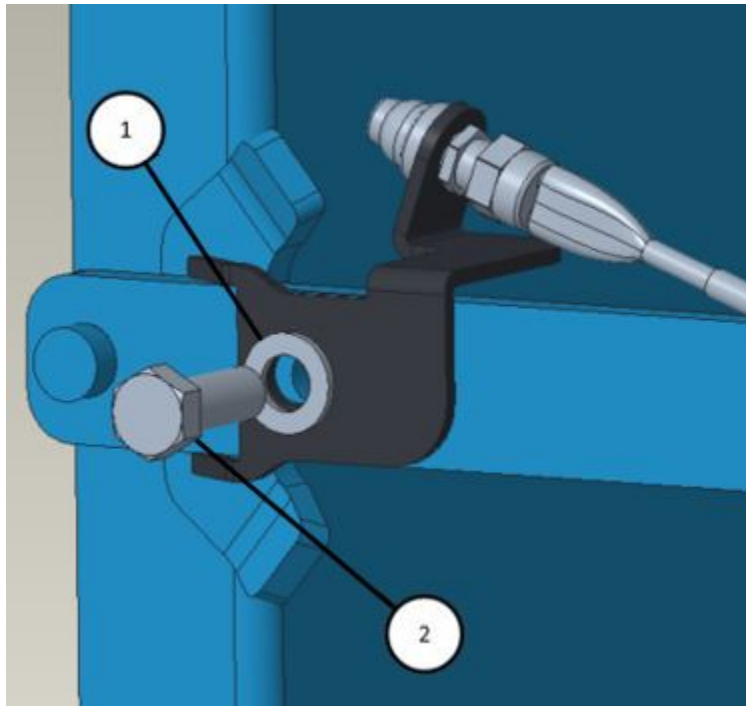

Adjust the lift switch position in the bracket so the switch contacts the row unit and is depressed when the planter is lifted.