

mSet™

mSet Single Inlet Install 736094



Note: The hopper mounts provided in this kit are only compatible with SpeedTube. In order to use a standard seed tube, different mounts will be needed to move the meter position forward.

Parts List

Part Number	Description	Quantity
731298	Fill Tube	1
736099	Snorkel	1
The Hardware Kit Contains the Following Parts (731383)		
38609	Hex Cap Screw	4
731382	Jam Nut	4


Step 1:

Place the template (736098) on the front of the 1.6bu box. Slide the template all the way up into the lip of the box. Note: In this single hole install you will only be using the left side of the template.

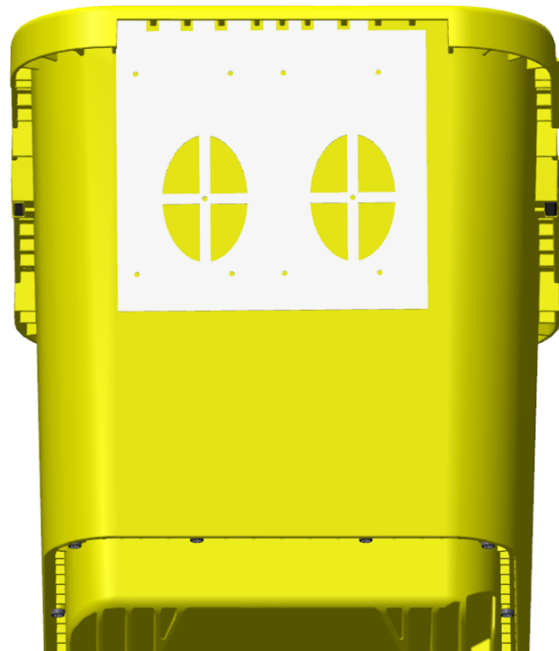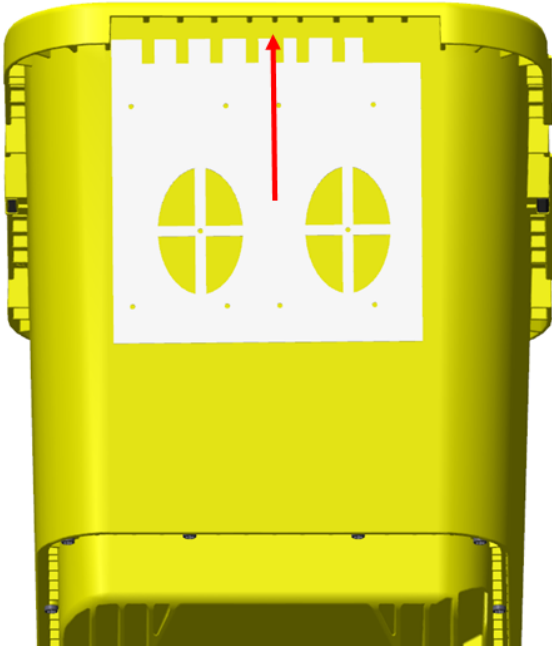


Step 2:

Drill out the 5 holes on the right side of the template as shown in figure 2.

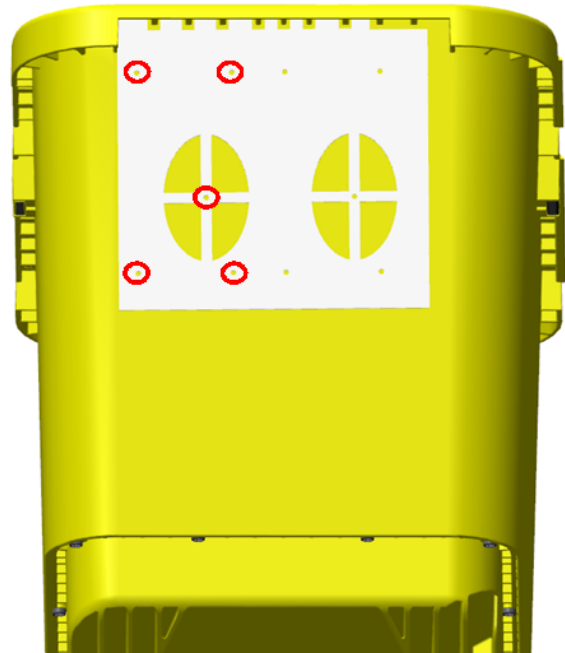
**Step 3:**

Trace around the left oval in the template. Then remove the template and use a 3/8" drill bit to drill out the four outer holes you drilled with an 1/8" drill bit in step 2.

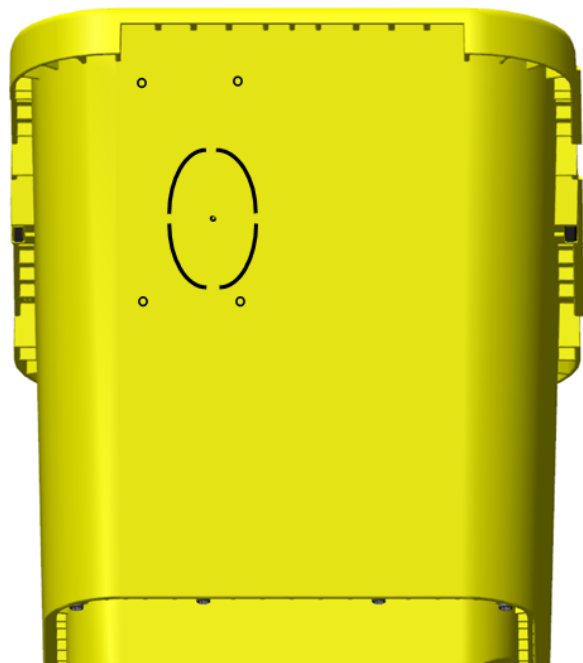


Step 4:

Use a 2" hole saw to cut out the center of the oval.
Use the center 1/8" hole as a pilot for the hole saw.
Note: If you do not have a 2" hole saw you can use a jig saw to remove the oval.

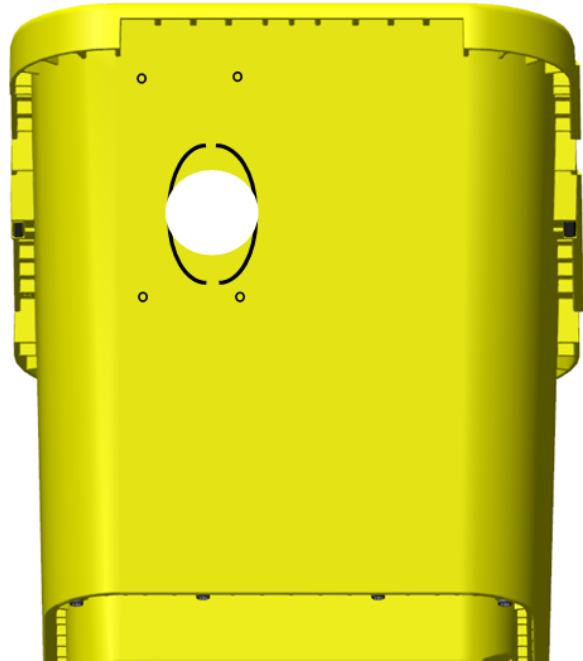**Step 5:**

With the 2" hole removed, use a jigsaw to finish cutting the oval out. Once the oval is removed, use a knife or file to clean off any shavings still left on the hole.

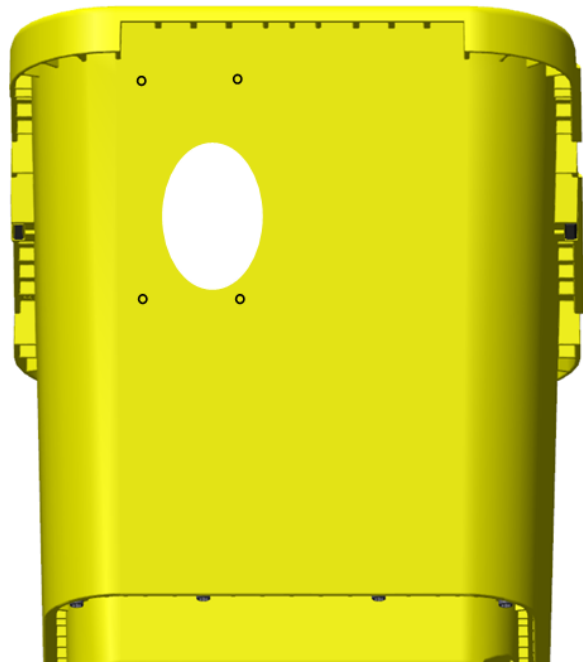

Step 6:

Insert the inlet into the opening and fasten with provided four (4) nuts and four (4) bolts. Use a 13mm wrench to tighten. Now insert the snorkel into the inlet on the inside of the hopper. Do not kink the snorkel.

