

vSet®

vSet Snorkel Kit

Precision Planting®


vSet Snorkel Kit



730367	(Qty 1) Vent, vSet Std.
0143479	(Qty. 4) #6– 19x3/8 Phillips pan head hi-low Screw (3 for installation, 1 extra)

The 730385 vSet Snorkel Kit is designed to prevent the vSet meter from becoming plugged with debris in no-till conditions. It is recommended for all vSet meters in no-till conditions.

Assembly Instruction: Attach the vent to the vSet Meter Housing using three screws as shown.

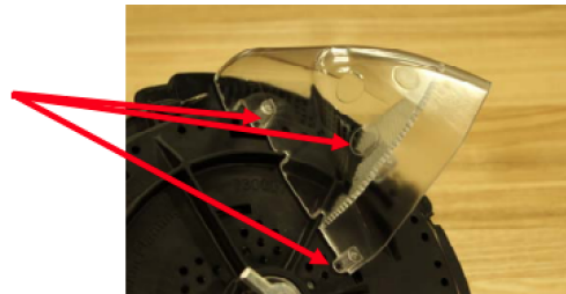

Compatibility Notes:

- This vent will not work with 2011 or 2012 versions of the seed cover assembly (730035), with modified Kinze 3000 hoppers, or on systems with a combination of PP hopper, vDrive and mechanical housing assembly (730030) built prior to 2014 production season.
- Some disassembly of the meter will be required for installation of the vent on systems with the combination of PP hopper, vDrive, mechanical housing assembly (730030) built prior to 2014 production season, and exit chute cover 730334 revision 02 and older.