

FurrowForce[®]


Sola Prosem adapter (756330) Installation Guide




1- Remove the OEM closing system:




2- Put the carriage bolt in the square hole of the bent bracket (wait for the bushing and bolt):

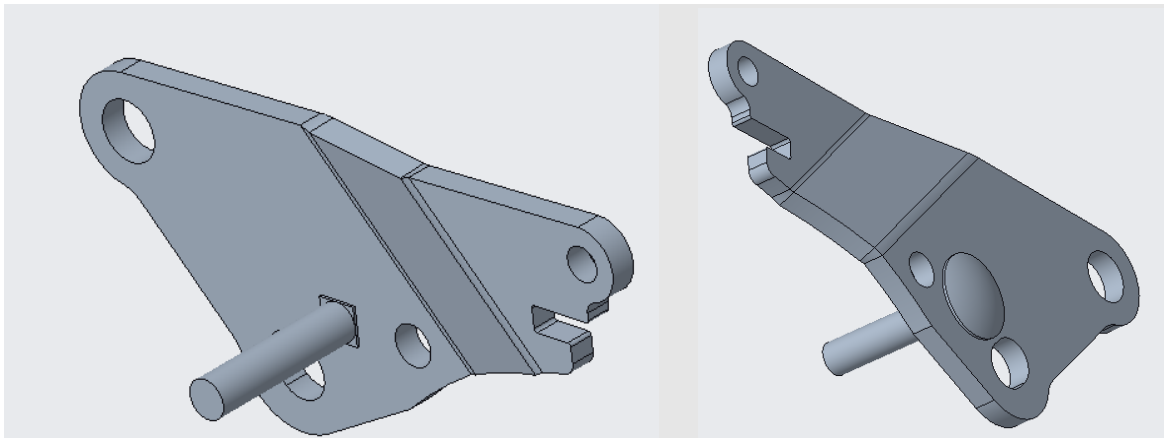


3- Install both bent plates using M18 bolt:

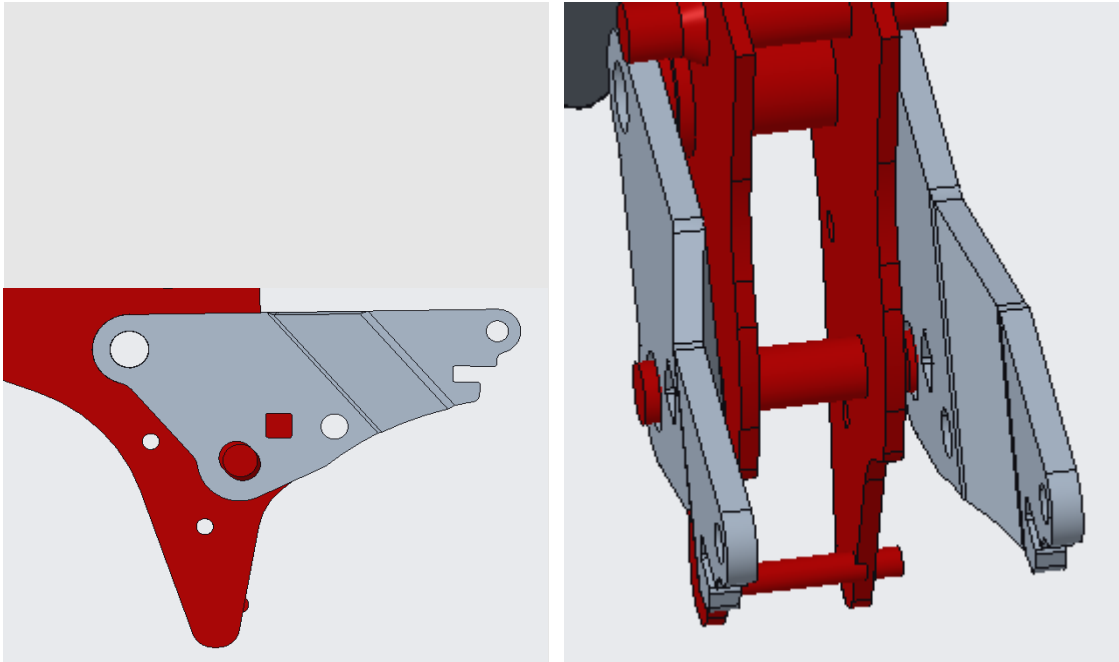

4- Add the cross tube between the two bent brackets and tighten it with the M12x90 bolt:

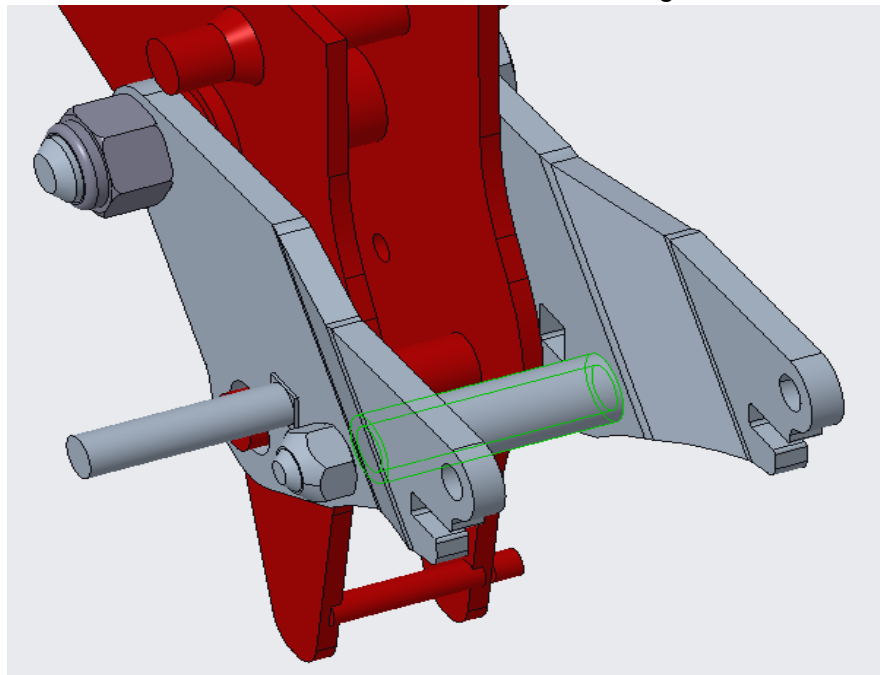

5- On each side, add 4x M12 washers, the bushing and tighten with the M12 nut:

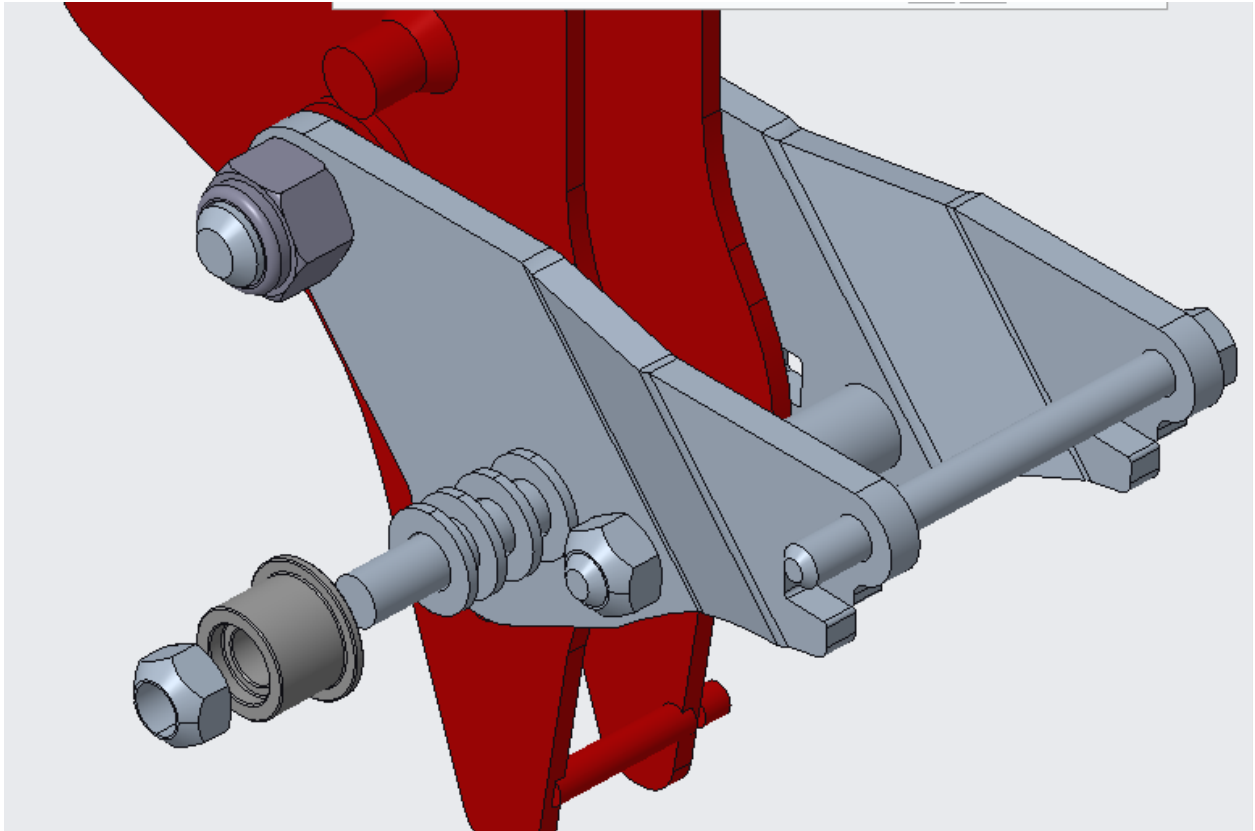

- 6- Assemble the FurrowForce with the M10 bolt and make sure to tighten it correctly into the adapter bracket. Use M10 washer in between if needed:

