


Quick Attach (150620) Sola Installation Manual

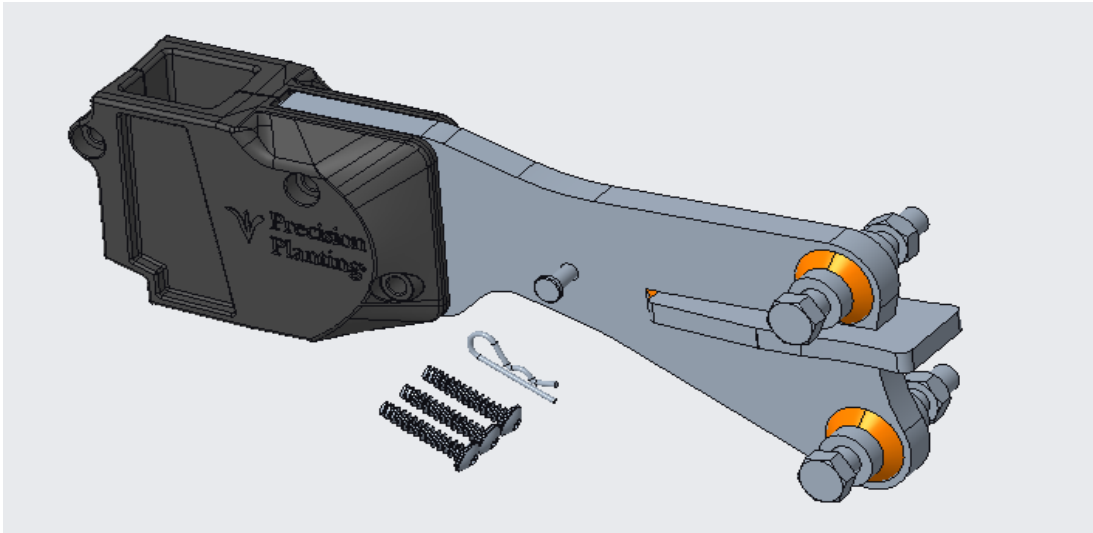


150620 Sola Quick Attach Kit

- 1- Assemble 150714 and 150715 plastic parts on the welded bracket, using the screws:



- 2- Remove the Sola press wheel (if present):

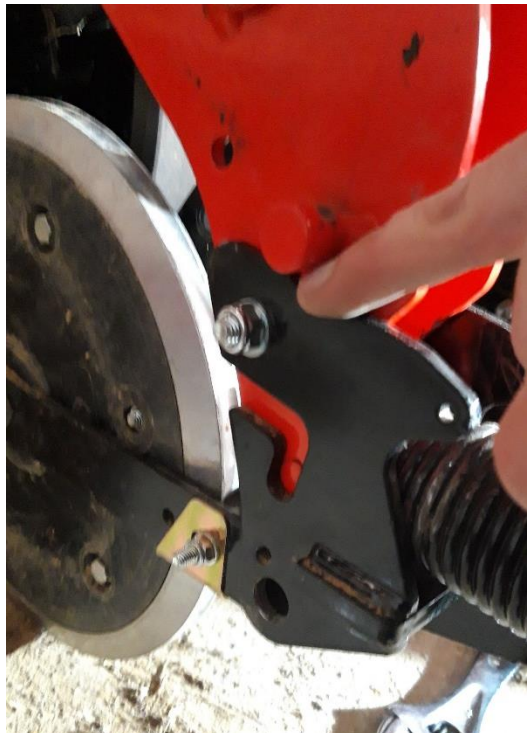

3- Install Quick Attach assembly using the 2x M8 bolts and nuts provided:

