

Tech Bulletin: Case IH DeltaForce Bracket Rework Instructions

July 31, 2014

DeltaForce®

When installing DeltaForce on a Case IH row unit, the stock Case IH lower parallel arm will be installed in place of the stock Case IH upper parallel arm. This will apply to existing DeltaForce systems on Case IH row units as well.

Step 1: Remove the top parallel arms as shown at right in illustration 1.

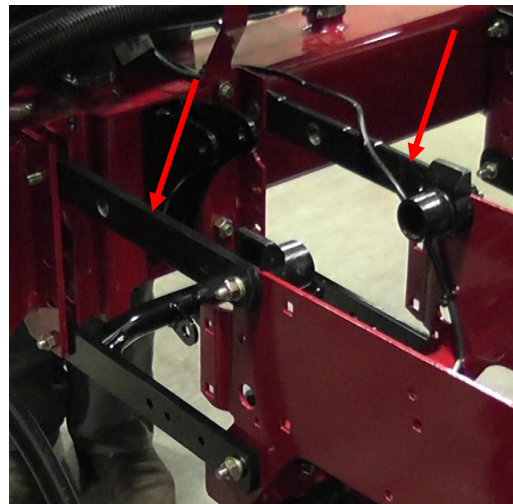


Illustration 1

Step 2: Install the Case IH lower parallel arms that were removed when the DeltaForce bracket was installed. **Ensure that the tabs on the Case IH lower parallel arms are facing down and are closest to the row unit** as shown in illustration 2. Case IH lower parallel arms will be available from Precision Planting if the original Case IH lower parallel arms were discarded.



Illustration 2