

vSet[®] Vacuum Blower Mounting Kit for AGCO

731173

Parts List

- ◆ 726143 7"x7" U-bolts (Qty. 2)
- ◆ 730189 Left Vacuum Blower Bracket (Qty. 1)
- ◆ 730191 Right Vacuum Blower Bracket (Qty. 1)
- ◆ 731187 AGCO Vacuum Adapter Coupler (Qty. 2)
- ◆ 731226 Blower Mount Hardware Kit (Qty. 1)
- ◆ 731273 AGCO Vacuum Adapter (Qty. 2)

The AGCO Blower Mounting Kit (731173) is used on White 8000/9000 series planters when upgrading to vSet. The kit allows the Precision Planting blowers to connect into the vacuum plumbing already on the planter.

Step 1

Remove the AGCO hex shafts, chain drive transmission, and hydraulic lines.



Figure 1

Step 2

Using the Left and Right Vacuum Blower Brackets, mount the blower to the bar with the provided hardware kit and U-bolts. Orient the brackets using the wide configuration for clearance around the mechanical drive system installed on the bar. The brackets will install on the row unit side of the bar.

Attach the blower once the brackets are mounted on the bar.

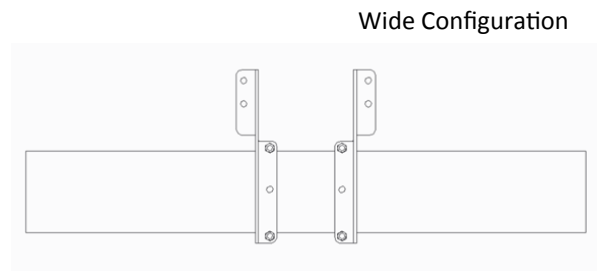


Figure 2

vSet[®] Vacuum Blower Mounting Kit for AGCO

731173

Step 3

Once the blower is installed, use the provided adapters to make the 3" to 4" change into the stock AGCO manifold. The 4" PVC may need to be shortened on some planters. In addition, the AGCO brackets may need to be moved to provide clearance for the Precision Planting vacuum.



Figure 3

Step 4

Install hydraulic lines onto the vacuum motor blower. AGCO blowers do not utilize a case drain line. Install a new line and route back to the tractor. Refer to the Vacuum System Install Guide for 4cc and 6cc Blowers (955202).