




vSet 2 CIH MiniHopper Kit

Note: Pre-Installation

1. Remove existing hopper and rear support.
2. Remove mechanical drive system. (If adding vDrive).
3. Complete Vacuum System Upgrade (row unit hose and add vacuum).

Step 1:

Assemble the Front Hooks and the Rear mount onto the hopper. Use the M8-1.25x16MM bolts and tighten them to touch plus a 1/4 turn to secure.

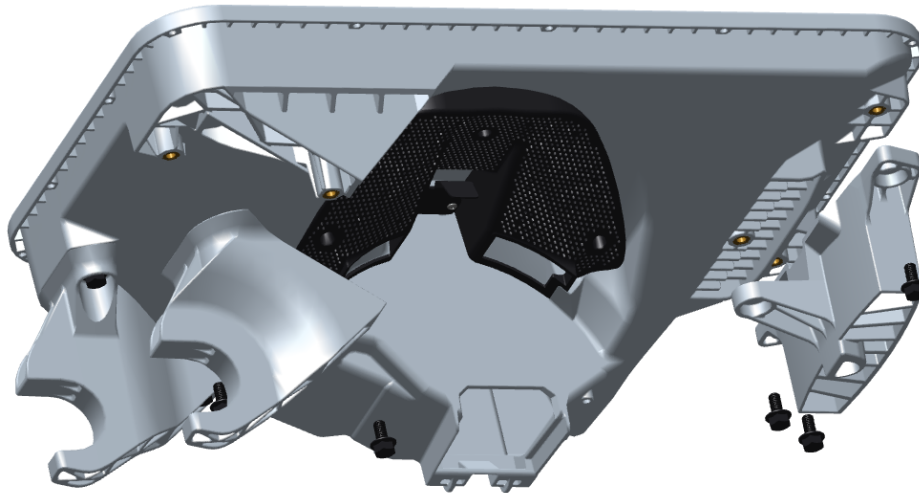


Step 2:


Install the seed delivery inlet in the opening in the top of the hopper. Use the four bolts, eight washers and four nuts to install the inlet. You will use a washer on the top side of the lid and one on the under side of the lid.

**Step 3:**

Install the rubber inlet gasket Vacuum Inlet Elbow on to the meter. Use the six included screws to secure the inlet on the meter. Now the meter can be locked onto the hopper.

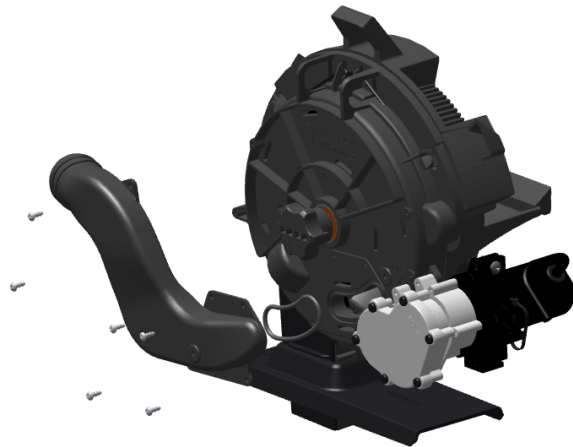
**Step 4:**

Once the inlet is secured to the meter, attach the meter on to the hopper.

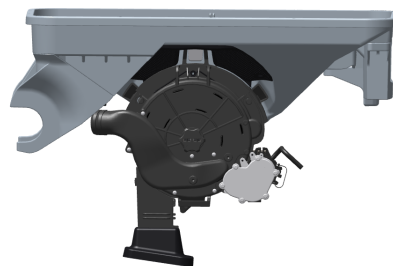

Step 5:

Attach the lid onto the hopper.

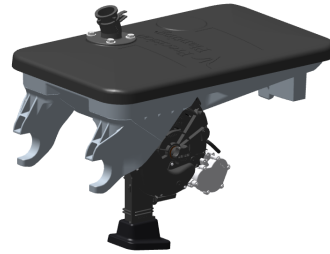**Step 6:**

Hook the front of the hopper on the hopper pucks. Lower the rear of the hopper down so the rear post of the hopper rests on the row unit. Adjust the latch so the hopper is secure in the row unit.

**Step 7:**

Be sure to lower the boot all the way down so it rests on the shank. This will help with sensor performance.



Step 8:

Use the 1" adapter on rows with 1" seed delivery lines to adapt to the inlet on the hopper lid.

