

Parts List

- 1 vSet 2 Dust Guard (768498)
- 1 Drilling Template (957011)

The 768533 vSet 2 Dust Guard Kit should be installed on all vSet 2 meters with SpeedTube to prevent excessive dirt from entering the meter at high speed. It is not necessary to install this guard kit on meters that will use standard seed tube delivery.

Step 1: Clean the meter thoroughly to allow the drilling template sticker to attach to the black plastic. Use compressed air, a cleaning solvent, or soap and water to remove dirt.

Step 2: Prepare the meter by moving the cleanout door as shown at right.



Figure 2

Step 3: Place the sticker template into the area at the bottom of the meter cover. The sides and top of the sticker should touch the ridge of the cover. Press firmly onto the plastic as shown below.

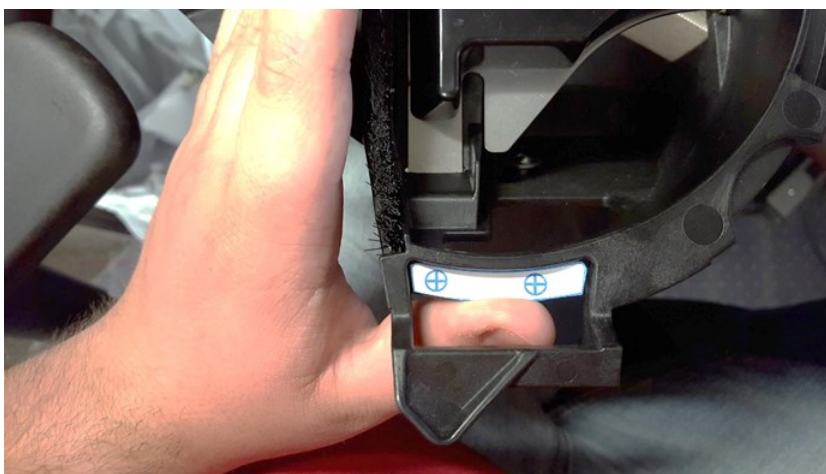


Figure 3

Step 4: Locate the holes that will be drilled by using a center punch to mark the center of both holes in the template. With a 13/64" bit, drill out both holes. De-burr the edges for easier installation.

Step 5: Align the dust guard pegs in the drilled holes in the seed cover. Use a flat head screw driver to gently press the edges into the holes without puncturing or ripping the rubber of the dust guard.



Figure 5

Step 6: Once the entire peg is started, press until the tip is completely through the other side. If the pegs are not fully seated, the dust guard may work loose.



Figure 6

Step 7: Some of the 768498 Dust Guards have been manufactured to include stems to aid in installation. Use the stems to pull the pegs through the holes. These stems have no impact on performance and will need to be removed once installation is complete. Use a side cutter to remove the stems once installation is complete.



Figure 7a: 768498 with stems

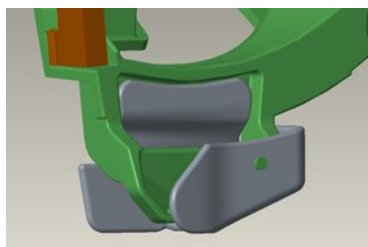


Figure 7b: 768498 secured



Figure 7c: 768498 stems removed