


730030 Modification to adapt for vDrive

You will need to make two modifications to the housing to be compatible with vDrive. This is to keep seed fragments from interfering with the drive system.

1. Cut down $\frac{3}{8}$ th on each side. Then you should be able to take a pair of pliers and break the tab off. Clean all the filings off the cut.

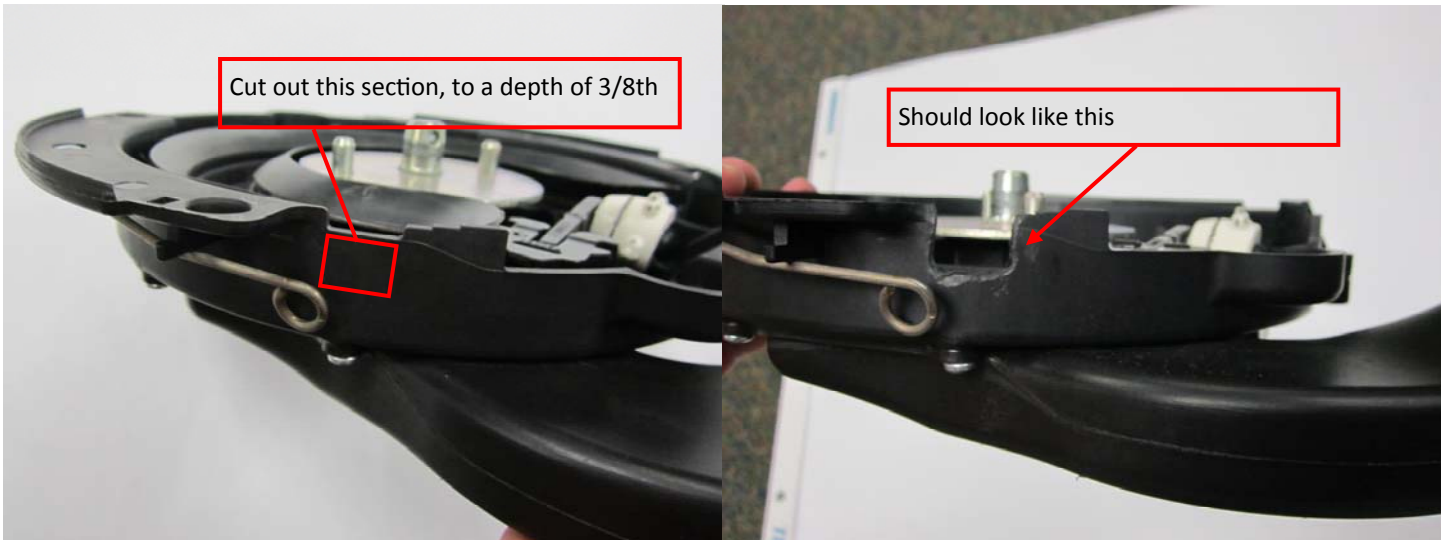

2. You will need to drill a $\frac{1}{4}$ in hole into the side of the housing where the singulator slot. Make sure to clean all the shavings out of the meter housing.



Notice the hole is in the singulator slot.

