


Parts List


- 731144 Kinze Push Row Shield (Qty. 1)
- No Hardware Included

These instructions will cover the modifications necessary to adapt a Kinze push row unit to accept a Precision Planting vSet Select meter including installation of the 731144 Shield.

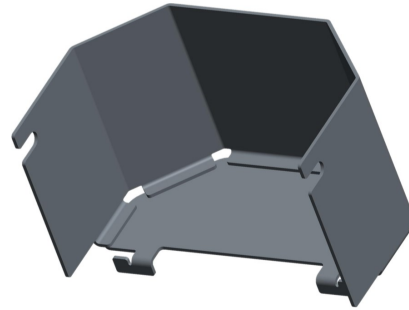

Step 1

Remove and retain the seed hopper mounts. This will require a 15/16" ratchet and wrench.

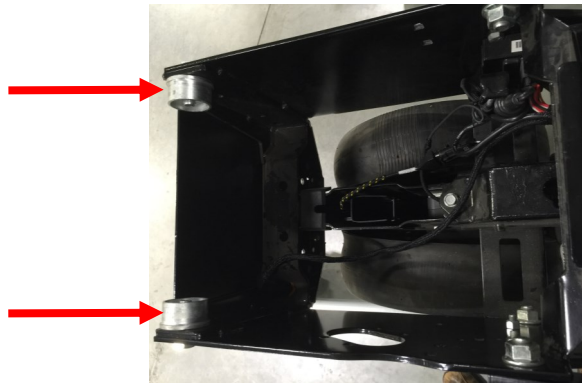


Step 2

Using an angle grinder with a cutting wheel installed remove the four weld points holding the OEM shield in place. Once the front shield has been removed, smooth the surface and remove any remaining weld material.




Step 3

Position the alignment tabs on the bottom of the Kinze Push Row Shield (731144) as shown and slide down into place.

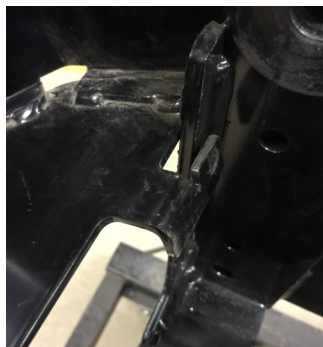

Step 4

Align the Shield into place as shown and secure in place by re-installing the seed hopper mounts.

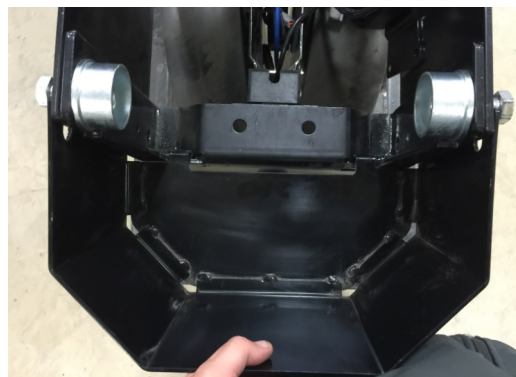

Step 5

Assembly Complete.

