

vSet® Select Single Seed Inlet Install

731379

Parts List

- ♦ 731298 Fill Tube (Qty. 1)
- ♦ 731299 Snorkel (Qty. 1)
- ♦ 731383 Hardware Kit (Qty. 1)

Step 1

Place the template (731402), located in the Blower Control Module Kit (731391), on the front of the 1.6bu box. Slide the template all the way up into the lip of the box. Note: In this single hole install you will only be using the right side of the template.

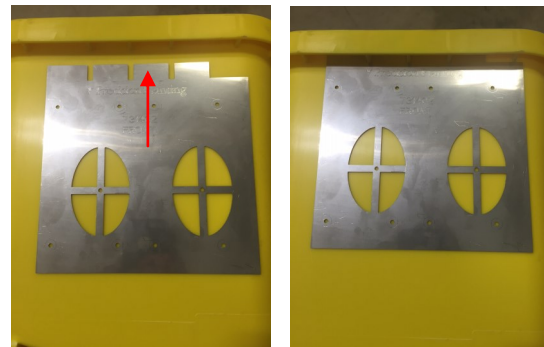


Figure 1

Step 2

Drill out the 5 holes on the right side of the template with a 1/8" drill bit as shown in figure 2.



Figure 2

Step 3

Trace around the right oval in the template. Then remove the template and use a 3/8" drill bit to drill out the four outer holes you drilled with an 1/8" drill bit in step 2.

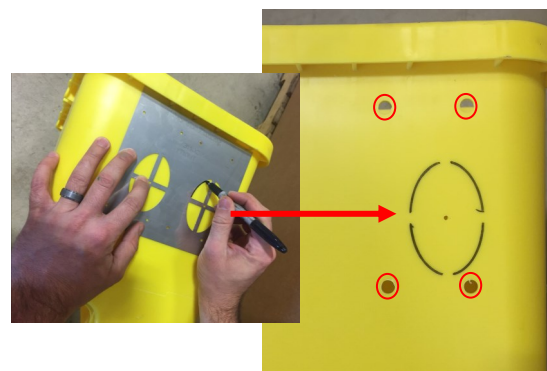


Figure 3

Step 4

Use a 2" hole saw to cut out the center of the oval. Use the center 1/8" hole as a pilot for the hole saw. Note: If you do not have a 2" hole saw you can use a jig saw to remove the oval.



Figure 4

Step 5

With the 2" hole removed, use a jigsaw to finish cutting the oval out. Once the oval is removed, use a knife or file to clean off any shavings still left on the hole.

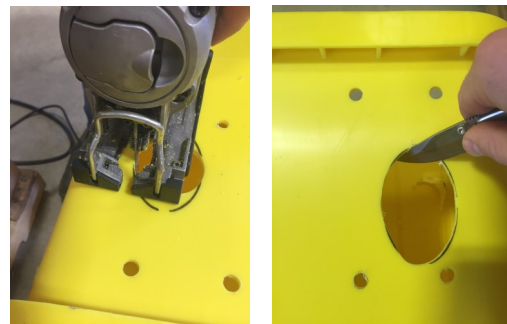


Figure 5

Step 6

Insert the inlet into the opening and fasten with provided four (4) nuts and four (4) bolts. Use a 13mm wrench to tighten. Now insert the snorkel into the inlet on the inside of the hopper. Do not kink the snorkel.



Figure 6a: Inlet installed,
outside view

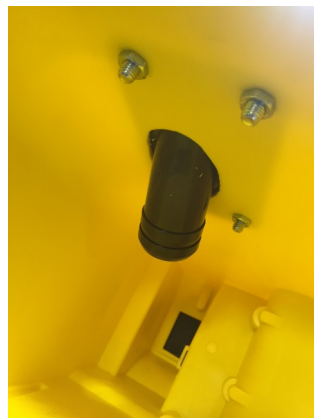


Figure 6b: Inlet installed,
inside view

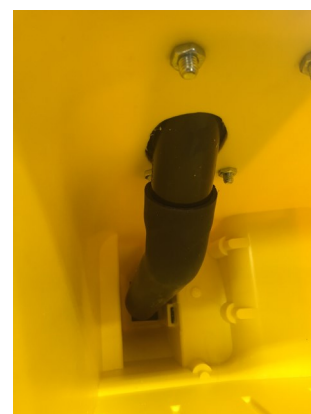


Figure 6c: Snorkel
installed