




vSet 2 Cleanout Chute Retrofit



Note: Removing the meter cover from the row unit will make this install much easier and is strongly recommended.

Step 1: Slowly drill out Rivet with 3/16" (4 mm) drill bit.


Note: We must drill slowly and/or use cutting fluid to avoid overheating and melting the plastic around the rivet.

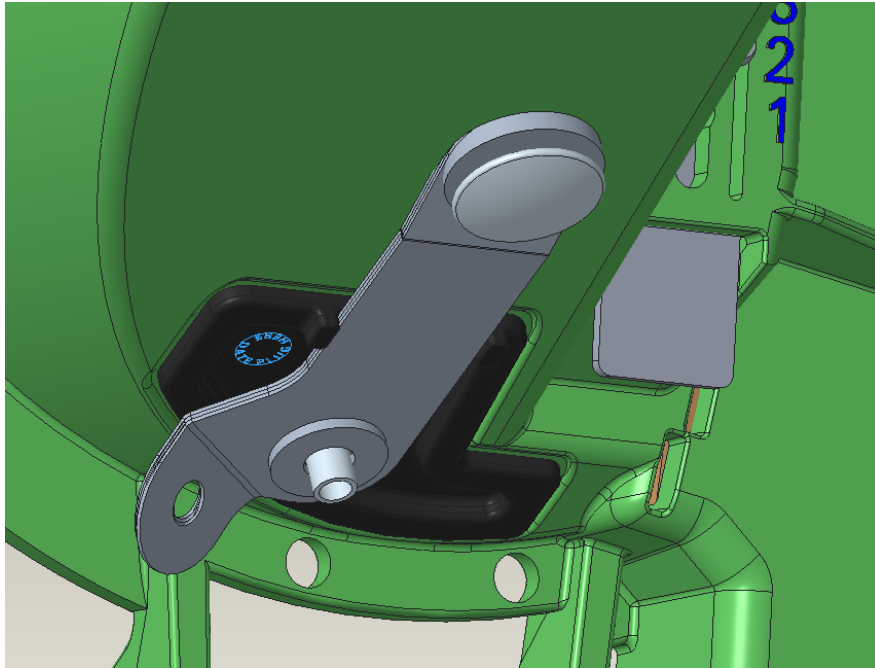


Step 2: If needed, cut end of rivet off with a band saw or file. Remove the rivet and cleanout door assembly

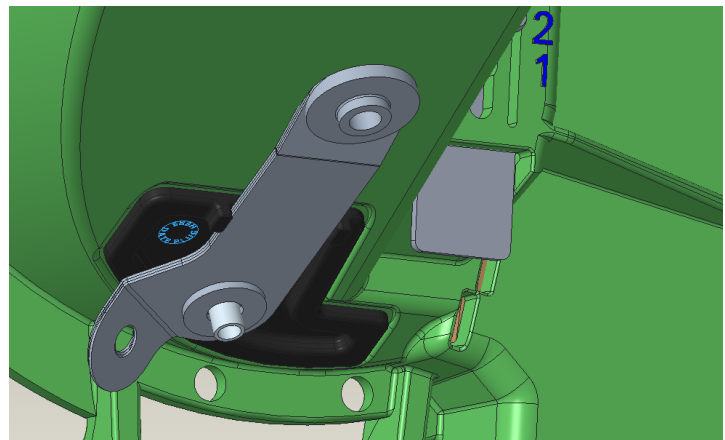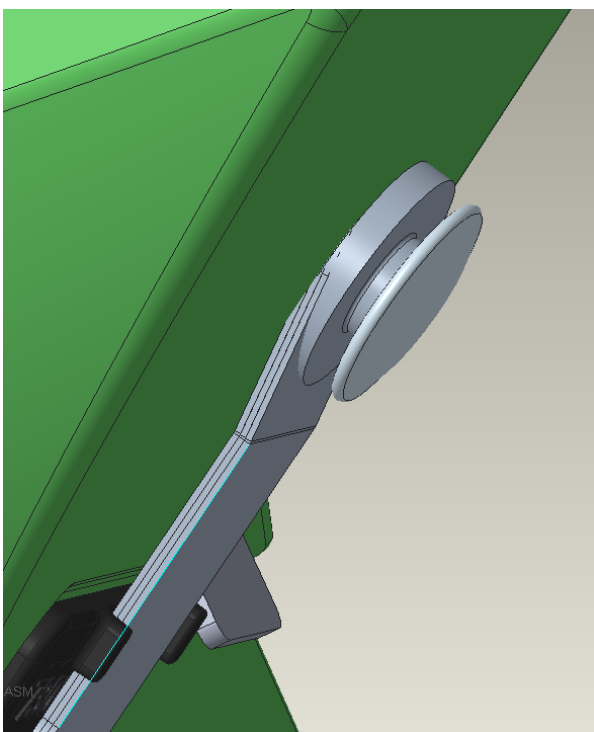


Step 3. Fit the 768828 chute into place

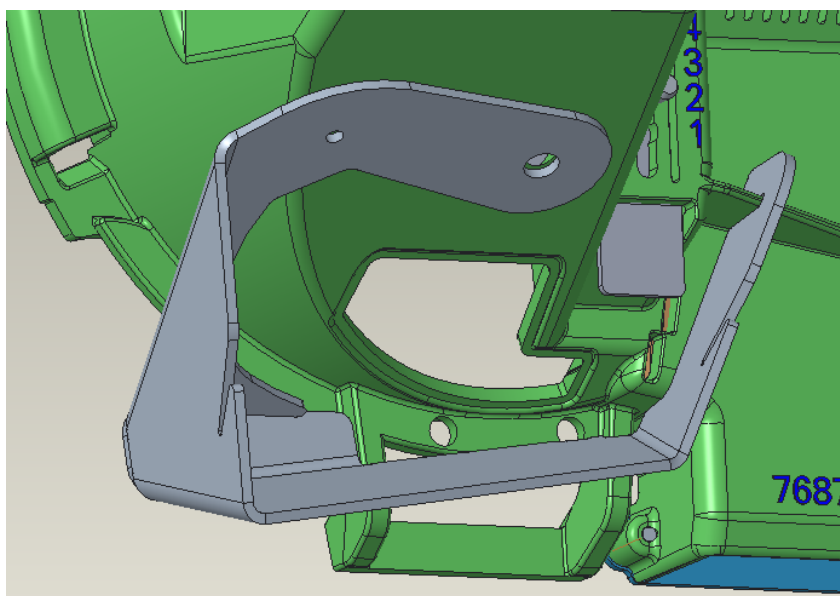

Step 4. Using the hardware kit included, install the cleanout door.

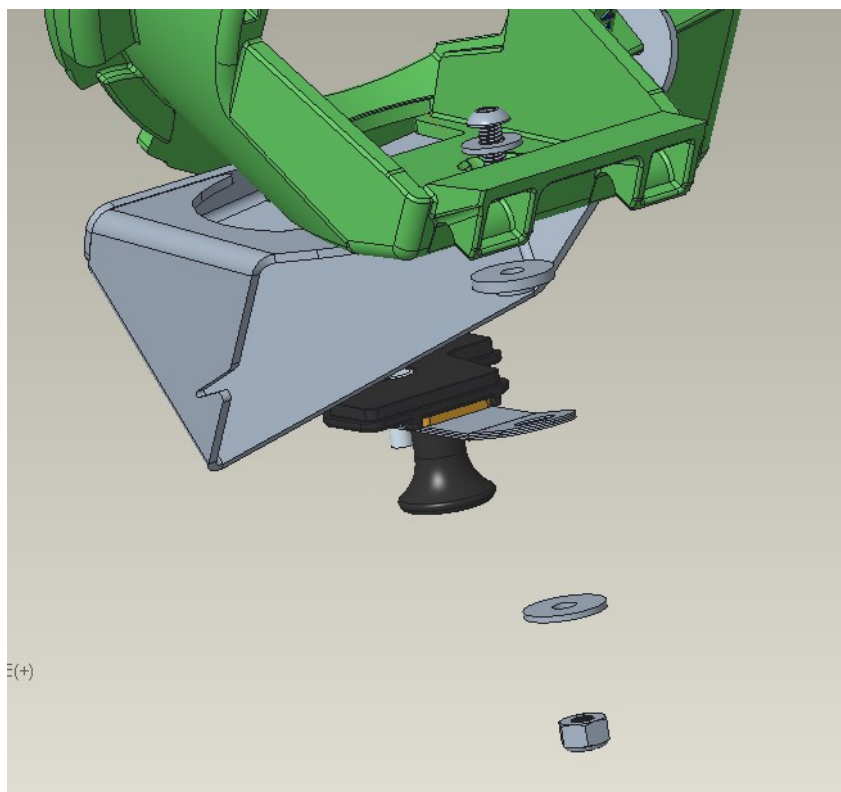

Step 5: Tighten nut and bolt in place. Verify cleanout door moves freely.

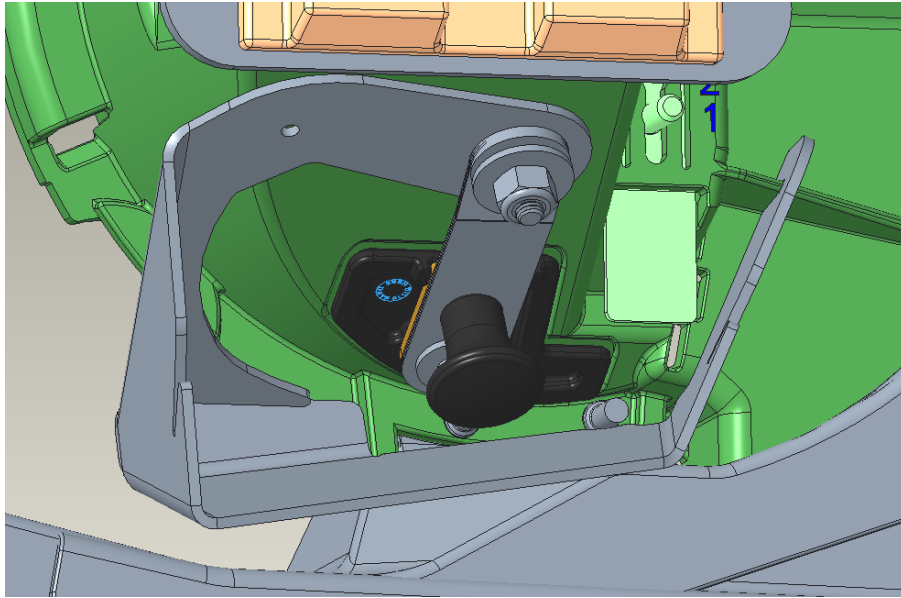

Note: Make sure the boot tabs are cleanly trimmed close to the shank to avoid interference with the cleanout door.

