

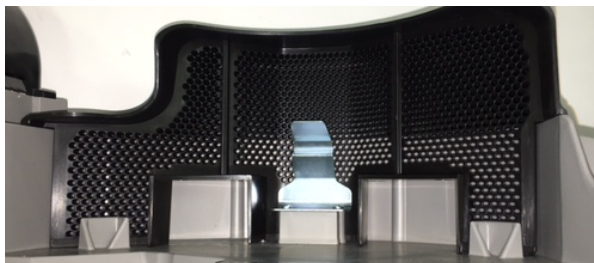
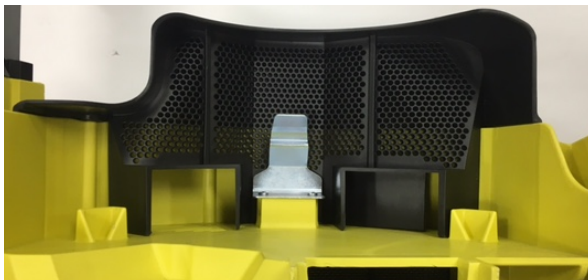
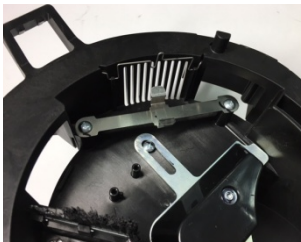
768613 vSet 2 Vent Assembly

This vent assembly allows seed to flow back into the meter they inadvertently work their way into the vent. It also allows for more efficient air movement into the meter. This kit is used to upgrade vSet 2 Mini Hoppers assembled before August 2016 to be compatible with the new vSet 2 Cover Design. This update is only needed where a revision 1 mini hopper is being used with a revision 2 vSet 2 meter cover.

Parts included in this kit:

768574 – vSet Vent Shroud (qty 4)

768575 – Vent Insert (qty 4)

Revision 1 Vent Shroud (<8/16)	Revision 2 Vent Shroud (>8/16)
	
Revision 1 vSet 2 Cover (<8/16)	Revision 2 vSet 2 Cover (>8/16)
	
	

Step 1

Install the 768575 Vent Insert into the 768574 Vent Shroud as shown.



Figure 1

Step 2

Remove the original vent. Install the 768574 Vent Shroud with the insert. Tighten the screws until touch plus ¼ turn. Do not over tighten.

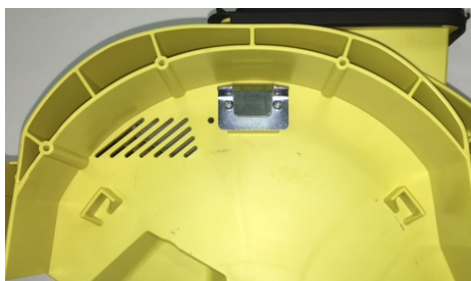


Figure 2a

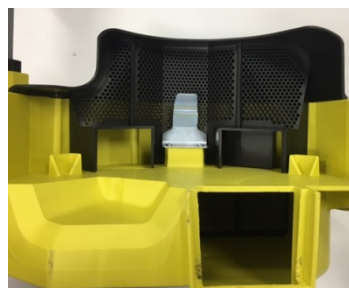


Figure 2b